



(110V version)

IMPORTANT



Be Sure
to Read this
Manual
Before Use



UNIS TECHNOLOGY

Operation Manual

WE ARE HERE TO ASSIST For parts and service



Have Questions? Contact us!

UNIS SERVICE CENTER

Tel: 972-241-4263

Email: service@unispartsandservice.com

www.unispartsandservice.com

When contacting Service, you will need the following information
and the name of your authorized distributor.

| INDOOR MACHINE | |
|---|---------------------------|
| NAME: GvK Smasher 2P GMP | MAX POWER: 650W |
| MODEL: A-521 | MIN POWER: 420W |
| S/N: | FREQUENCY: 50/60Hz |
| VOLTAGE: AC110V~ | DATE: |
| Guangdong UNIS Technology Co.,Ltd. | |

CONTENT

| | |
|--|----|
| IMPORTANT SAFETY INSTRUCTIONS | 3 |
| 1. SPECIFICATIONS | 5 |
| 2. CONTENTS OF THE ACCESSORY KIT | 6 |
| 3. PART NAME | 7 |
| 4. SET UP & INSTALLATION | 8 |
| 5. HOW TO PLAY | 13 |
| 6. GAME OPTION | 15 |
| 7. TROUBLESHOOTING | 20 |
| 8.MAINTENANCE & INSPECTION | 21 |
| 9. OVERALL CONSTRUCTION | 28 |
| 10. WIRING DIAGRAM | 56 |

Thank you for purchasing GvK Smasher 2P GMP. We hope you enjoy the product.

This manual contains valuable information about how to operate and maintain your game machine properly and safely. It is intended for the owner and/or personnel in charge of product operation. Carefully read and understand the instructions.

If you need any help during installation and setup please utilize this manual and troubleshooting guide. If the product fails to function properly, *non-technical personnel should under no circumstance attempt to service the machine*. Contact your distributor or manufacturer for help.

Before use, please read **IMPORTANT SAFETY INSTRUCTIONS**.

IMPORTANT SAFETY INSTRUCTIONS

To ensure the safe usage of this product, carefully read and understand these instructions before operating your game.

Save these instructions for future reference.

Use this product only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury. Unplug the game from the outlet when not in use, when moving from one location to another, and before cleaning/servicing.

Explanations which require special attention are indicated by signs of warning. Depending on the potential hazardous degree, the terms: **NOTE**, **NOTICE**, and **WARNING** are used.

NOTE: A NOTE indicates useful hints or information about product usage.

NOTICE: A NOTICE indicates potential damage to product and how to avoid the problem.

WARNING: A WARNING indicates a potential for product damage or serious personal injury.

It is important to understand the meaning of the following HAZARD SIGNS before continuing:

High Voltage and Shock Hazard:

High voltage can cause electric shock.
Turn off/unplug power before servicing.



High Temperature Hazard:

This part may cause scalding.
Do not touch. Surface may be hot.



No Touching Hazard:

This part may be hot or can cause electric shock.
Do not touch.



Use the following safety guidelines to help ensure your own personal safety and to help protect your equipment and surrounding environment from potential damage.

⚠ This product is an indoor game machine. Do not install outdoors.

Avoid installing in the following places to prevent fire, electric shock, injury and/or machine malfunctioning:

- Places subject to rain/moisture, or places subject to high humidity.
- Places subject to direct sunlight, or places subject to extremely hot or cold temperatures to ensure that it is used within the specified operating range.
- Places where inflammable gas may be present or in the vicinity of highly inflammable/volatile chemicals or items that can easily catch fire.
- On unstable or sloped surfaces. The machine may topple or cause unforeseen accidents.
- Vicinity of fire exits, fire extinguishers etc that may block/prevent safety measures.

IMPORTANT NOTE:

ALL REPAIRS MUST BE DONE TO ORIGINAL MANUFACTURER SPECIFICATIONS. FAILURE TO DO SO VOID ALL WARRANTIES AND OPERATOR ASSUMES ALL RISKS.

Note: The contents of this manual may be updated without notice.

1. SPECIFICATIONS

Rated power supply: AC110V 50/60Hz;

Min. Power consumption: 420W

Max. Power consumption: 650W

Dimension: H109.23×W64.58×D37.48 in


H2774.50×W1640.40 ×D952 mm

Weight: Approximately 585.32 lb/265.5 KG

Model No: A-521

Part No.: G131

! **NOTICE** : After turning off the game, please wait at least 1 minute before restarting again.

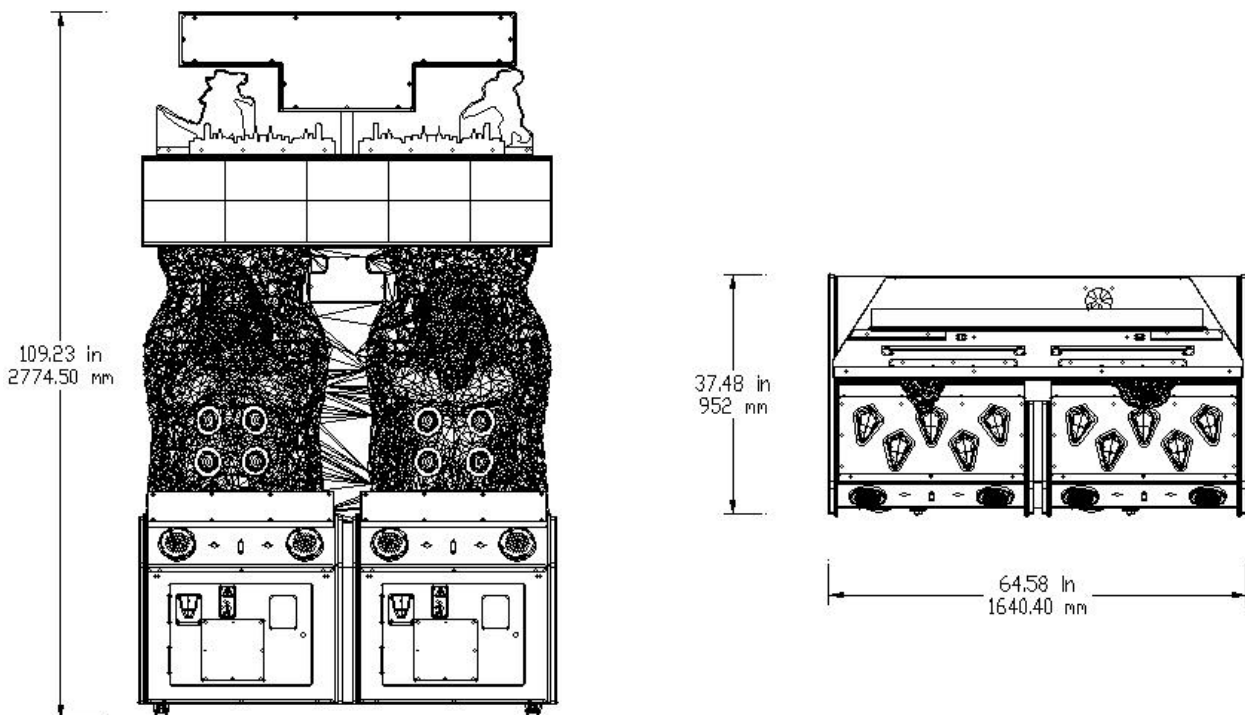







Note: Game specifications are subject to change without notice.

2. CONTENTS OF THE ACCESSORY KIT

Open the package and make sure all the items are included:


Following accessories

| No. | Part No. | Code No. | Name/SPEC | Picture | Qty |
|-----|--------------|----------------|-----------------------------------|---|-----|
| 1 | G131-0606-00 | 2.66.03.030629 | Coin blanking plate | / | 2 |
| 2 | G131-0607-00 | 2.66.03.030630 | Ticket blanking plate | / | 2 |
| 3 | G131-0608-00 | 2.19.01.000030 | Fuse(T10A) Φ5×20mm T10A 125VAC |  | 1 |
| 4 | G131-0609-00 | 2.19.01.000012 | Fuse(T5A) Φ5×20mm T5A/250VAC |  | 2 |
| 5 | G131-0602-00 | 2.33.01.010020 | Power cord 3×16AWG 1.8M |  | 1 |
| 6 | G131-0603-00 | 4.14.40000717 | Manual |  | 1 |
| 7 | G131-0604-00 | 2.53.00171002 | 171A key |  | 2 |
| 8 | G131-0605-00 | 2.53.00172002 | 171B key |  | 2 |

NOTE: Part models are subject to change without notice.

3. PART NAME

Key Components

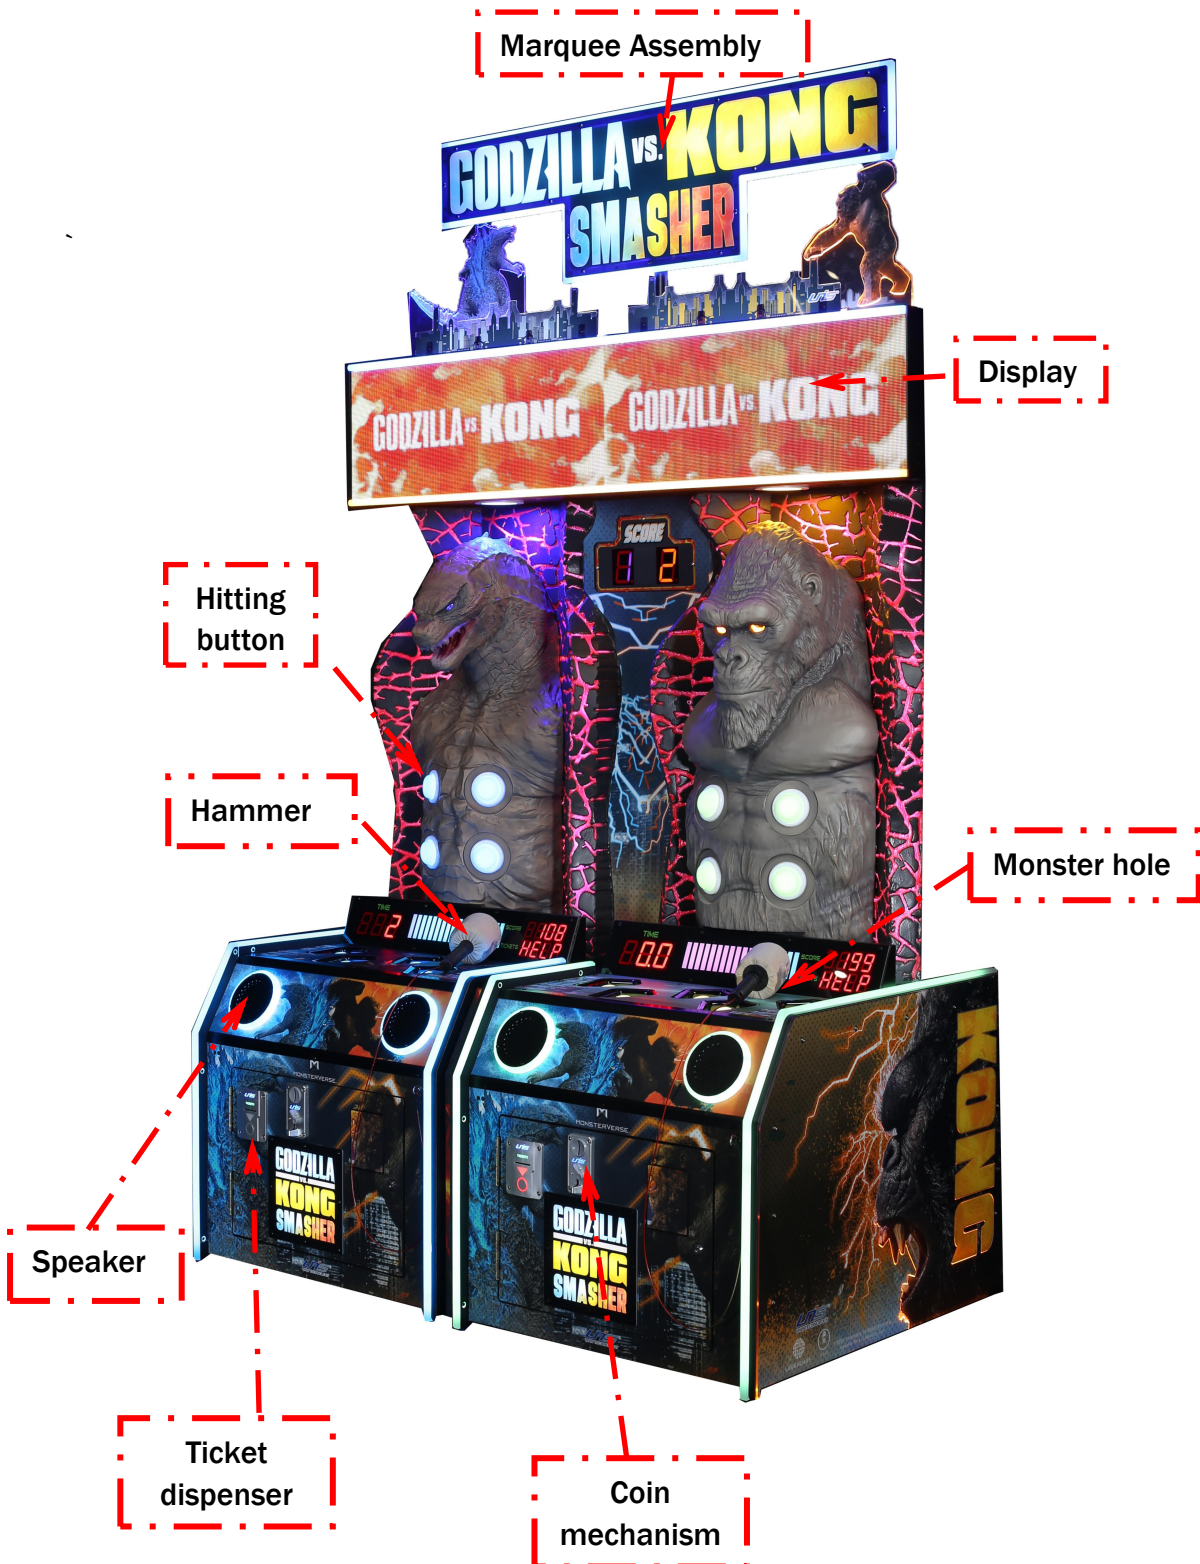

4. SET UP & INSTALLATION

! NOTICE


We do not recommend using power tools as they may cause damage.

! **This product is an indoor game machine. Do not install outdoors.**

- Refer to IMPORTANT SAFETY INSTRUCTIONS (Pg. 3) for places to avoid.
- Place the unit on a dry level surface.
- Ventilation openings in the back of the unit must not be obstructed by objects or by wall.

4.1 Transporting the Game

If you need to move the game, adjust the levelers back to an “up” position.

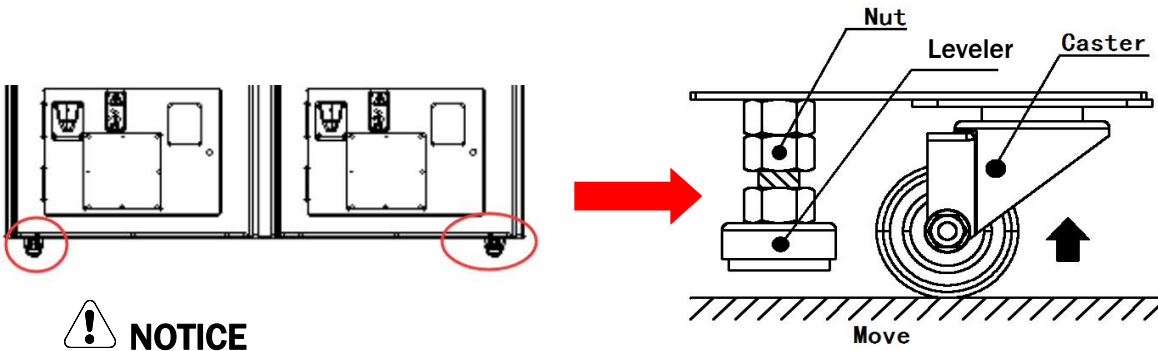


! NOTICE

- Be careful not to damage the machine during transport.
- Always unplug the game before moving.
- Keep the machine in upright position during transport.
- For longer distance transport, package the game properly to prevent damages.

4.2 Level Adjustment

Install this game on a flat surface. If the game is installed on an unsuitable floor, it could cause game malfunction.

To secure the game, loosen the nut, utilize wrench to adjust the leveler down until it touches the floor, lifting the casters off the ground by 0.2 in/5mm. Repeat the same for all levelers.

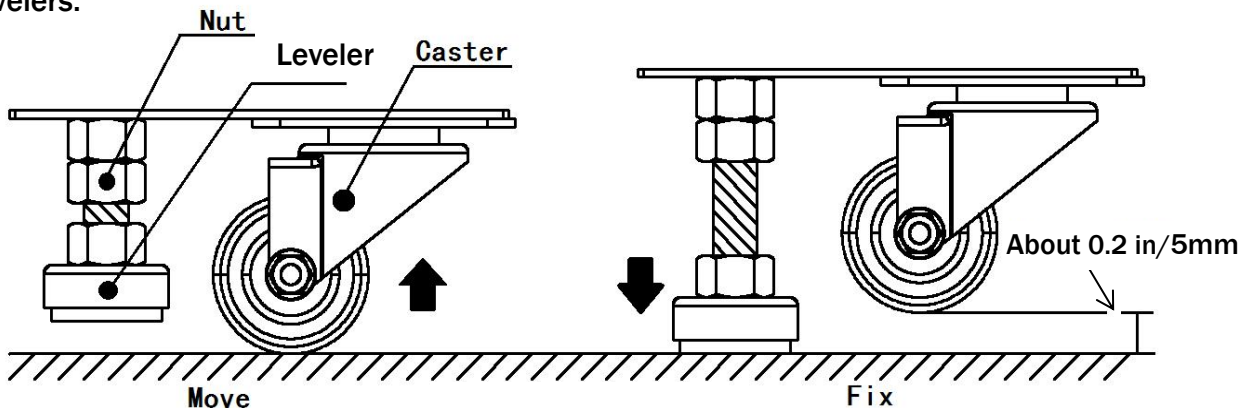

! NOTICE


Make sure the machine is level.

4.3 Play Zone

This machine requires space for playing and for maintenance as shown below.

Leave space around the game upon installation:

Play area: 20 in

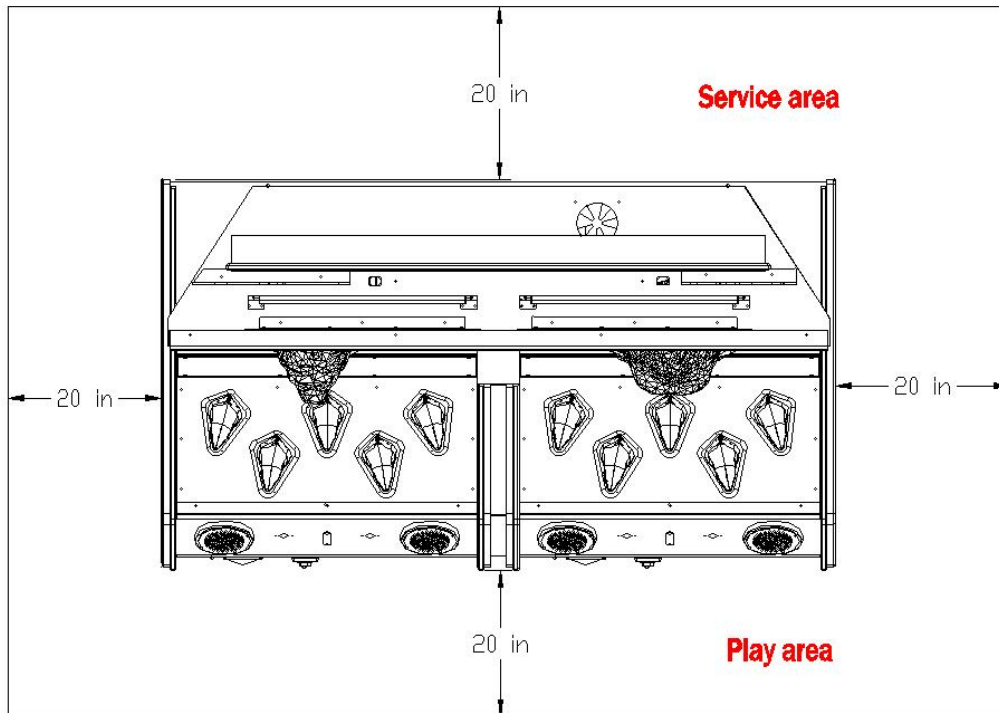


NOTICE

Your unit must be leveled to operate properly.


4.4 Machine Installation

Before processing with assembly assure you have the following tools.


| No. | Name | Picture |
|-----|----------------------|--|
| 1 | Phillips screwdriver |  |

Step 1 Open Display back door.


Place Display& marquee assy to the top of the cabinet. Utilize buckle to secure.

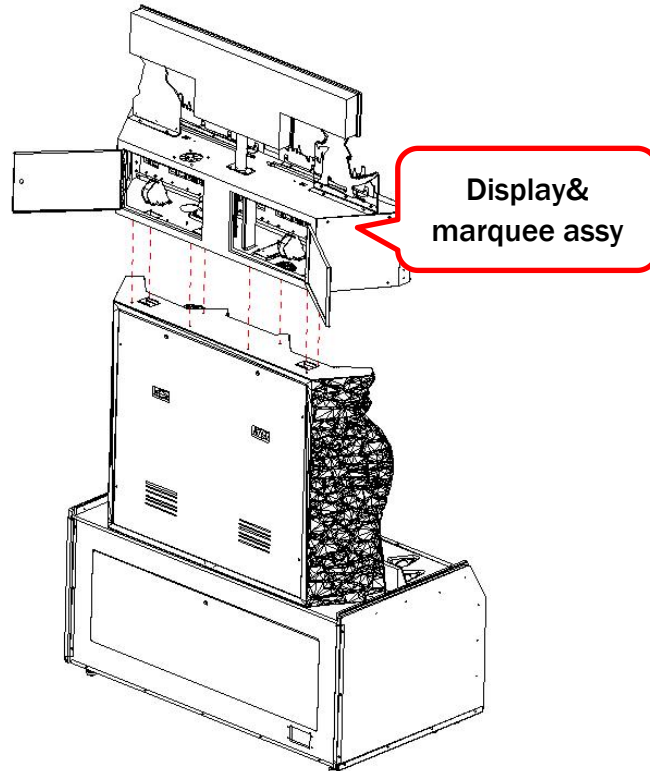


Notice: Mind the buckle position.

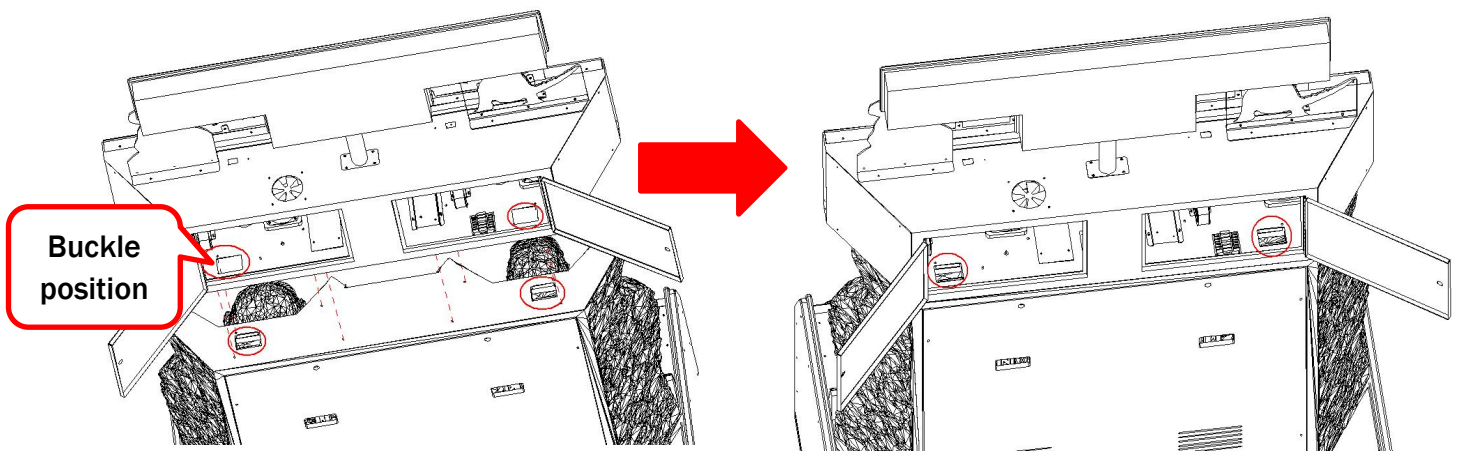

Step 2 Utilize screws(M5×25) to secure. Connect all the connectors.

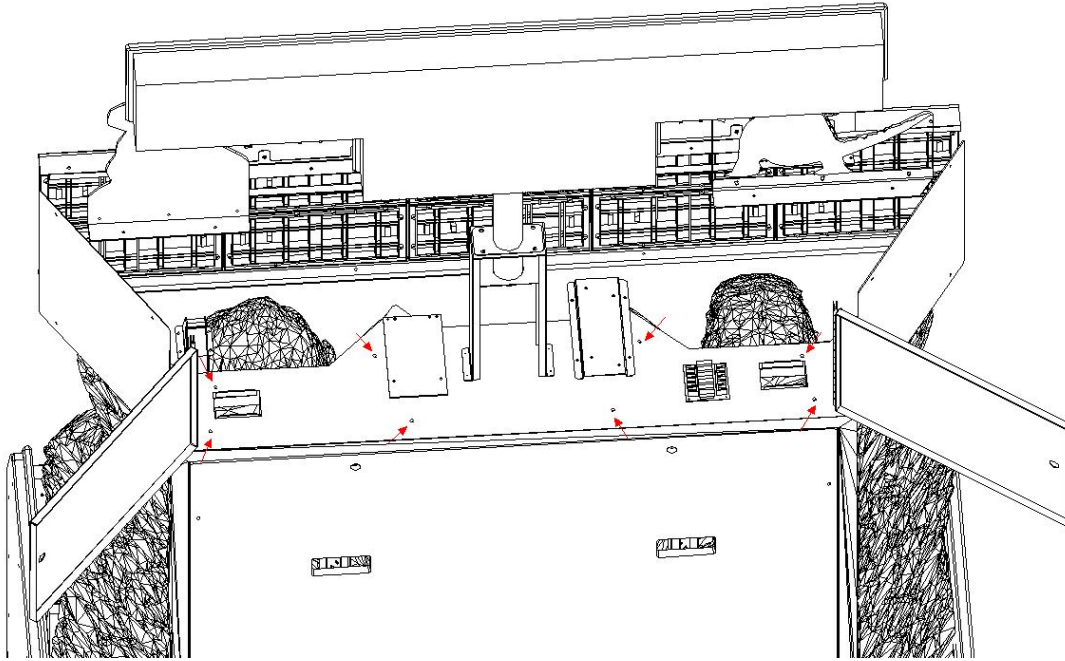

Step 3 Close the back door. **Finish!**

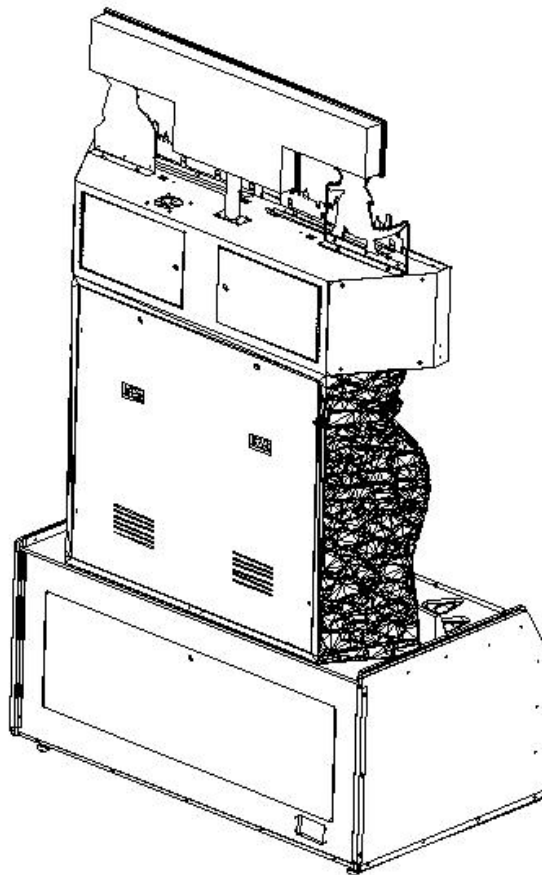

Finish!

4.5 Card Reader Installation Safety Notice



Take precaution to assure that all wiring voltages are confirmed prior to installation of card reader. All warranties are void if not properly installed resulting in logic board damage.

Important: This game is pre-wired to AAMA standards. It is highly recommended to utilize this wiring for Card reader installation.

5. HOW TO PLAY

5.1 Insert coins/Tap/swipe card to play. Select Single or VS(Match) mode to play.

Single Mode:

5.2 Use Hammer to smash the skull crawlers and reduce the health bar.




5.2 Fight Kong/Godzilla by smashing the flashing targets on their bodies.



5.3 Fight both the skull crawlers and Kong/Godzilla.



5.4 Clear the health bar to win BONUS!

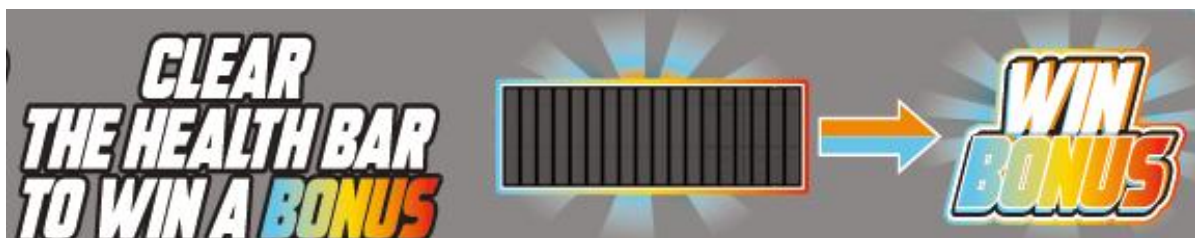

VS(Match) Mode:

5.2 Players will complete in a best of 3 match by fighting skull crawlers and KONG/Godzilla.



5.3 Players will fight to score points.
The health bar will show which player has more points.



5.4 At the end of each round the winner will be the one with a bigger health bar.




5.5 First player to win 2 rounds wins the game!



6. GAME OPTION

6.1 Adjustment button instruction

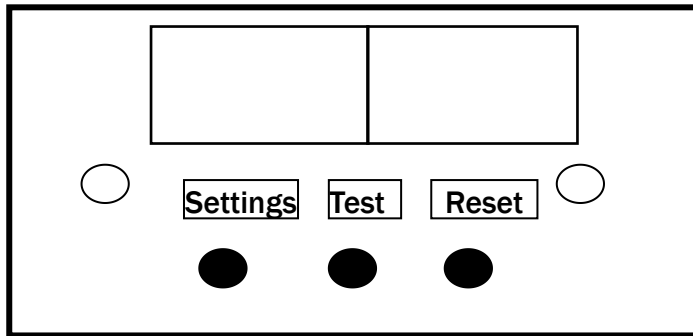

Open the P1 coin door and there is a meter panel. Press Settings button to enter the setting menu.

How to distinguish panel position: Please see the panel decal as shown below:



6.2 Setting Menu

6.2.1 Main Menu

| Options | Status | Default | Description |
|---------------|---------------------|---------|------------------|
| Demo Music | OFF/120/180/240/300 | 120 | |
| Coin | Free/1-20 | 3 | Coins per game |
| Demo Volume | 0-31 | 20 | |
| Music Volume | 0-31 | 20 | |
| Sound Volume | 0-31 | 31 | |
| Game Time | 30-90 | 45 | |
| 1 Tick Scores | OFF/1-50 | 5 | Score per ticket |
| Game Memory | ON/OFF | ON | |
| Level Count | 1-10 | 5 | |
| 中文/English | | | |

| Options | Status | Default | Description |
|-----------------|---------------|----------------|--------------------|
| Aging Test | | | |
| Restore Factory | | | |
| Save&Back | | | |
| Back | | | |

6.3 Ticket Reset: Both press **Test &Reset button** for several seconds to reset tickets.

6.4 T6 IO Chart V1.0

| Input: | | | | | |
|--------|------------------|--------|------------------|--------|------------------|
| INPUT | Content | INPUT | Content | INPUT | Content |
| J12.1 | Settings | J12.9 | Toy sensor 1 | J12.17 | Hitting button 4 |
| J12.2 | Test | J12.10 | Toy sensor 2 | J12.18 | |
| J12.3 | Reset | J12.11 | Toy sensor 3 | J12.19 | |
| J12.4 | Insert coin sw | J12.12 | Toy sensor 4 | J12.20 | |
| J12.5 | AAMA card reader | J12.13 | Toy sensor 5 | J12.21 | |
| J12.6 | DBV | J12.14 | Hitting button 1 | J12.22 | |
| J12.7 | Ticket feedback | J12.15 | Hitting button 2 | J12.23 | |
| J12.8 | | J12.16 | Hitting button 3 | J12.24 | |

| Output : | | | | | |
|----------|-------------|--------|-------------|--------|----------------|
| OUTPUT | Content | OUTPUT | Content | OUTPUT | Content |
| J4.3 | Toy 1 green | J7.3 | Toy 3 blue | J9.3 | Toy magnet 1 |
| J4.4 | Toy 1 red | J7.4 | Toy 4 green | J9.4 | Toy magnet 2 |
| J4.5 | Toy 1 blue | J7.5 | Toy 4 red | J9.5 | Toy magnet 3 |
| J4.6 | Toy 2 green | J7.6 | Toy 4 blue | J9.6 | Toy magnet 4 |
| J4.7 | Toy 2 red | J7.7 | Toy 5 green | J9.7 | Toy magnet 5 |
| J4.8 | Toy 2 blue | J7.8 | Toy 5 red | J9.8 | Ticket drive |
| J4.9 | Toy 3 green | J7.9 | Toy 5 blue | J9.9 | Coin counter |
| J4.10 | Toy 3 red | J7.10 | | J9.10 | Ticket counter |

| SW1 dial | | | | | |
|----------|-------------|-------|-------|-------|-------|
| | | SW1.1 | SW1.2 | SW1.3 | SW1.4 |
| P1 | | OFF | | OFF | OFF |
| P2 | | OFF | | OFF | ON |
| Testing | Game status | OFF | OFF | | |
| | Demo test | OFF | ON | | |

| 485 serial port | | |
|-----------------|---------|-----------------------|
| item | Content | Content |
| J13 | B | Communicate cabinet B |
| J14 | A | Communicate cabinet A |
| J15 | GND | |

| TTL serial port | | |
|------------------------|---------|---------|
| item | Content | Content |
| J16 | 5V | |
| | RX | |
| | TX | |
| | GND | |

| Mini screen | | |
|--------------------|---------|---------|
| item | Content | Content |
| J11 | GND | |
| | 5V | |
| | RS | |
| | CK | |
| | SI | |
| | CS | |
| | 5V | |
| | GND | |

| Mini screen 2 | | |
|----------------------|---------|----------------------------|
| item | Content | Content |
| J10 | GND | |
| | 5V | |
| | TRS | energy bar light 2812 data |
| | RCK | Display LAT |
| | TSI | Display CLK |
| | RCS | Display DAT |
| | 5V | |
| | GND | |

| Display | | |
|----------------|---------|----------------|
| item | Content | Content |
| J3 | VCC | 12V |
| | LAT | Light board LT |
| | CLK | Light board CK |
| | DAT | light board DO |
| | GND | GND |

| Light Control Board-L32.PCB | | | | | | | | |
|-----------------------------|----------------------------|-----|----------------------------|------|-------------------|-----|---------------|--|
| J1 | | J2 | | J3 | | J4 | | |
| 12V | 1#button | 12V | 2#button | 12V | 3#button | 12V | 4#button | |
| G24 | | G27 | | G30 | | G33 | | |
| R25 | | R28 | | R31 | | R34 | | |
| B26 | | B29 | | B32 | | B35 | | |
| | | | | | | | | |
| J5 | | J6 | | J7 | | J8 | | |
| 12V | Control panel L side light | 12V | Control panel R side light | 12V | | 12V | | |
| G36 | | G39 | | G42 | side yellow light | G45 | Top blower | |
| R37 | | R40 | | R43 | monster eye | R46 | Marquee motor | |
| B38 | | B41 | | B44 | Lava light | B47 | | |
| | | | | | | | | |
| J18 | Communication | | | J10 | | | | |
| 1 | Light board DO | | | 12V | | | | |
| 2 | Light board LT | | | 12V | | | | |
| 3 | Light board CK | | | 1-48 | Lava light | | | |
| | | | | 2-49 | Top downlight | | | |
| | | | | 3-50 | Top blower | | | |
| | | | | 4-51 | Marquee motor | | | |
| | | | | 5-52 | | | | |
| | | | | 6-53 | | | | |
| | | | | 7-54 | | | | |
| | | | | 8-55 | | | | |

7. TROUBLESHOOTING

7.1 Common Problem

Please confirm that all connectors fit tightly.

| Symptom | Possible Cause | Recommended action |
|-------------------------|---|---|
| Game will not start | Frame assembly connector is loose. | Check connector. |
| | Frame assembly fault | Contact with UNIS Service. |
| Power off | Circuit protector make power SW in off state. | Turn on power SW again. If appeared again and again, machine has anomaly. Please contact with UNIS Service. |
| Card reader not working | The connector is loose. | Check connector. |
| | Card reader fault. | Check with card reader manufacturer. |
| No ticket dispensing | Out of ticket. | Add ticket and press reset button |
| | Ticket jamming. | Remove the jammed tickets and press reset button. |
| | The connector is loose. | Plug the connector tightly. |
| No sound | Low volume | Raise the volume. |
| | Connector loose. | Check connector. |
| | Speaker fault. | Check speaker. |
| | POT installation error. | Install POT correctly. |
| | POT fault. | Change POT. |
| | Audio cable problem. | Reconnect the audio cable or change it. |

Note: After replacing component from monitor, the game should be recovered again with the recovery stick attached to the machine.

8.MAINTENANCE & INSPECTION

8.1 Safety Check

Check the points listed before operating the machine. These checks are necessary for safe machine operation:

1. Test game before operation each day.
2. Conduct monthly routine checks of game components to ensure good working condition.
3. Check the machine regularly for dust and clean when necessary.

Note: Parts and components require preventative maintenance to maintain proper operation.

8.2 Handling Precautions

When installing or inspecting the machine, be very careful and pay attention to ensure that the player can enjoy the game safely.


Inappropriate handling running counter to the cautionary matters can cause personal injury or damage to the machine.

NOTICE


We do not recommend using power tools as they may cause damage.

8.3 Hitting Monster Assy. Column Replacement Instructions


Step 1 Power off the machine. Locate Control panel. Loosen panel screws to remove Panel and blocking plate.

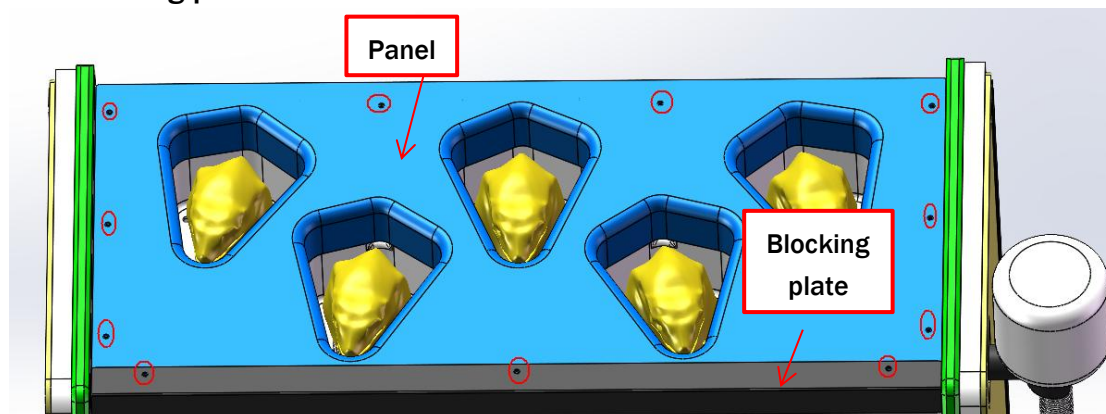


Step 2 Utilize Philips screwdriver and 10mm wrench to loosen screws&nut. Unplug connectors, take Hitting monster assy. out.

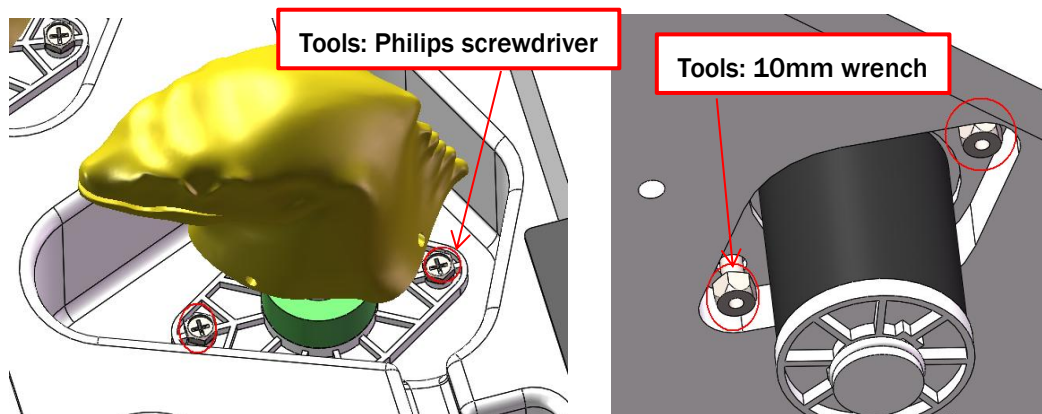

Step 3 Locate Hitting monster assy. Utilize tools to take signal nylon out. Take Magnet column, O type rubber, Coil, Buffer out.

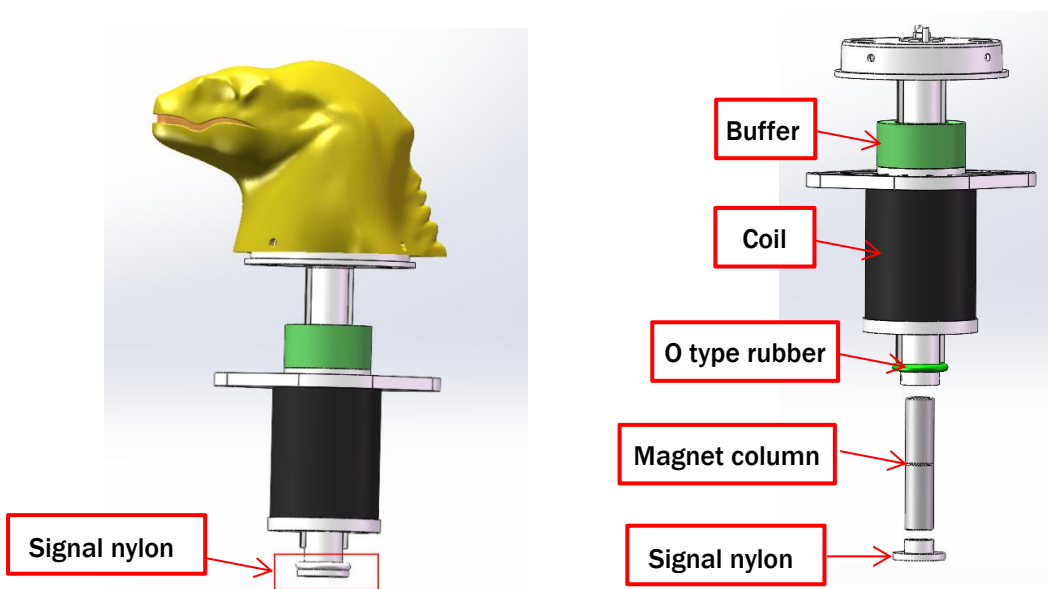


Step 4 Loosen screws to remove monster toy.

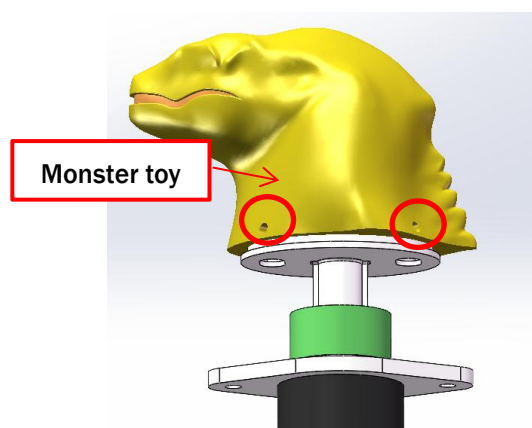

Step 5 Loosen 4 screws to remove mounting plate and light board.


Remove Main column.

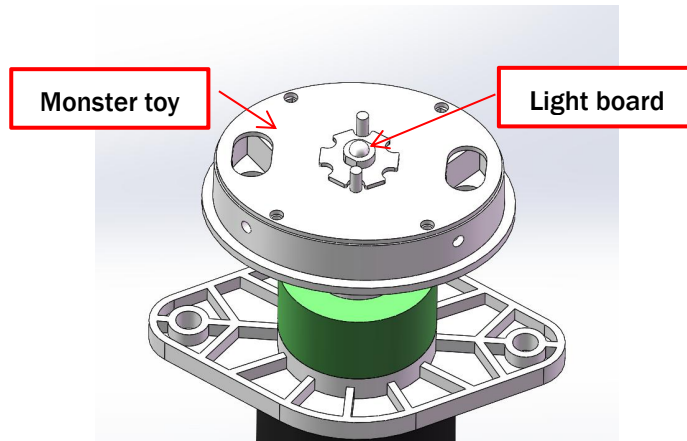


Step 6 Place New Main column and install Magnet column, O type rubber, Coil, Buffer out back.

Notice: The direction of the magnet column is the same as the direction of the removed magnet column.


You can draw with a magnet to determine the direction.

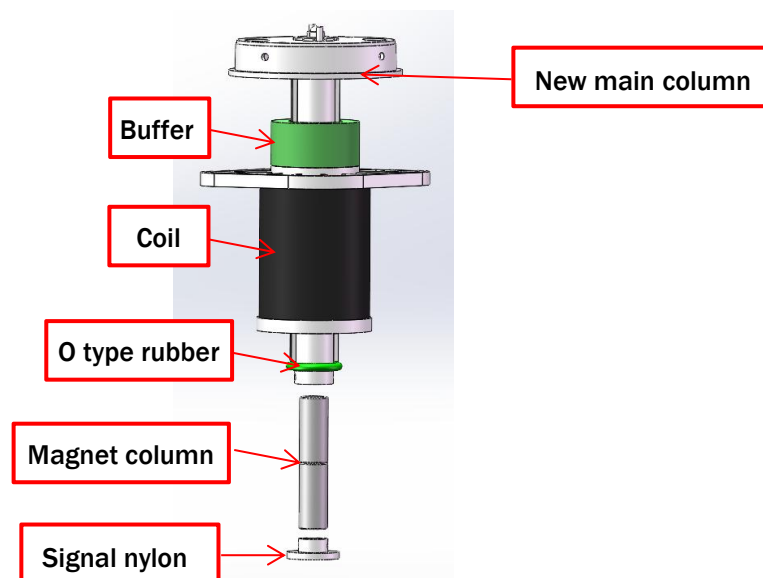

Step 7 Before install Signal nylon, Insert AB glue to the Main column as show below.

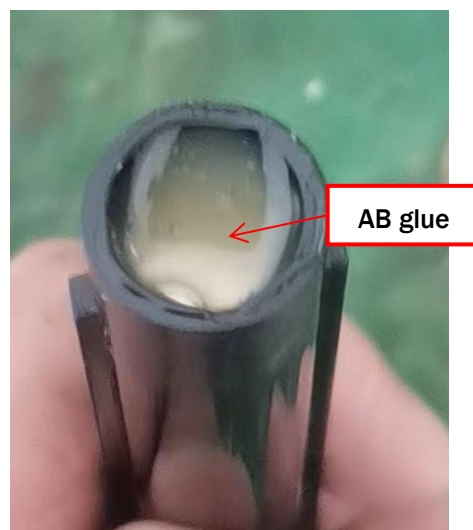


Step 8 Install Signal nylon to the main column. Utilize cotter pin to secure.

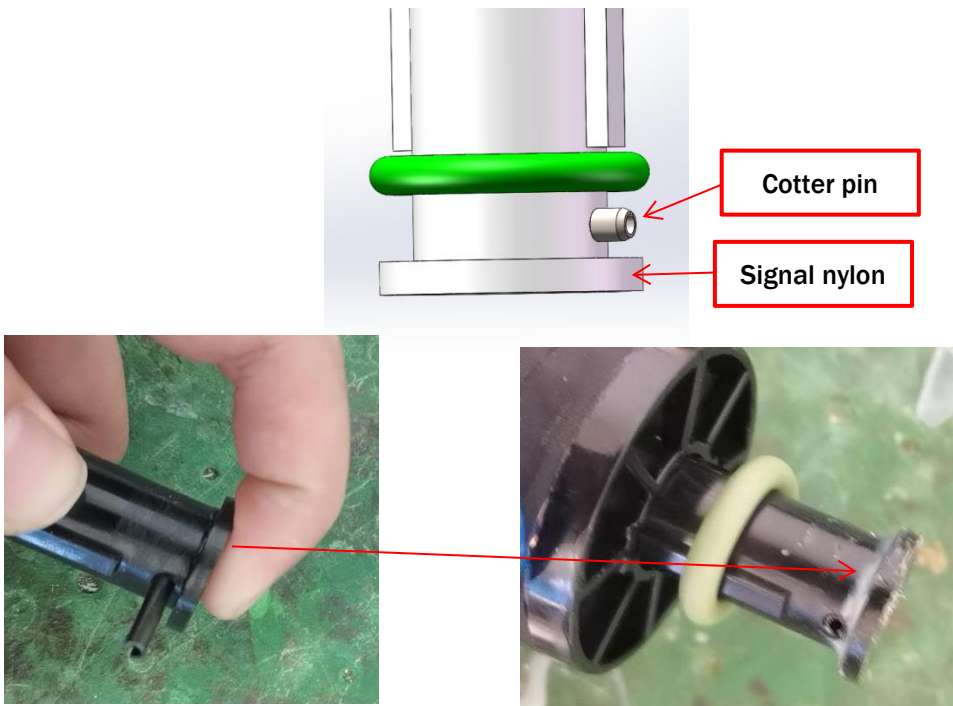

Step 9 Install mounting plate, light board, Toy back to the main column. Utilize M3 screws to secure toy.

Notice: Mind the direction of the light board.


The outlet of the light board is at the tail of the toy.

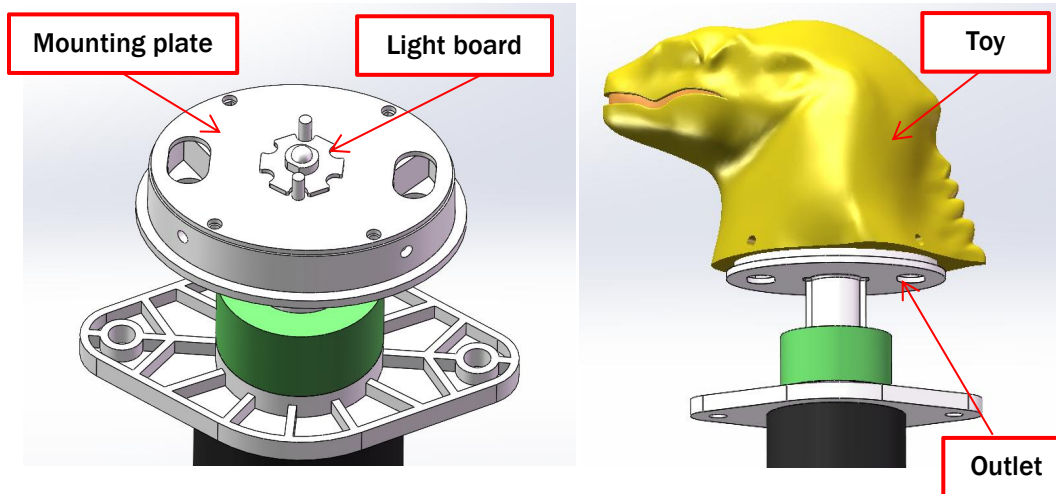


Step 10 Install Hitting monster assy. back to the control panel. Please refer to step 1-2 in reversed order.

8.4 Hitting Button Assy. Replacement Instructions

Step 1 Loosen screws to remove Score display plate.

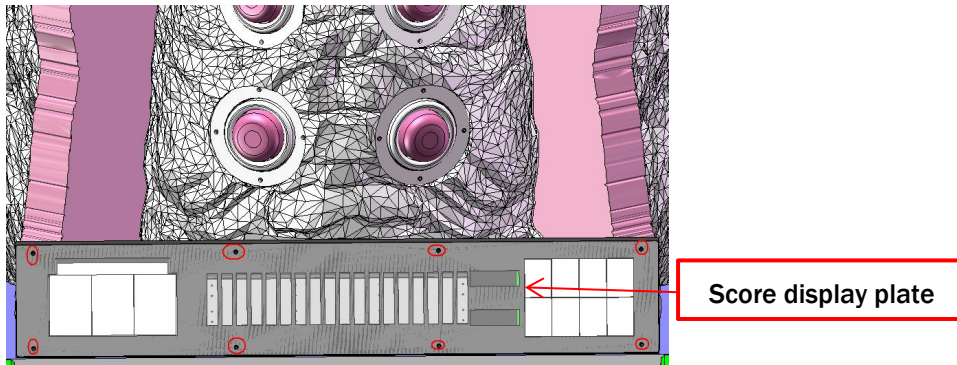

Step 2 Loosen screws to remove mounting plate.

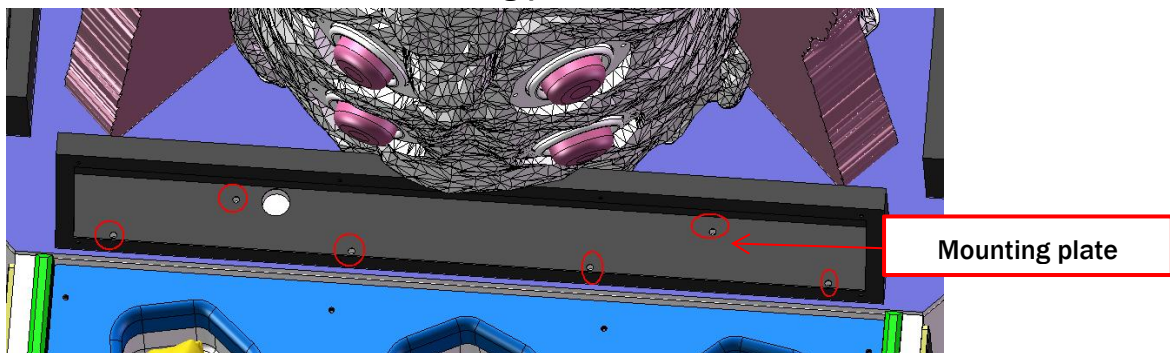

Step 3 Locate Monster assy. Loosen screws to remove Monster assy. Unplug the connector.



Step 4 Turn over the Monster assy. Utilize 7mm wrench to loosen 4 nut. Unplug the connector. Take button assy. Out.




Step 5 Replace it with new button and install it in reversed order.

8.5 Program Update Instructions


Step 1 Power off the machine. Locate T6 board.

Step 2 Connect Programmer connector to the T6 board J16 port as yellow circle shown.

Step 3 Connect Power bank/Plug to Programmer. The program will updated automatically after insertion.

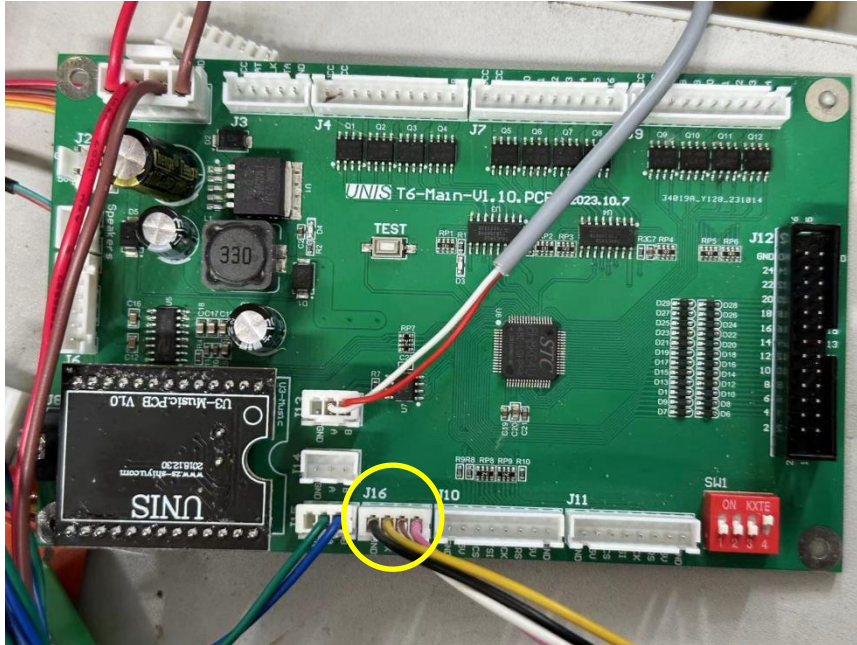


Step 3 4 lights all on after update finishing. Unplug the Programmer connector. Connect the T6 board connectors back. Finish!

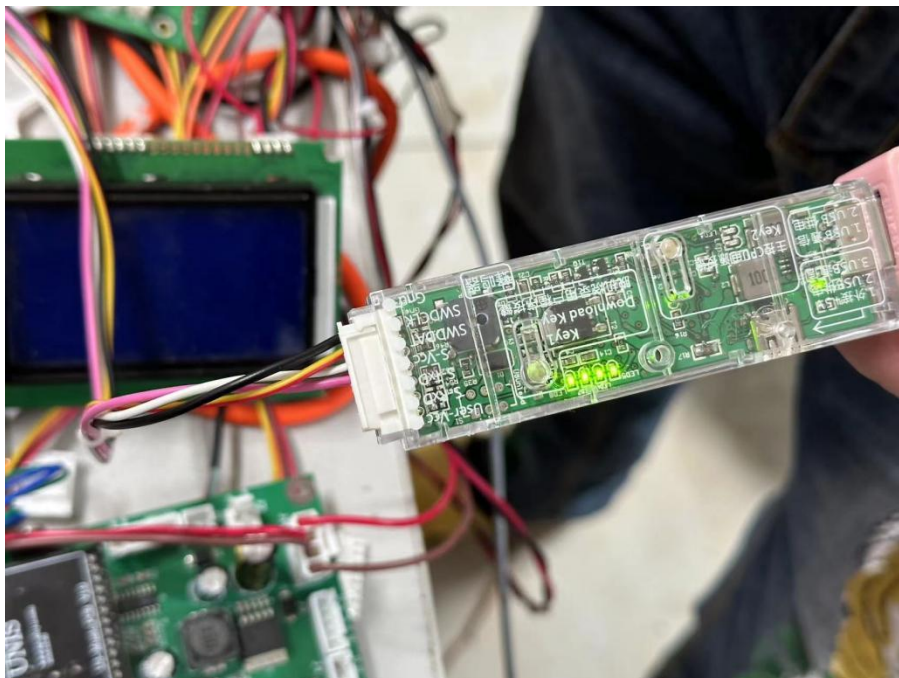


9. OVERALL CONSTRUCTION

9.1 General Assembly

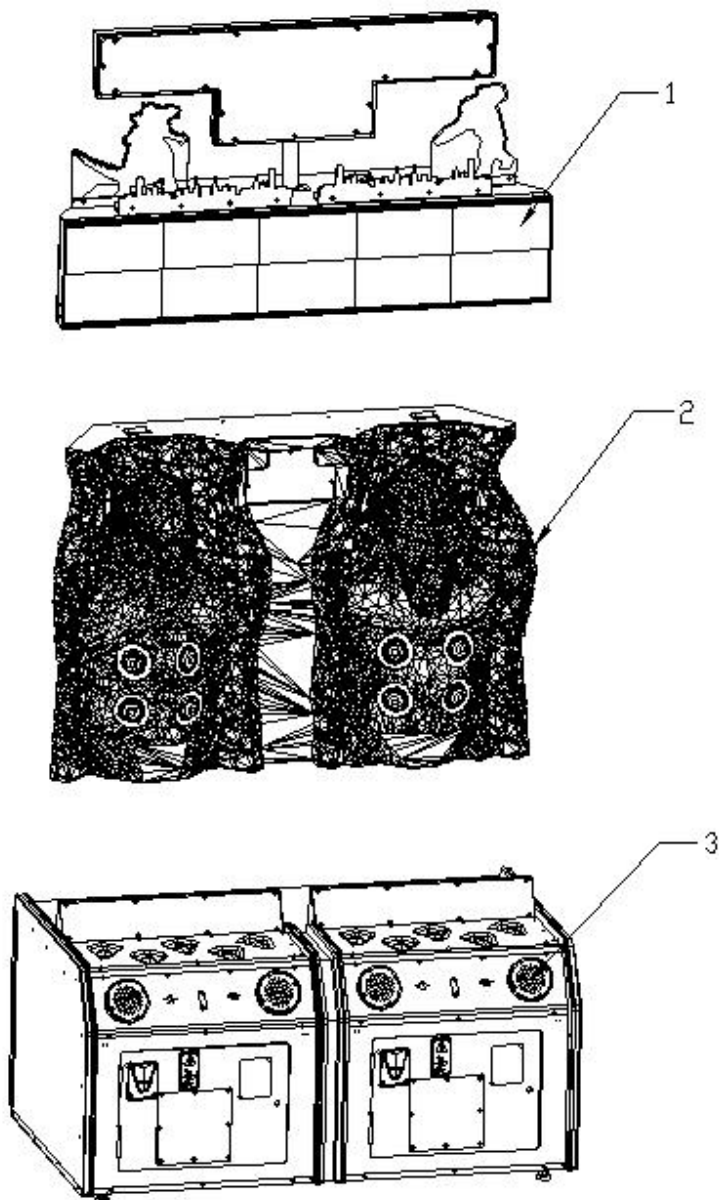


| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|------------------------------|---------|-----|
| 1 | G131-0101-00 | 299.4.2323.017 | Top Marquee&Display Assembly | 1.1 | 1 |
| 2 | G131-0201-00 | 299.4.2323.019 | Monster GFRP Assy | 1.1 | 1 |
| 3 | G131-0301-00 | 299.4.2323.020 | Bottom Cabinet Assy | 1.1 | 1 |

9.2 Top Marquee&Display Assembly

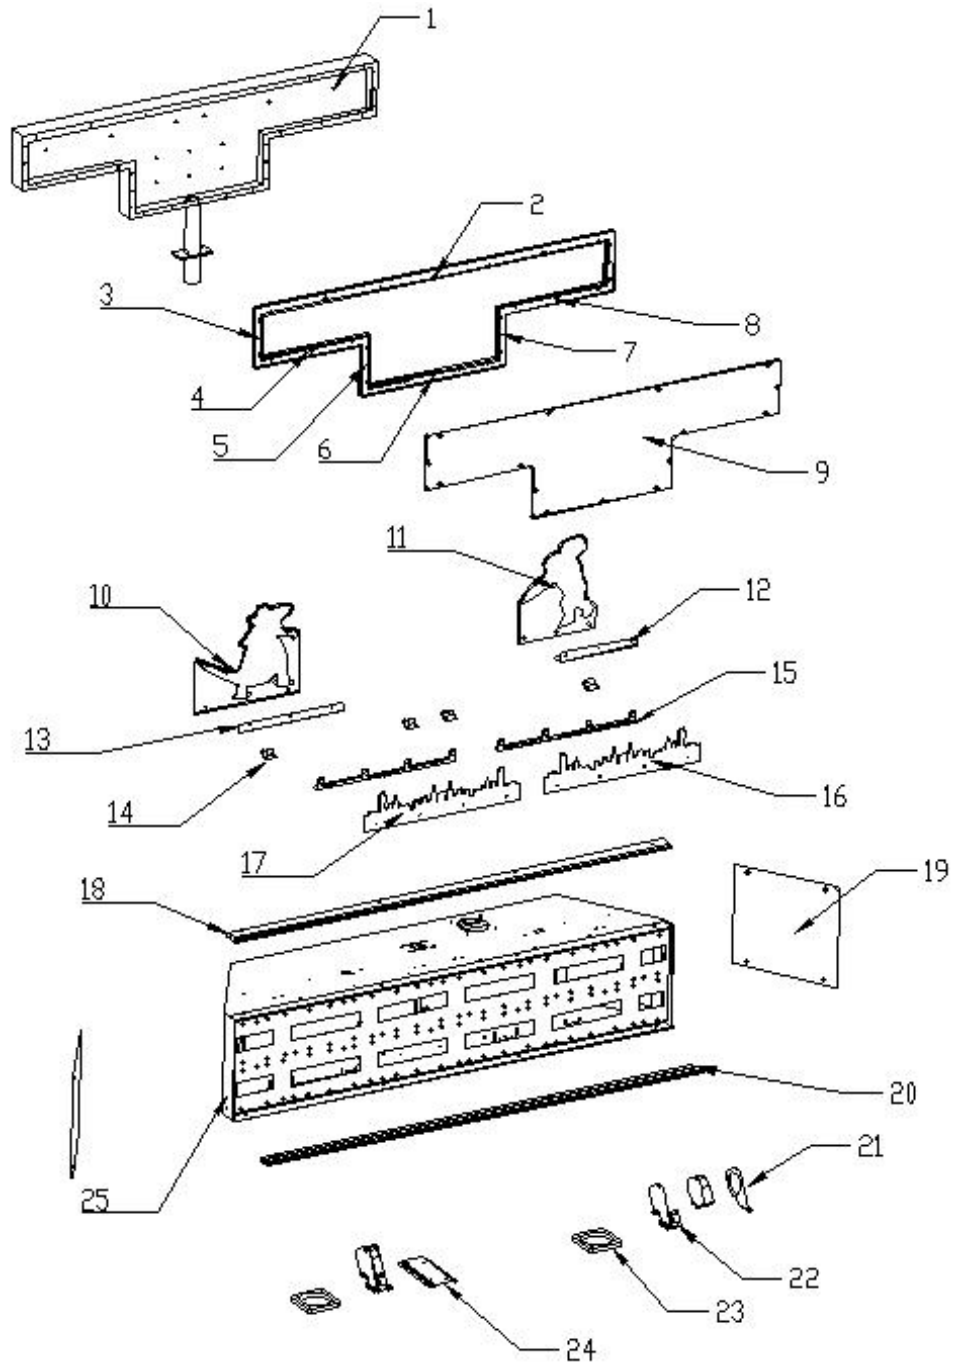


| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|--------------------------------|---------|-----|
| 1 | G131-0109-00 | 202.2.2317.351 | LOGO marquee bracket | 1.1 | 1 |
| 2 | G131-0102-00 | 206.2.2317.072 | LOGO marquee plastic 1 | 1.1 | 1 |
| 3 | G131-0103-00 | 206.2.2317.073 | LOGO marquee plastic 2 | 1.1 | 2 |
| 4 | G131-0104-00 | 206.2.2317.074 | LOGO marquee plastic 3 | 1.1 | 1 |
| 5 | G131-0105-00 | 206.2.2317.075 | LOGO marquee plastic 4 | 1.1 | 1 |
| 6 | G131-0106-00 | 206.2.2317.076 | LOGO marquee plastic 5 | 1.1 | 1 |
| 7 | G131-0107-00 | 206.2.2317.077 | LOGO marquee plastic 6 | 1.1 | 1 |
| 8 | G131-0108-00 | 206.2.2317.078 | LOGO marquee plastic 7 | 1.1 | 1 |
| 9 | G131-0127-00 | 205.2.2369.011 | LOGO marquee | 1.1 | 1 |
| 10 | G131-0125-00 | 205.2.2369.003 | Godzilla plastic L | 1.1 | 1 |
| 11 | G131-0126-00 | 205.2.2369.004 | King kong plastic R | 1.1 | 1 |
| 12 | G131-0113-00 | 202.2.2317.355 | King kong plastic fixing plate | 1.1 | 1 |
| 13 | G131-0112-00 | 202.2.2317.354 | Godzilla plastic fixing plate | 1.1 | 1 |
| 14 | G131-0111-00 | 202.2.2317.353 | Cabinet light fixing plate | 1.1 | 4 |
| 15 | G131-0110-00 | 202.2.2317.352 | City background mounting plate | 1.1 | 2 |
| 16 | G131-0124-00 | 205.2.2369.002 | City background plastic 2 | 1.1 | 1 |
| 17 | G131-0123-00 | 205.2.2369.001 | City background plastic 1 | 1.1 | 1 |
| 18 | G131-0114-00 | 206.2.2317.079 | Display upper light plastic | 1.1 | 1 |
| 19 | G131-0116-00 | 202.2.2317.356 | Display side cover | 1.1 | 1 |
| 20 | G131-0115-00 | 206.2.2317.080 | Display bottom light plastic | 1.1 | 1 |
| 21 | G131-0120-00 | 202.4.2323.065 | Marquee fan cover plate | 1.1 | 2 |
| 22 | G131-0119-00 | 202.4.2323.064 | Marquee fan fixing plate | 1.1 | 2 |
| 23 | G131-0121-00 | 203.4.2323.029 | Speaker cover board | 1.1 | 2 |
| 24 | G131-0118-00 | 202.4.2323.015 | Power supply mounting plate | 1.1 | 1 |
| 25 | G131-0117-00 | 202.2.2317.357 | Display mounting plate | 1.1 | 1 |

9.3 Monster Assy. Mounting Bracket

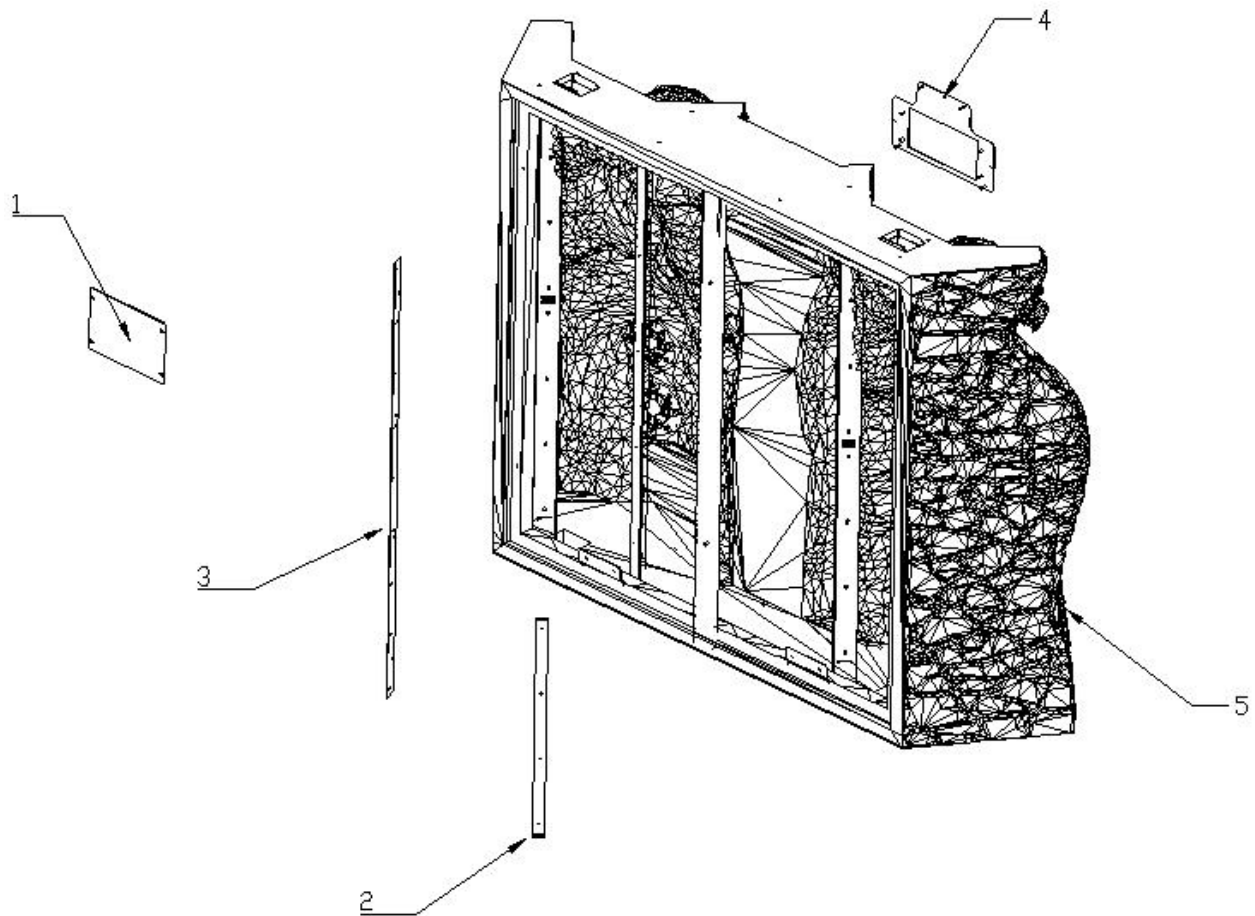


| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|------------------------------|---------|-----|
| 1 | G131-0203-00 | 202.2.2317.364 | Lava mounting plate 1 | 1.1 | 2 |
| 2 | G131-0204-00 | 202.2.2317.358 | Lava mounting plate 2 | 1.1 | 8 |
| 3 | G131-0205-00 | 206.2.2317.081 | Lava mounting pvc 3 | 1.1 | 2 |
| 4 | G131-0206-00 | 202.2.2317.359 | Score display mounting plate | 1.1 | 1 |
| 5 | G131-0202-00 | 206.4.2323.057 | Monster GFRP | 1.1 | 1 |

9.4 Monster Assy. Button

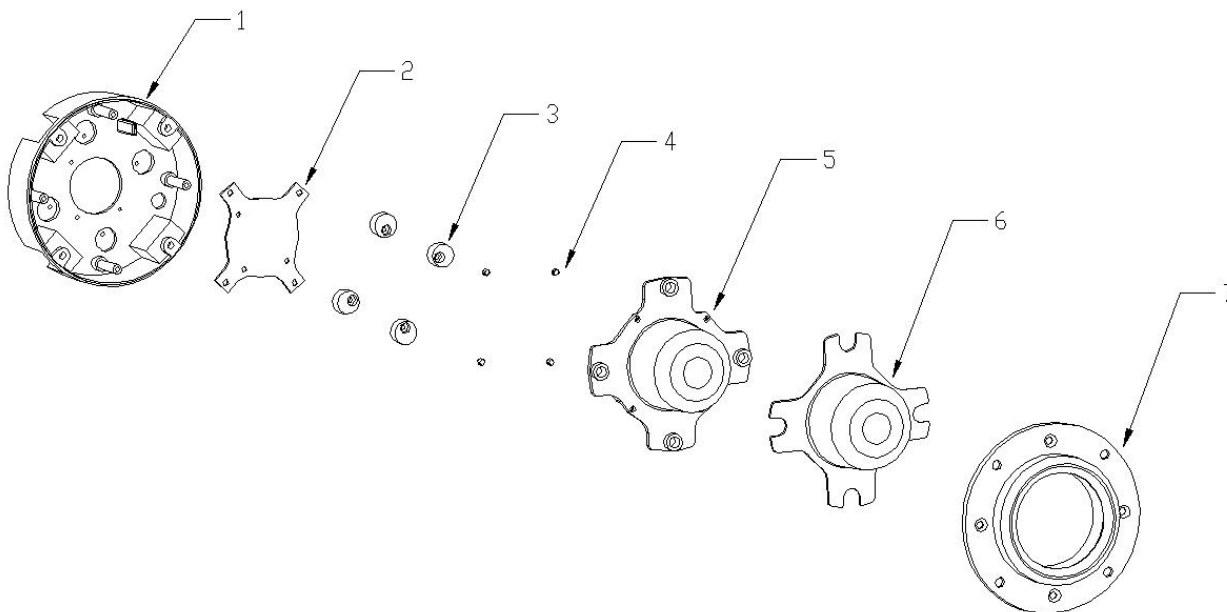


| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|---------------------|---------|-----|
| 1 | G131-0208-00 | 206.4.2323.027 | Button base bracket | 1.1 | 1 |
| 2 | G131-0444-00 | 2.24.02.070014 | Button board | 1.1 | 1 |
| 3 | G131-0212-00 | 206.4.2323.031 | Buffer | 1.1 | 4 |
| 4 | G131-0214-00 | 2.35.02.010020 | Magnet column | 1.1 | 4 |
| 5 | G131-0215-00 | 206.4.2323.030 | Button shell | 1.1 | 1 |
| 6 | G131-0209-00 | 206.4.2323.028 | Button gel rubber | 1.1 | 1 |
| 7 | G131-0210-00 | 206.4.2323.029 | Button shell cover | 1.1 | 1 |

9.5 Score Display Assy

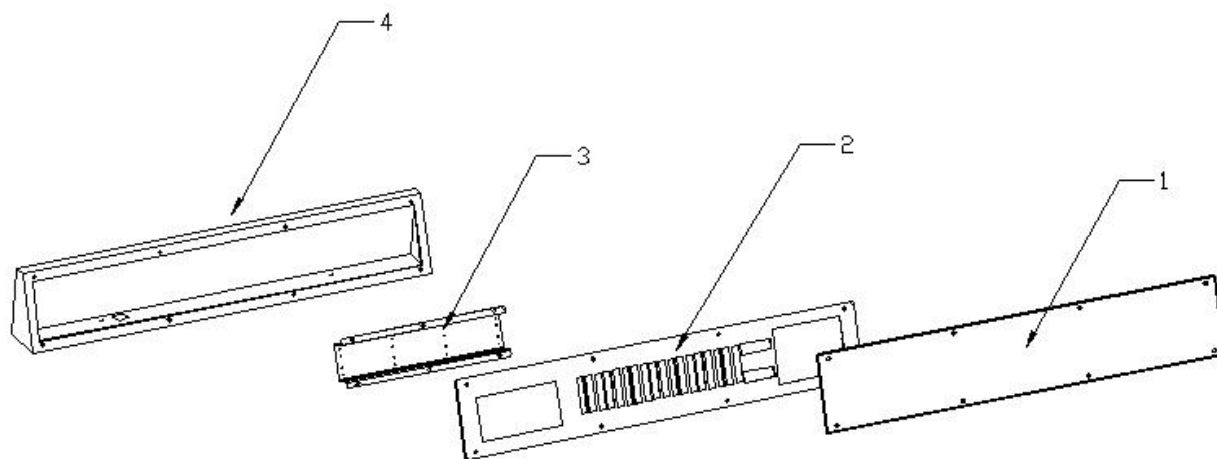


| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|-----------------|------------------------------|---------|-----|
| 1 | G131-0345-00 | 205.4.2323.001B | Score display decal | 1.1 | 1 |
| 2 | G131-0344-00 | 202.4.2323.002 | Score display | 1.1 | 1 |
| 3 | G131-0343-00 | 206.4.2323.007 | Score display mounting pvc | 1.1 | 1 |
| 4 | G131-0342-00 | 202.4.2323.001 | Score display mounting plate | 1.1 | 1 |

9.6 Wooden Case Assy.

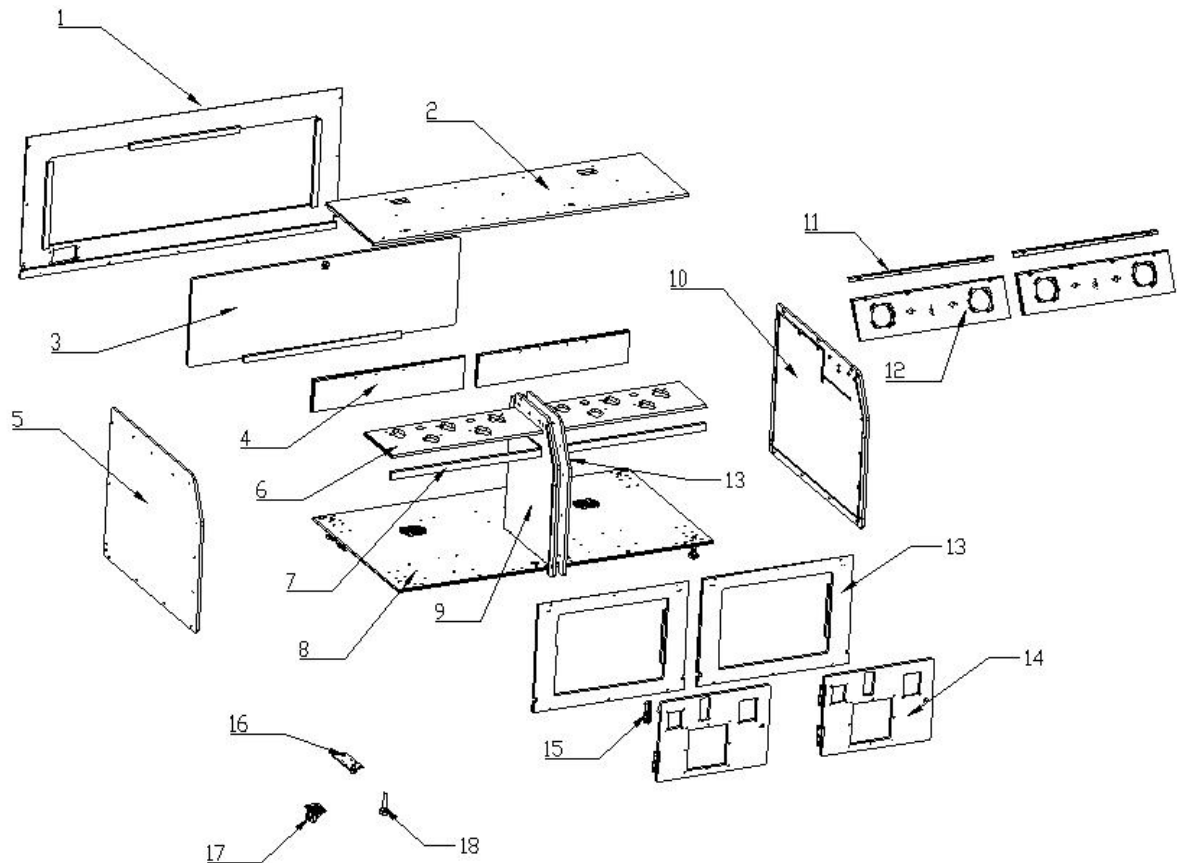


| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|-----------------|---------------------|---------|-----|
| 1 | G131-0313-00 | 203.4.2323.034 | Back upper board | 1.1 | 1 |
| 2 | G131-0314-00 | 203.4.2323.035 | Top board | 1.1 | 1 |
| 3 | G131-0311-00 | 203.4.2323.032 | Back upper door | 1.1 | 1 |
| 4 | G131-0316-00 | 203.4.2323.037 | Mid vertical board | 1.1 | 2 |
| 5 | G131-0319-00 | 203.4.2323.040 | L side board | 1.1 | 1 |
| 6 | G131-0322-00 | 203.4.2323.007 | Mid board | 1.1 | 2 |
| 7 | G131-0324-00 | 203.4.2323.009 | Mid support board | 1.1 | 2 |
| 8 | G131-0310-00 | 203.4.2323.031 | Base board | 1.1 | 1 |
| 9 | G131-0318-00 | 203.4.2323.039 | Mid L side board | 1.1 | 1 |
| 10 | G131-0315-00 | 203.4.2323.036 | R side board | 1.1 | 1 |
| 11 | G131-0305-00 | 202.4.2323.025 | Upper plate | 1.1 | 2 |
| 12 | G131-0320-00 | 203.4.2323.041 | Speaker panel board | 1.1 | 2 |
| 13 | G131-0312-00 | 203.4.2323.033 | Front panel board | 1.1 | 2 |
| 14 | G131-0321-00 | 203.4.2323.042 | Front door board | 1.1 | 2 |
| 15 | G131-0306-00 | 2.63.00.000001 | 4" hinge | 1.1 | 4 |
| 16 | G131-0308-00 | 2.60.00010000 | Caster plate | 1.1 | 4 |
| 17 | G131-0307-00 | 2.55.01.000047 | 2.5" leveller | 1.1 | 4 |
| 18 | G131-0309-00 | 202.5.13.01.035 | 3" plate | 1.1 | 4 |

9.7 Main Cabinet Overall Assembly

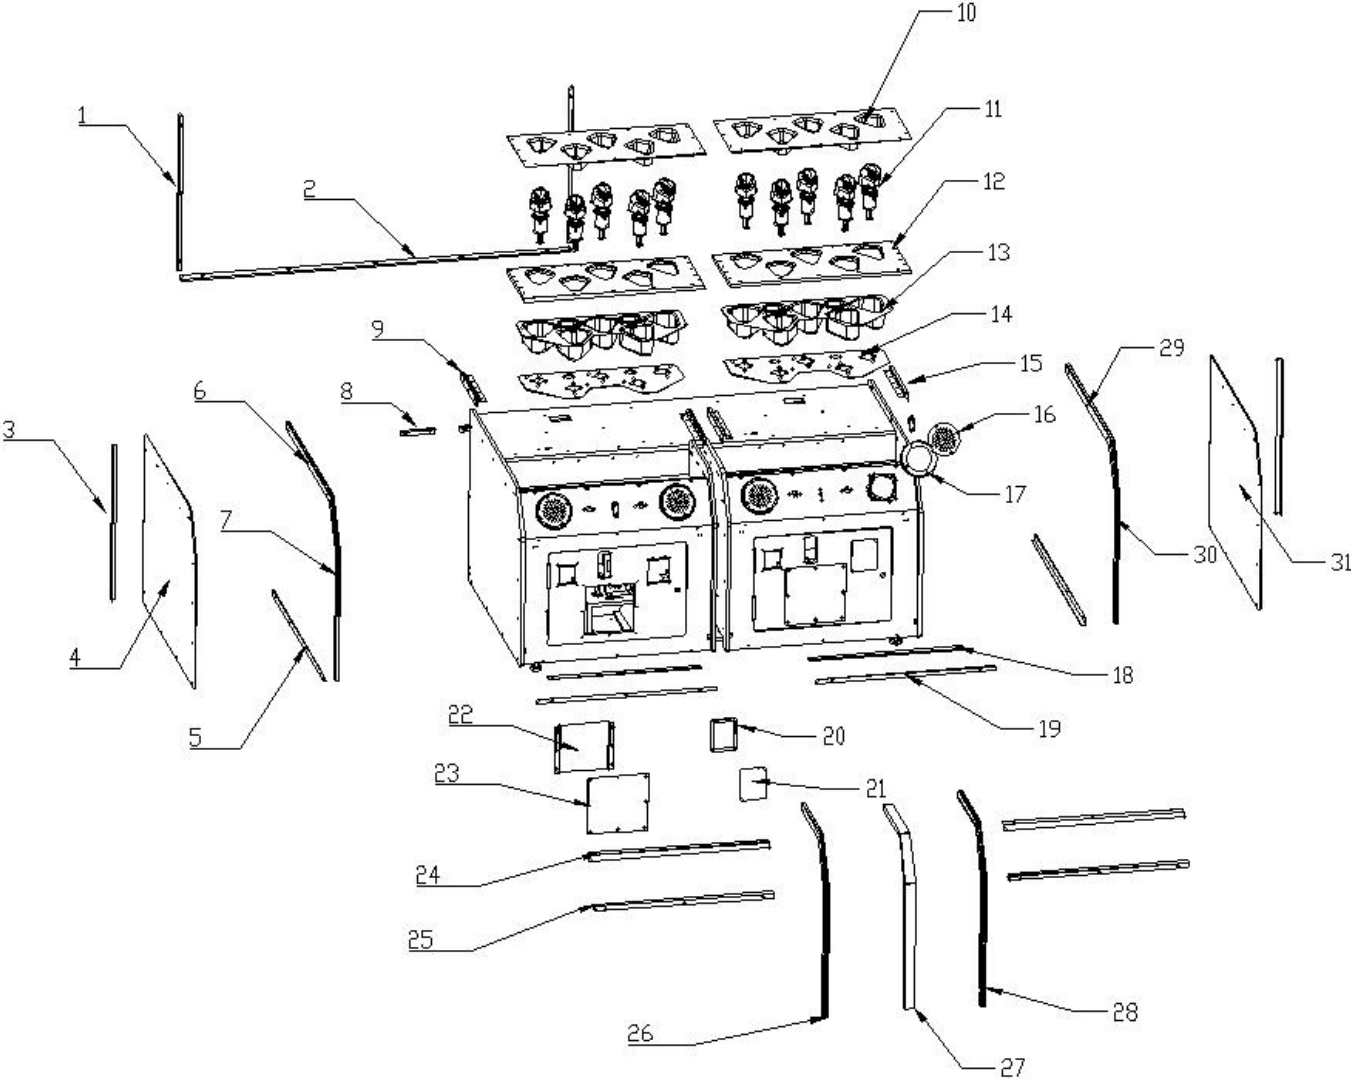


| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|----------------------------------|---------|-----|
| 1 | G131-0385-00 | 202.4.2323.086 | Back side shading plate | 1.1 | 2 |
| 2 | G131-0332-00 | 202.2.2317.360 | Back protect plate | 1.1 | 1 |
| 3 | G131-0384-00 | 202.4.2323.085 | Side light mounting plate | 1.1 | 2 |
| 4 | G131-0382-00 | 205.2.2369.018 | L side Godzilla plastic | 1.1 | 1 |
| 5 | G131-0333-00 | 202.2.2317.361 | L&R protect plate | 1.1 | 2 |
| 6 | G131-0336-00 | 206.2.2317.084 | L side light plastic 1 | 1.1 | 1 |
| 7 | G131-0337-00 | 206.2.2317.085 | L side light plastic 2 | 1.1 | 1 |
| 8 | G131-0363-00 | 202.4.2323.028 | Upper plate 4 | 1.1 | 4 |
| 9 | G131-0361-00 | 202.4.2323.026 | Upper plate 2 | 1.1 | 2 |
| 10 | G131-0379-00 | 206.4.2323.009 | Panel upper plastic | 1.1 | 2 |
| 11 | G131-0347-00 | 299.4.2323.003 | Hitting Monster Assembly | 1.1 | 10 |
| 12 | G131-0386-00 | 203.4.2323.025 | Upper board | 1.1 | 2 |
| 13 | G131-0359-00 | 206.4.2323.016 | Hitting monster ABS | 1.1 | 2 |
| 14 | G131-0358-00 | 202.4.2323.068 | Hitting monster strengthen plate | 1.1 | 2 |
| 15 | G131-0362-00 | 202.4.2323.027 | Upper plate 3 | 1.1 | 2 |
| 16 | G131-0373-00 | 202.4.2323.057 | Speaker net | 1.1 | 4 |
| 17 | G131-0380-00 | 206.4.2323.042 | Speaker light plastic | 1.1 | 4 |
| 18 | G131-0341-00 | 206.2.2317.086 | Bottom light pvc | 1.1 | 2 |
| 19 | G131-0374-00 | 202.4.2323.007 | Front protect plate | 1.1 | 2 |
| 20 | G131-0369-00 | 202.4.2002.029 | DBV panel plate | 1.1 | 2 |
| 21 | G131-0368-00 | 202.4.2323.054 | DBV cover plate | 1.1 | 2 |
| 22 | G131-0360-00 | 202.4.2323.009 | Door board light mounting plate | 1.1 | 2 |
| 23 | G131-0383-00 | 205.4.2323.012 | Front LOGO PE | 1.1 | 2 |
| 24 | G131-0364-00 | 202.4.2323.029 | Pressing plate | 1.1 | 2 |
| 25 | G131-0375-00 | 202.4.2323.005 | Pressing plate 2 | 1.1 | 2 |
| 26 | G131-0334-00 | 206.2.2317.082 | Mid L light plastic | 1.1 | 1 |
| 27 | G131-0303-00 | 202.2.2317.362 | Cabinet mid board | 1.1 | 1 |
| 28 | G131-0335-00 | 206.2.2317.083 | Mid R light plastic | 1.1 | 1 |
| 29 | G131-0338-00 | 206.4.2323.055 | R side light plastic 1 | 1.1 | 1 |
| 30 | G131-0339-00 | 206.4.2323.056 | R side light plastic 2 | 1.1 | 1 |
| 31 | G131-0381-00 | 205.2.2369.017 | R side King kong plastic | 1.1 | 1 |

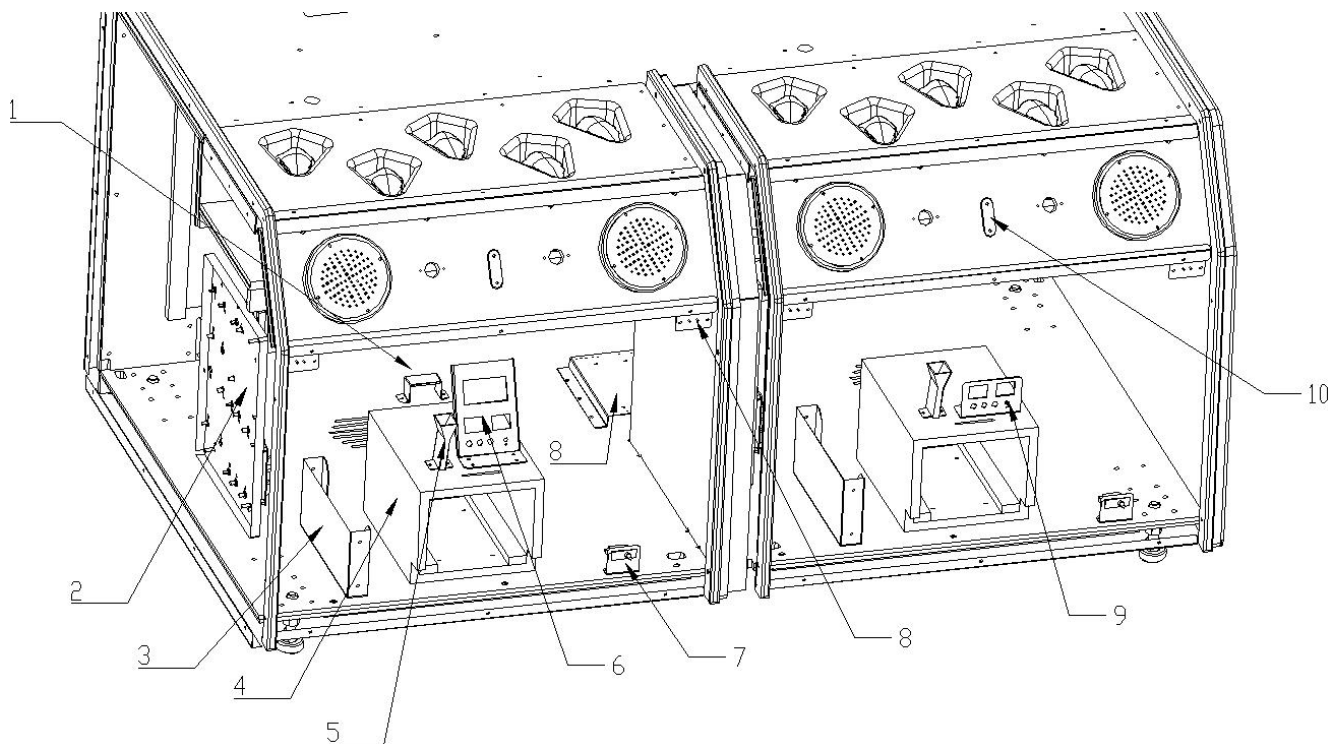

| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|---------------------------|---------|-----|
| 1 | G131-0378-00 | 202.4.2002.044 | Power supply plate | 1.1 | 1 |
| 2 | G131-0387-00 | 203.4.2323.043 | Electrical mounting board | 1.1 | 2 |
| 3 | G131-0377-00 | 2.60.00075000 | Ticket box | 1.1 | 2 |
| 4 | G131-0325-00 | 299.4.2323.016 | Coin outer box | 1.1 | 2 |
| 5 | G131-0367-00 | 202.4.2323.053 | Lead coin slot | 1.1 | 2 |
| 6 | G131-0366-00 | 202.4.2323.052 | Setting panel plate | 1.1 | 1 |
| 7 | G131-0365-00 | 202.4.2323.051 | Door SW plate | 1.1 | 2 |
| 8 | G131-0304-00 | 202.4.2323.066 | Hook plate | 1.1 | 4 |
| 9 | G131-0372-00 | 202.4.2323.055 | Setting panel plate 2 | 1.1 | 1 |
| 10 | G131-0531-00 | 205.4.2323.034 | Card reader plate | 1.1 | 2 |

9.8 Hitting Monster Assembly

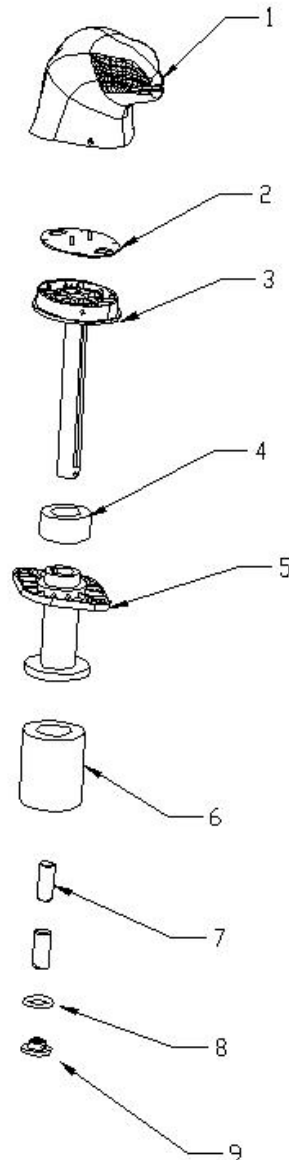


| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|--------------------------------------|---------|-----|
| 1 | G131-0352-00 | 206.4.2323.035 | Hitting monster | 1.1 | 1 |
| 2 | G131-0353-00 | 202.4.2323.033 | Hitting monster light mounting plate | 1.1 | 1 |
| 3 | G131-0350-00 | 206.4.2323.032 | Main column | 1.1 | 1 |
| 4 | G131-0354-00 | 206.4.2323.038 | Buffer | 1.1 | 1 |
| 5 | G131-0349-00 | 206.4.2323.033 | Coil nylon plate | 1.1 | 1 |
| 6 | G131-0348-00 | 202.4.2323.035 | Coil | 1.1 | 1 |
| 7 | G131-0355-00 | 2.35.02.010017 | Magnet column | 1.1 | 2 |
| 8 | G131-0356-00 | 201.16.010021 | O type rubber | 1.1 | 1 |
| 9 | G131-0351-00 | 206.4.2323.034 | Signal nylon | 1.1 | 1 |


9.9 Decals



| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|---------------------------|---------|-----|
| 1 | G131-0127-00 | 205.2.2369.011 | LOGO marquee | 1.1 | 1 |
| 2 | G131-0125-00 | 205.2.2369.003 | Godzilla plastic L | 1.1 | 1 |
| 3 | G131-0126-00 | 205.2.2369.004 | King kong plastic R | 1.1 | 1 |
| 4 | G131-0519-00 | 205.2.2369.009 | Godzilla panel PVC | 1.1 | 1 |
| 5 | G131-0515-00 | 205.2.2369.005 | Front PVC | 1.1 | 2 |
| 6 | G131-0383-00 | 205.4.2323.012 | Front LOGO PE | 1.1 | 2 |
| 7 | G131-0531-00 | 205.4.2323.034 | Card reader plate | 1.1 | 2 |
| 8 | G131-0532-00 | 205.2.2369.022 | Panel speaker PVC | 1.1 | 2 |
| 9 | G131-0382-00 | 205.2.2369.018 | L side Godzilla plastic | 1.1 | 1 |
| 10 | G131-0381-00 | 205.2.2369.017 | R side King kong plastic | 1.1 | 1 |
| 11 | G131-0520-00 | 205.2.2369.010 | Kong panel PVC | 1.1 | 1 |
| 12 | G131-0521-00 | 205.2.2369.012 | Lava middle PVC | 1.1 | 1 |
| 13 | G131-0124-00 | 205.2.2369.002 | City background plastic 2 | 1.1 | 1 |
| 14 | G131-0123-00 | 205.2.2369.001 | City background plastic 1 | 1.1 | 1 |

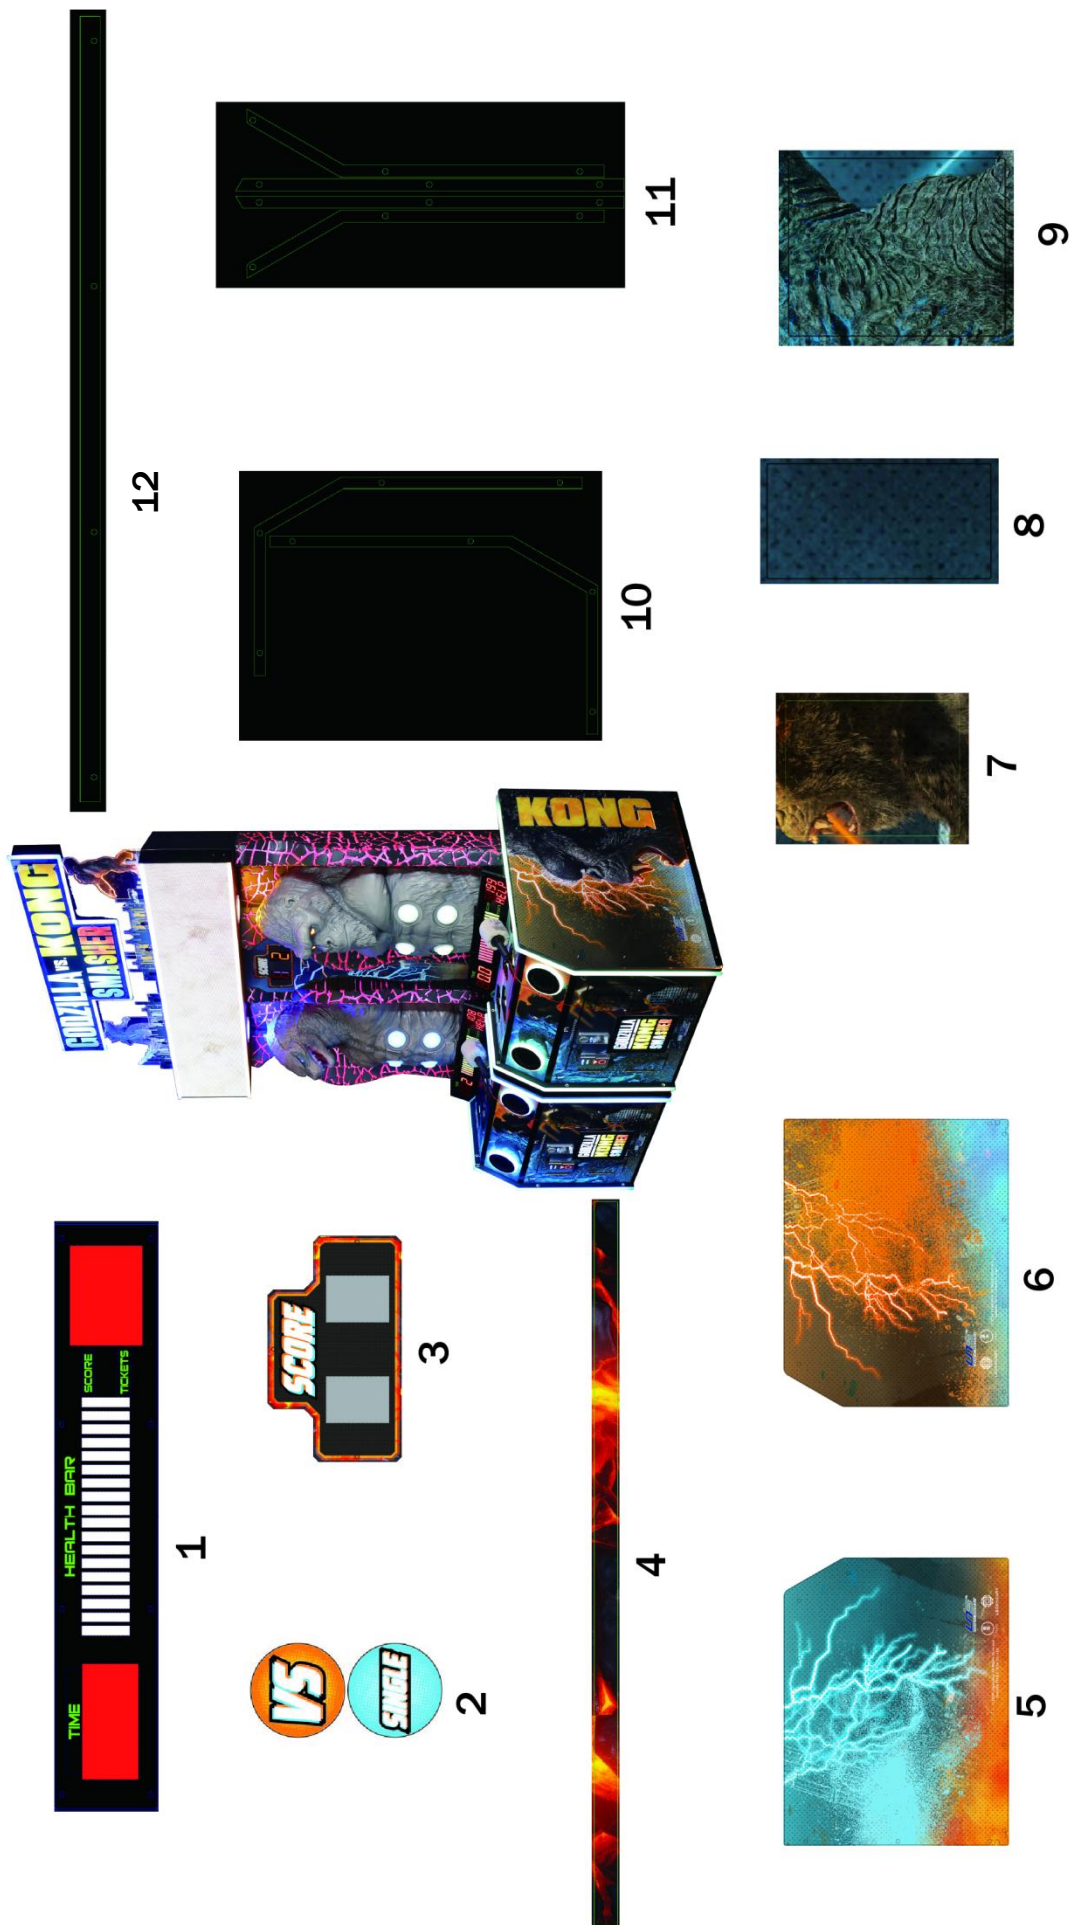

| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|-----------------|------------------------------|---------|-----|
| 1 | G131-0345-00 | 205.4.2323.001B | Score display decal | 1.1 | 1 |
| 2 | G131-0526-00 | 205.2.2369.020 | Button PVC | 1.1 | 1 |
| 3 | G131-0218-00 | 205.2.2369.013 | Middle score display plastic | 1.1 | 1 |
| 4 | G131-0524-00 | 205.2.2369.016 | Cabinet mid PVC | 1.1 | 1 |
| 5 | G131-0523-00 | 205.2.2369.015 | Cabinet L PVC | 1.1 | 1 |
| 6 | G131-0522-00 | 205.2.2369.014 | Cabinet R PVC | 1.1 | 1 |
| 7 | G131-0513-00 | 205.4.2323.020 | DBV cover PVC | 1.1 | 2 |
| 8 | G131-0529-00 | 205.4.2323.030 | Coin mech blanking plate PVC | 1.1 | 2 |
| 9 | G131-0530-00 | 205.4.2323.031 | Tik blanking plate PVC | 1.1 | 2 |
| 10 | G131-0518-00 | 205.2.2369.008 | Cabinet mid light PVC | 1.1 | 2 |
| 11 | G131-0517-00 | 205.2.2369.007 | Panel L&R light PVC | 1.1 | 2 |
| 12 | G131-0516-00 | 205.2.2369.006 | Display up&down light PVC | 1.1 | 2 |

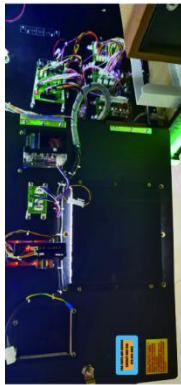

NOTE: TAKE PRECAUTION TO ASSURE THAT ALL WIRING IS CORRECTLY INSTALLED PRIOR TO INSTALLATION OF CARD READER. ALL WARRANTIES ARE VOID IF NOT PROPERLY INSTALLED OR WIRING IN LOGIC BOARD DAMAGE.

FOR PARTS AND SERVICE CONTACT UNIS USA 972-241-4263


1



3

DEDICATED CARD READER POWER SUPPLY 12VDC

4

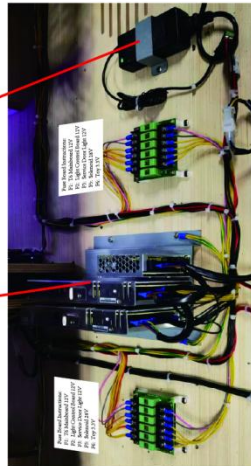


Fuse Board Instructions:
 F1: T6 Mainboard 12V
 F2: Light Control Board 12V
 F3: Service Door Light 12V
 F5: Solenoid 28V
 F6: Toy 3.3V

Fuse Board Instructions:
 F1: F1/Fan 12V
 F2: F2/City Board Light Strip 12V
 F3: LED Downlight 12V
 F5: Top Marquee 12V
 F6: Top Marquee 12V

6

Fuse Board Instructions:
 F1: T6 Mainboard 12V
 F2: Light Control Board 12V
 F3: Service Door Light 12V
 F5: Solenoid 28V
 F6: Toy 3.3V

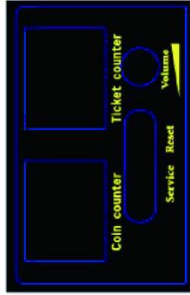

15



14

FOR PARTS AND SERVICE CONTACT UNIS USA 972 241 4263

11

/// WARNING!!! DO NOT SERVICE UNIT WITHOUT READING OWNERS MANUAL HIGH VOLTAGE!!!

12

THIS GAME SHOULD BE SERVICED BY AUTHORIZED PERSONNEL ONLY

10

ON | OFF

13



FUSE T10A 250V


9



8

| INDOOR MACHINE | |
|------------------------------------|----------------------|
| NAME: GvK Smasher 2P GMP | MAX POWER: 650W |
| MODEL: A-521 | MIN POWER: 420W |
| S/N: | FREQUENCY: 50 / 60Hz |
| VOLTAGE: AC110V~ | DATE: |
| Guangdong UNIS Technology Co.,Ltd. | |

7

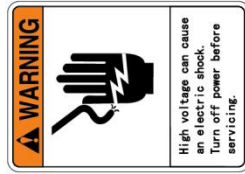

5

High voltage can cause an electric shock. Turn off power before servicing.

| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|-----------------|---------------------------------|---------|-----|
| 1 | G131-0509-00 | 205.1.1707K.020 | AAMA warning decal | 1.1 | 2 |
| 2 | G131-0508-00 | 2.56.00.000096A | Orange label(s) | 1.1 | 2 |
| 3 | G131-0503-00 | 2.56.00.000036A | High voltage label(s) | 1.1 | 2 |
| 4 | G131-0512-00 | 205.1.1605A.040 | Adapter PVC | 1.1 | 2 |
| 5 | G131-0534-00 | 2.56.00.000037 | High voltage label(l) | 1.1 | 2 |
| 6 | G131-0533-00 | 205.2.2369.024 | Fuse board instruction decal | 1.1 | 1 |
| 7 | G131-0525-00 | 205.2.2369.019 | 110V nameplate | 1.1 | 1 |
| 8 | G131-0510-00 | 2.56.00.000125A | 110V decal | 1.1 | 1 |
| 9 | G131-0506-00 | 2.56.00.000077 | Fuse decal | 1.1 | 1 |
| 10 | G131-0504-00 | 2.56.00.000042A | Green decal | 1.1 | 1 |
| 11 | G131-0507-00 | 2.56.00.000095A | Orange label(l) | 1.1 | 1 |
| 12 | G131-0505-00 | 2.56.00.000067A | Yellow decal | 1.1 | 1 |
| 13 | G131-0502-00 | 2.56.00.000017 | Power sw decal | 1.1 | 1 |
| 14 | G131-0514-00 | 205.4.2323.0024 | Counter decal(with mini screen) | 1.1 | 1 |
| 15 | G131-0528-00 | 205.4.2323.029 | Counter decal | 1.1 | 2 |

9.10 Electrical Components



| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|-------------------------|---------|--------------------|
| 1 | G131-0431-00 | 2.20.02.020060 | 2835 blue light strip | 1.1 | 124.40 in (3160mm) |
| | G131-0445-00 | 2.17.04.000260 | 500 light board | 1.1 | 2 |
| | G131-0446-00 | 2.17.04.000258 | 100 light board | 1.1 | 3 |
| 2 | G131-0430-00 | 2.20.02.020057 | 2835 yellow light strip | 1.1 | 11.02 in (280mm) |
| 3 | G131-0431-00 | 2.20.02.020060 | 2835 blue light strip | 1.1 | 14.96 in (380mm) |
| 4 | G131-0431-00 | 2.20.02.020060 | 2835 blue light strip | 1.1 | 62.40 in (1585mm) |
| 5 | G131-0453-00 | 2.12.01.000064 | Display pitch | 1.1 | 10 |
| 6 | G131-0456-00 | 2.20.03.230066 | Down light(blue) | 1.1 | 1 |
| | G131-0457-00 | 2.20.03.230067 | Down light(yellow) | 1.1 | 1 |
| 7 | G131-0430-00 | 2.20.02.020057 | 2835 yellow light strip | 1.1 | 5.90 in (150mm) |
| 8 | G131-0431-00 | 2.20.02.020060 | 2835 blue light strip | 1.1 | 5.90 in (150mm) |
| 9 | G131-0447-00 | 297.9.2402001 | Score display | 1.1 | 1 |
| | G131-0448-00 | 2.17.06.000113 | Score display | 1.1 | 1 |
| 10 | G131-0444-00 | 2.24.02.070014 | Button board | 1.1 | 8 |
| 11 | G131-0438-00 | 297.1.1706001 | 4 bit display | 1.1 | 4 |
| 12 | G131-0437-00 | 297.4.1213010 | 3 bit display | 1.1 | 2 |
| 13 | G131-0439-00 | 2.20.02.020099 | 2815 RGB light strip | 1.1 | 23.62 in (600mm) |
| 14 | G131-0429-00 | 2.20.02.015021 | BG5050RGB light strip | 1.1 | 59.05 in (1500mm) |
| 15 | G131-0424-00 | 2.28.01.000047 | Speaker | 1.1 | 1 |
| | G131-0429-00 | 2.20.02.015021 | BG5050RGB light strip | 1.1 | 13.77 in (350mm) |
| 16 | G131-0409-00 | 2.23.06000022 | Coin mechanism | 1.1 | 1 |
| 17 | G131-0410-00 | 2.31.00000015 | Ticket dispenser | 1.1 | 1 |
| 18 | G131-0408-00 | 2.20.02.015019 | BG5050W light strip | 1.1 | 23.62 in (600mm) |
| 19 | G131-0430-00 | 2.20.02.020057 | 2835 yellow light strip | 1.1 | 62.40 in (1585mm) |
| 20 | G131-0423-00 | 2.20.03.080031 | 5630 light | 1.1 | 2 |
| 21 | G131-0429-00 | 2.20.02.015021 | BG5050RGB light strip | 1.1 | 41.33 in (1050mm) |
| 22 | G131-0429-00 | 2.20.02.015021 | BG5050RGB light strip | 1.1 | 27.55 in (700mm) |
| 23 | G131-0430-00 | 2.20.02.020057 | 2835 yellow light strip | 1.1 | 36.22 in (920mm) |
| | G131-0431-00 | 2.20.02.020060 | 2835 blue light strip | 1.1 | 36.22 in (920mm) |
| 24 | G131-0408-00 | 2.20.02.015019 | BG5050W light strip | 1.1 | 37.40 in (950mm) |



| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|-------------------------|---------|------------------|
| 1 | G131-0430-00 | 2.20.02.020057 | 2835 yellow light strip | 1.1 | 36.22 in (920mm) |
| 2 | G131-0430-00 | 2.20.02.020057 | 2835 yellow light strip | 1.1 | 25.98 in (660mm) |



| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|-----------------------|---------|------------------|
| 1 | G131-0431-00 | 2.20.02.020060 | 2835 blue light strip | 1.1 | 36.22 in (920mm) |
| 2 | G131-0431-00 | 2.20.02.020060 | 2835 blue light strip | 1.1 | 25.98 in (660mm) |



| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|----------------------|---------|------------------|
| 1 | G131-0438-00 | 297.1.1706001 | 4 bit display | 1.1 | 2 |
| 2 | G131-0437-00 | 297.4.1213010 | 3 bit display | 1.1 | 1 |
| 3 | G131-0439-00 | 2.20.02.020099 | 2815 RGB light strip | 1.1 | 23.62 in (600mm) |
| 4 | G131-0403-00 | 2.20.03.230064 | RGB light | 1.1 | 1 |
| | G131-0404-00 | 2.15.02.000023 | Switch sensor | 1.1 | 1 |




| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|--------------------|---------|-----|
| 1 | G131-0456-00 | 2.20.03.230066 | Down light(blue) | 1.1 | 1 |
| | G131-0457-00 | 2.20.03.230067 | Down light(yellow) | 1.1 | 1 |
| 2 | G131-0458-00 | 2.28.01.000085 | 4" Speaker | 1.1 | 1 |
| 3 | G131-0451-00 | 2.34.01.004007 | Blower | 1.1 | 2 |




| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|-------------------------|---------|-------------------|
| 1 | G131-0431-00 | 2.20.02.020060 | 2835 blue light strip | 1.1 | 62.40 in (1585mm) |
| 2 | G131-0430-00 | 2.20.02.020057 | 2835 yellow light strip | 1.1 | 62.40 in (1585mm) |
| 3 | G131-0453-00 | 2.12.01.000064 | Display pitch | 1.1 | 10 |
| 4 | G131-0447-00 | 297.9.2402001 | Score display | 1.1 | 1 |
| | G131-0448-00 | 2.17.06.000113 | Score display | 1.1 | 1 |
| 5 | G131-0445-00 | 2.17.04.000260 | 500 light board | 1.1 | 2 |
| 6 | G131-0445-00 | 2.17.04.000260 | 500 light board | 1.1 | 2 |
| 7 | G131-0446-00 | 2.17.04.000258 | 100 light board | 1.1 | 1 |



| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|-----------------------|---------|------------------|
| 1 | G131-0440-00 | 2.24.01.000005 | Button | 1.1 | 1 |
| | G131-0441-00 | 2.26.04.000006 | Micro SW | 1.1 | 1 |
| | G131-0442-00 | 2.20.03.000018 | LED light blub | 1.1 | 1 |
| 2 | G131-0424-00 | 2.28.01.000047 | Speaker | 1.1 | 1 |
| | G131-0429-00 | 2.20.02.015021 | BG5050RGB light strip | 1.1 | 13.77 in (350mm) |
| 3 | G131-0388-00 | 206.4.2323.051 | Kong hammer | 1.1 | 1 |
| | G131-0389-00 | 206.4.2323.050 | Godzilla hammer | 1.1 | 1 |


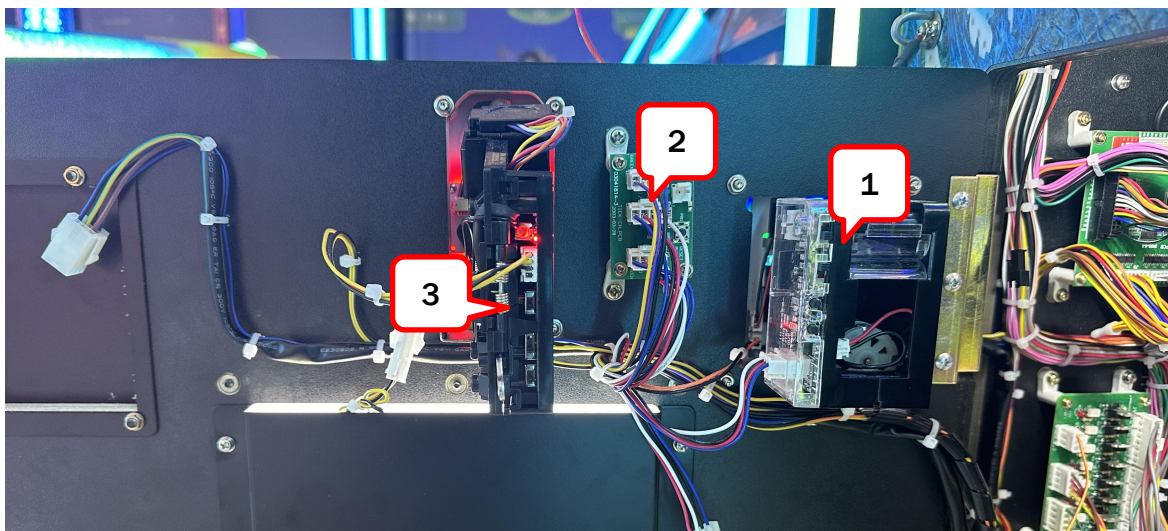


| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|---------------|------------------------|---------|-----|
| 1 | G131-0410-00 | 2.31.00000015 | Ticket dispenser | 1.1 | 1 |
| 2 | G131-0426-00 | 297.9.0700002 | Ticket converted board | 1.1 | 1 |
| 3 | G131-0409-00 | 2.23.06000022 | Coin mechanism | 1.1 | 1 |

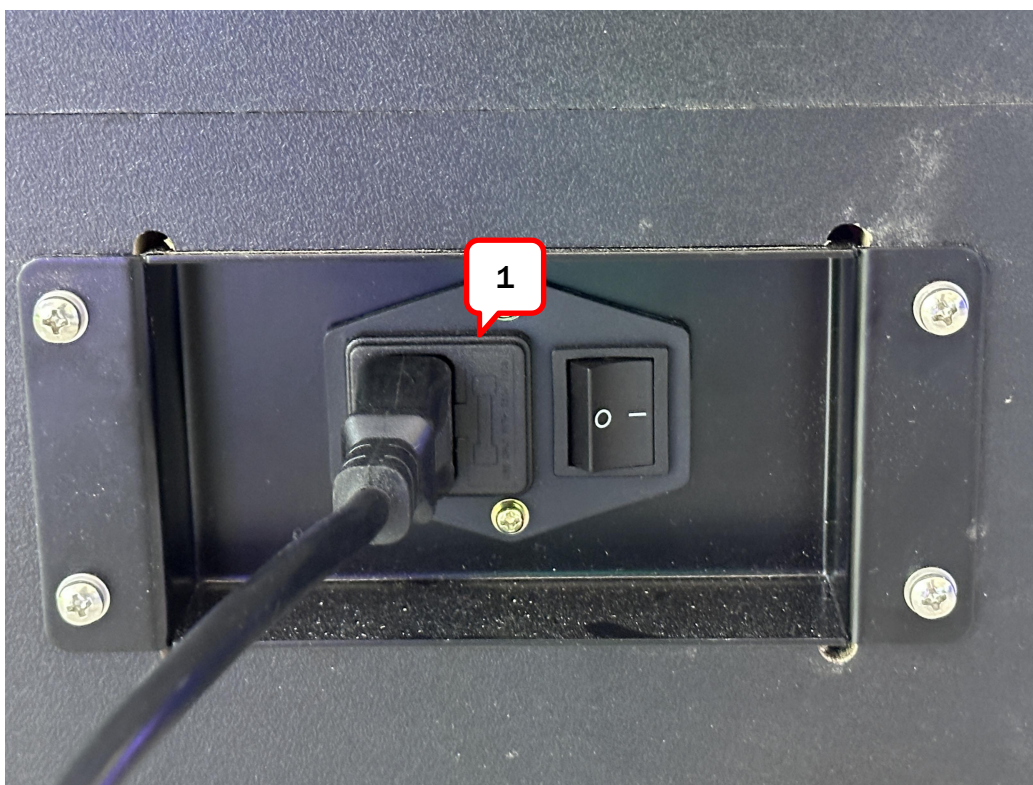


| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|---------------|--------|---------|-----|
| 1 | G131-0436-00 | 2.32.01000007 | Filter | 1.1 | 1 |

P1 Position:

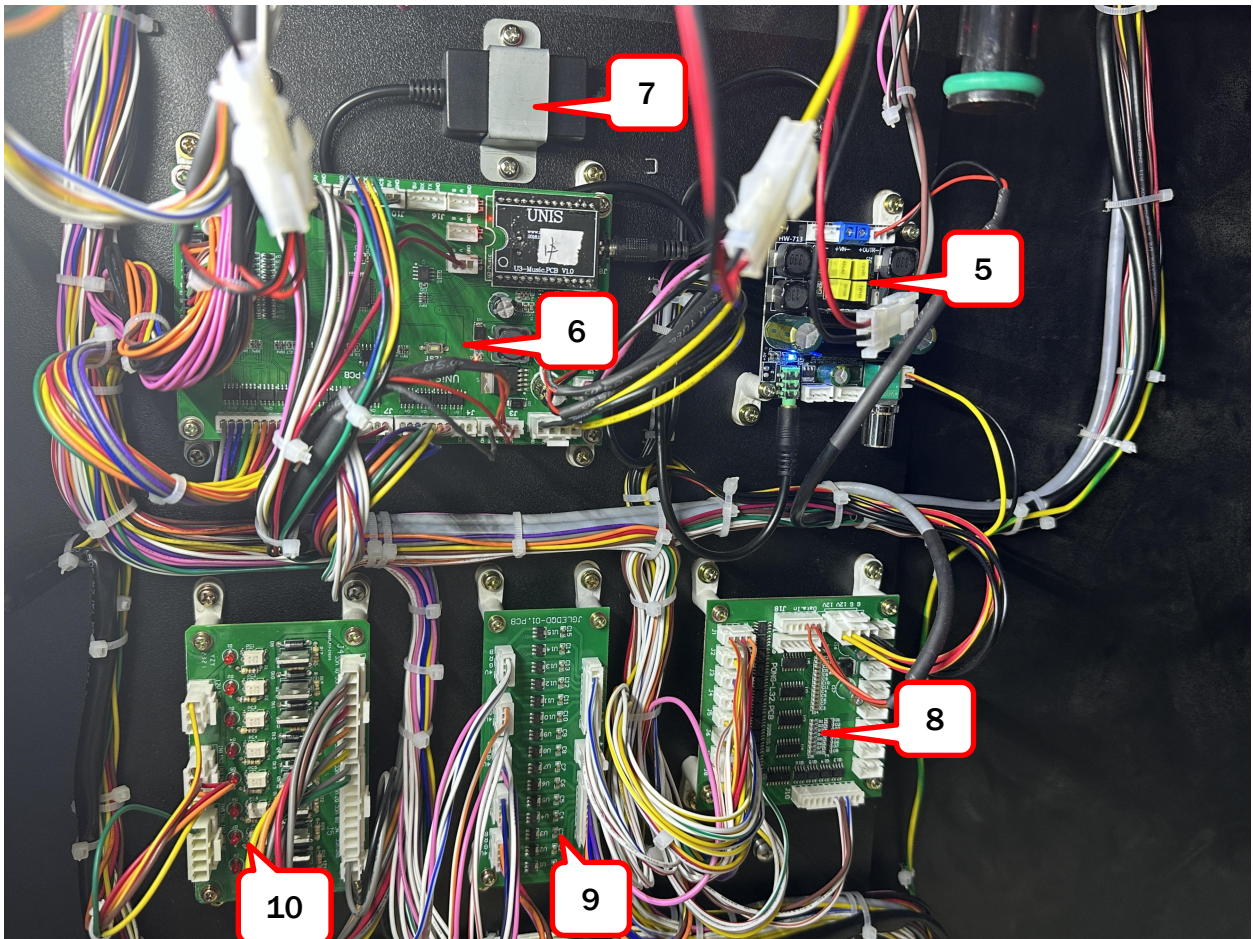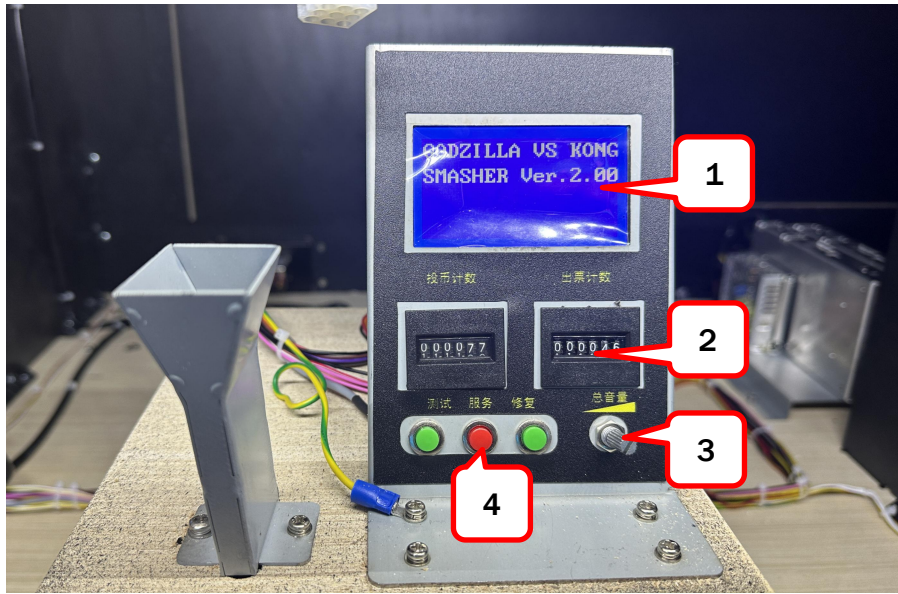


| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|----------------------|---------|-----|
| 1 | G131-0411-00 | 2.12.01.000033 | Mini screen | 1.1 | 1 |
| 2 | G131-0407-00 | 2.30.00000006 | Counter | 1.1 | 2 |
| 3 | G131-0414-00 | 297.9.1400001 | POT board | 1.1 | 1 |
| | G131-0415-00 | 2.24.03.000001 | POT knob | 1.1 | 1 |
| 4 | G131-0419-00 | 2.24.02.010001 | Red button | 1.1 | 1 |
| | G131-0420-00 | 2.24.02.030001 | Green button | 1.1 | 2 |
| 5 | G131-0433-00 | 2.28.03.010011 | Amplifier | 1.1 | 1 |
| | G131-0434-00 | 2.33.05.000008 | Audio cable | 1.1 | 1 |
| 6 | G131-0416-00 | 297.9.2310001 | T6 mainboard | 1.1 | 1 |
| | G131-0417-00 | 297.9.0300005 | U3 music board | 1.1 | 1 |
| 7 | G131-0435-00 | 2.28.07.000003 | Audio isolator | 1.1 | 1 |
| 8 | G131-0427-00 | 297.6.2012001 | Light control board | 1.1 | 1 |
| 9 | G131-0428-00 | 297.9.2310005 | Constant drive board | 1.1 | 1 |
| 10 | G131-0425-00 | 297.1.1208002 | Drive board | 1.1 | 1 |

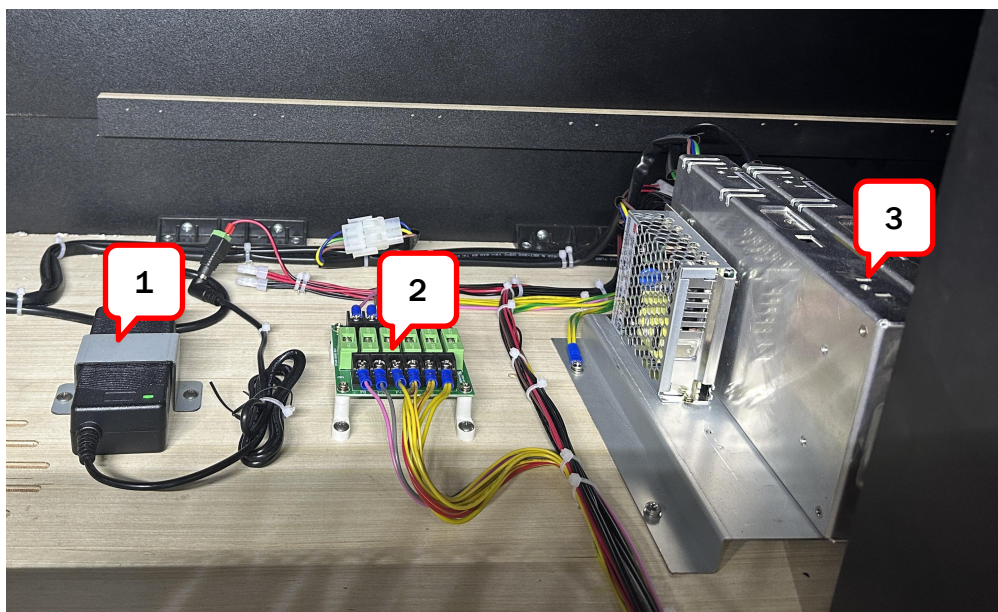

| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|-----------------|-------------------|---------|-----|
| 1 | G131-0412-00 | 2.16.03.000027 | Adapter | 1.1 | 1 |
| 2 | G131-0406-00 | 2.17.14.000243A | Fuse board | 1.1 | 1 |
| 3 | G131-0421-00 | 2.16.02.000117 | Power supply(12V) | 1.1 | 1 |
| | G131-0422-00 | 2.16.02.000105 | Power supply(24V) | 1.1 | 1 |
| | G131-0432-00 | 2.16.02.000185 | Power supply | 1.1 | 1 |

P2 Position:


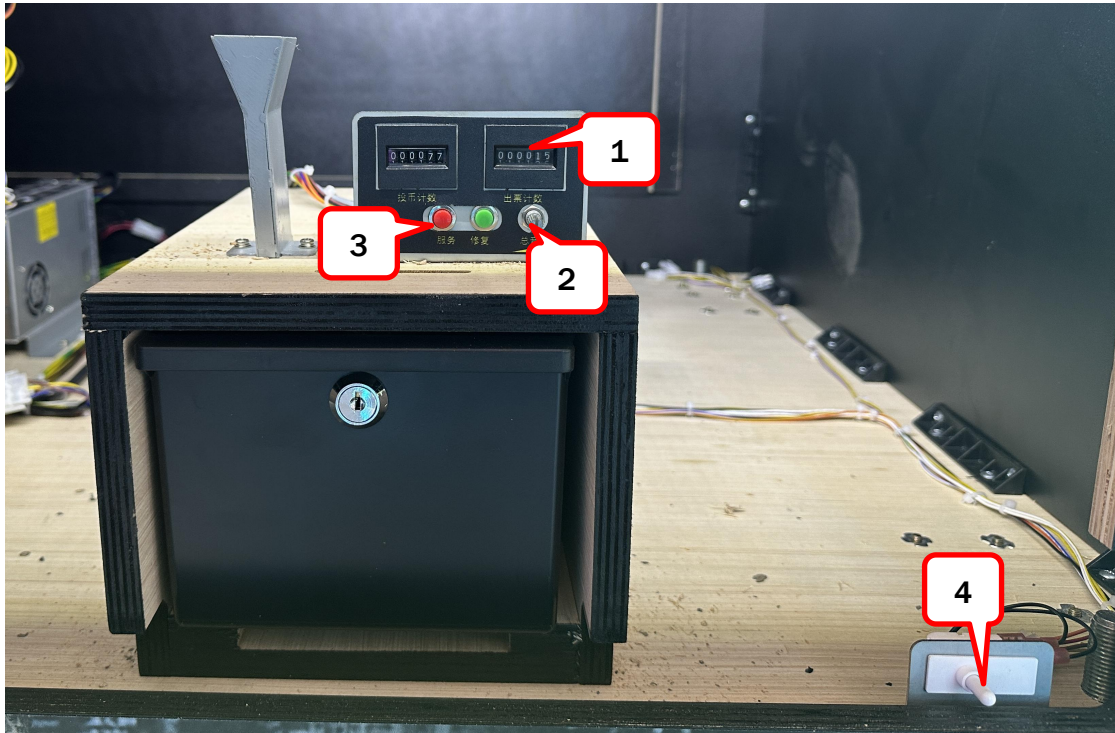


| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|-------------------|---------|-----|
| 1 | G131-0407-00 | 2.30.00000006 | Counter | 1.1 | 2 |
| 2 | G131-0414-00 | 297.9.1400001 | POT board | 1.1 | 1 |
| | G131-0415-00 | 2.24.03.000001 | POT knob | 1.1 | 1 |
| 3 | G131-0419-00 | 2.24.02.010001 | Red button | 1.1 | 1 |
| | G131-0420-00 | 2.24.02.030001 | Green button | 1.1 | 1 |
| 4 | G131-0418-00 | 2.26.01.040015 | Door interlock sw | 1.1 | 1 |




| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|----------------|-----------------|---------|-----|
| 1 | G131-0388-00 | 206.4.2323.051 | Kong hammer | 1.1 | 1 |
| 2 | G131-0389-00 | 206.4.2323.050 | Godzilla hammer | 1.1 | 1 |

Top marquee cabinet

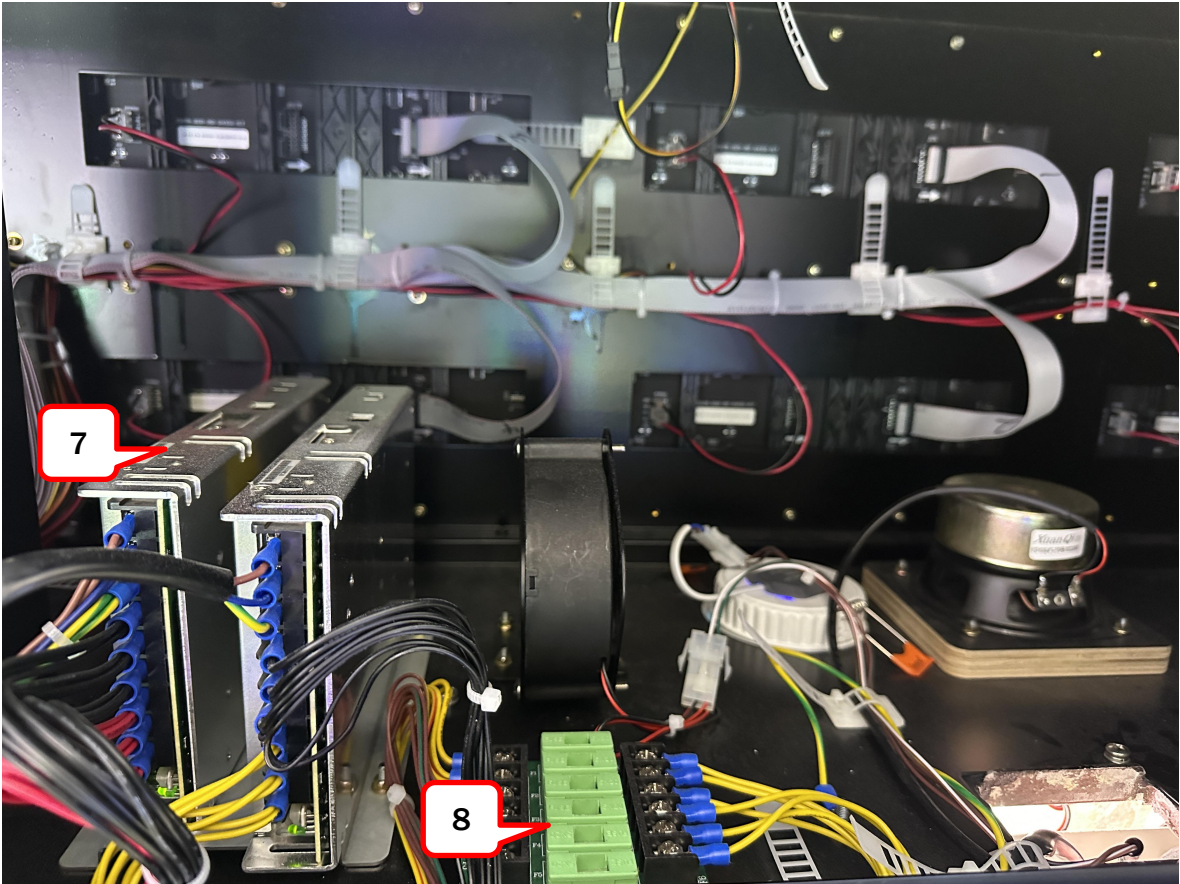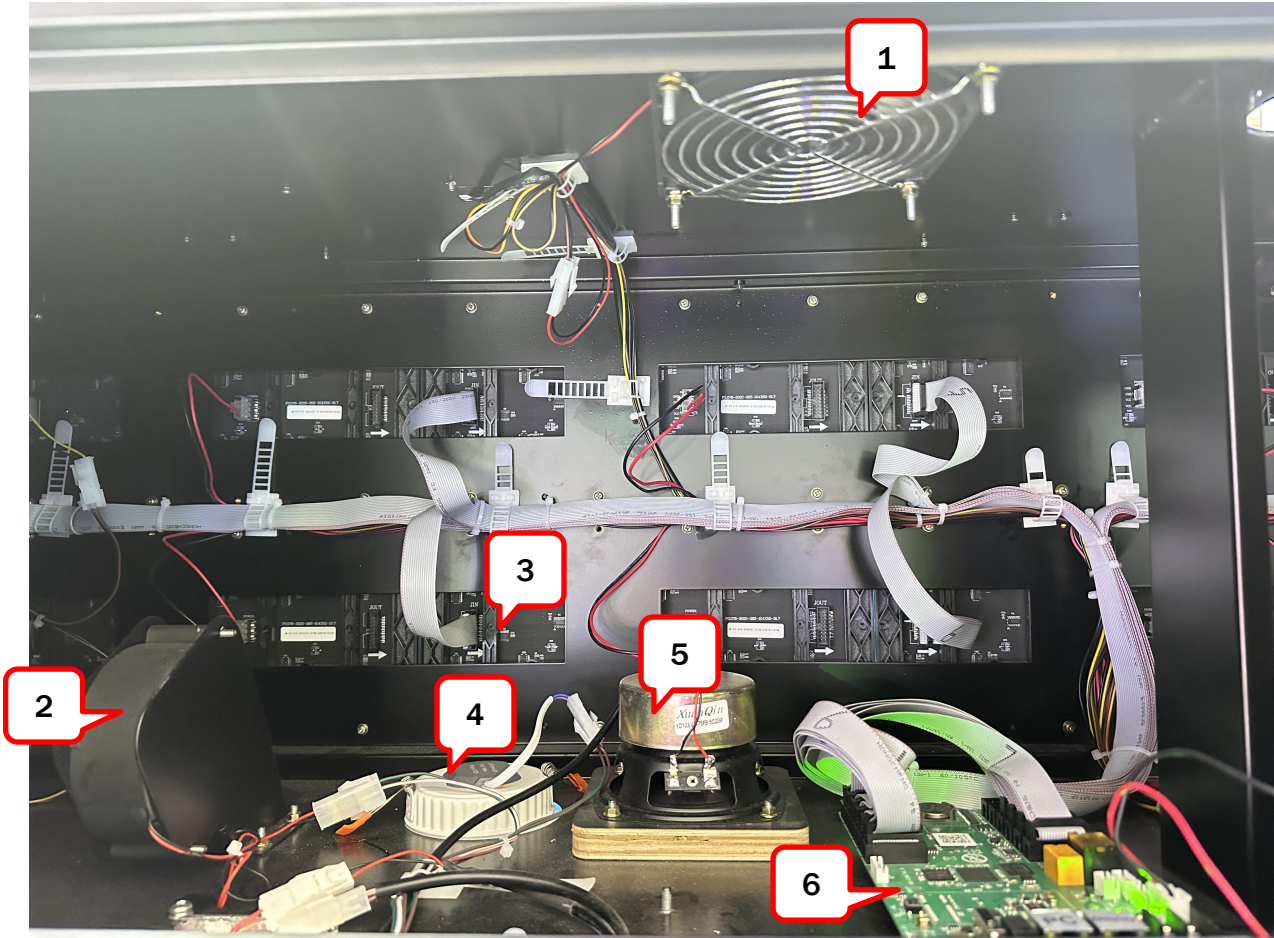

| No. | Part No. | Code No. | Name | Version | Qty |
|-----|--------------|-----------------|--------------------|---------|-----|
| 1 | G131-0454-00 | 2.27.02.050017 | Fan | 1.1 | 1 |
| | G131-0455-00 | 2.27.02.000010 | Fan net | 1.1 | 2 |
| 2 | G131-0451-00 | 2.34.01.004007 | Blower | 1.1 | 1 |
| 3 | G131-0453-00 | 2.12.01.000064 | Display pitch | 1.1 | 10 |
| 4 | G131-0456-00 | 2.20.03.230066 | Down light(blue) | 1.1 | 1 |
| | G131-0457-00 | 2.20.03.230067 | Down light(yellow) | 1.1 | 1 |
| 5 | G131-0458-00 | 2.28.01.000085 | 4" Speaker | 1.1 | 1 |
| 6 | G131-0452-00 | 297.9.2401001 | Control card board | 1.1 | 1 |
| 7 | G131-0421-00 | 2.16.02.000117 | Power supply(12V) | 1.1 | 1 |
| | G131-0450-00 | 2.16.02.020005 | Power supply(5V) | 1.1 | 1 |
| 8 | G131-0406-00 | 2.17.14.000243A | Fuse board | 1.1 | 1 |

www.unistechnology.com

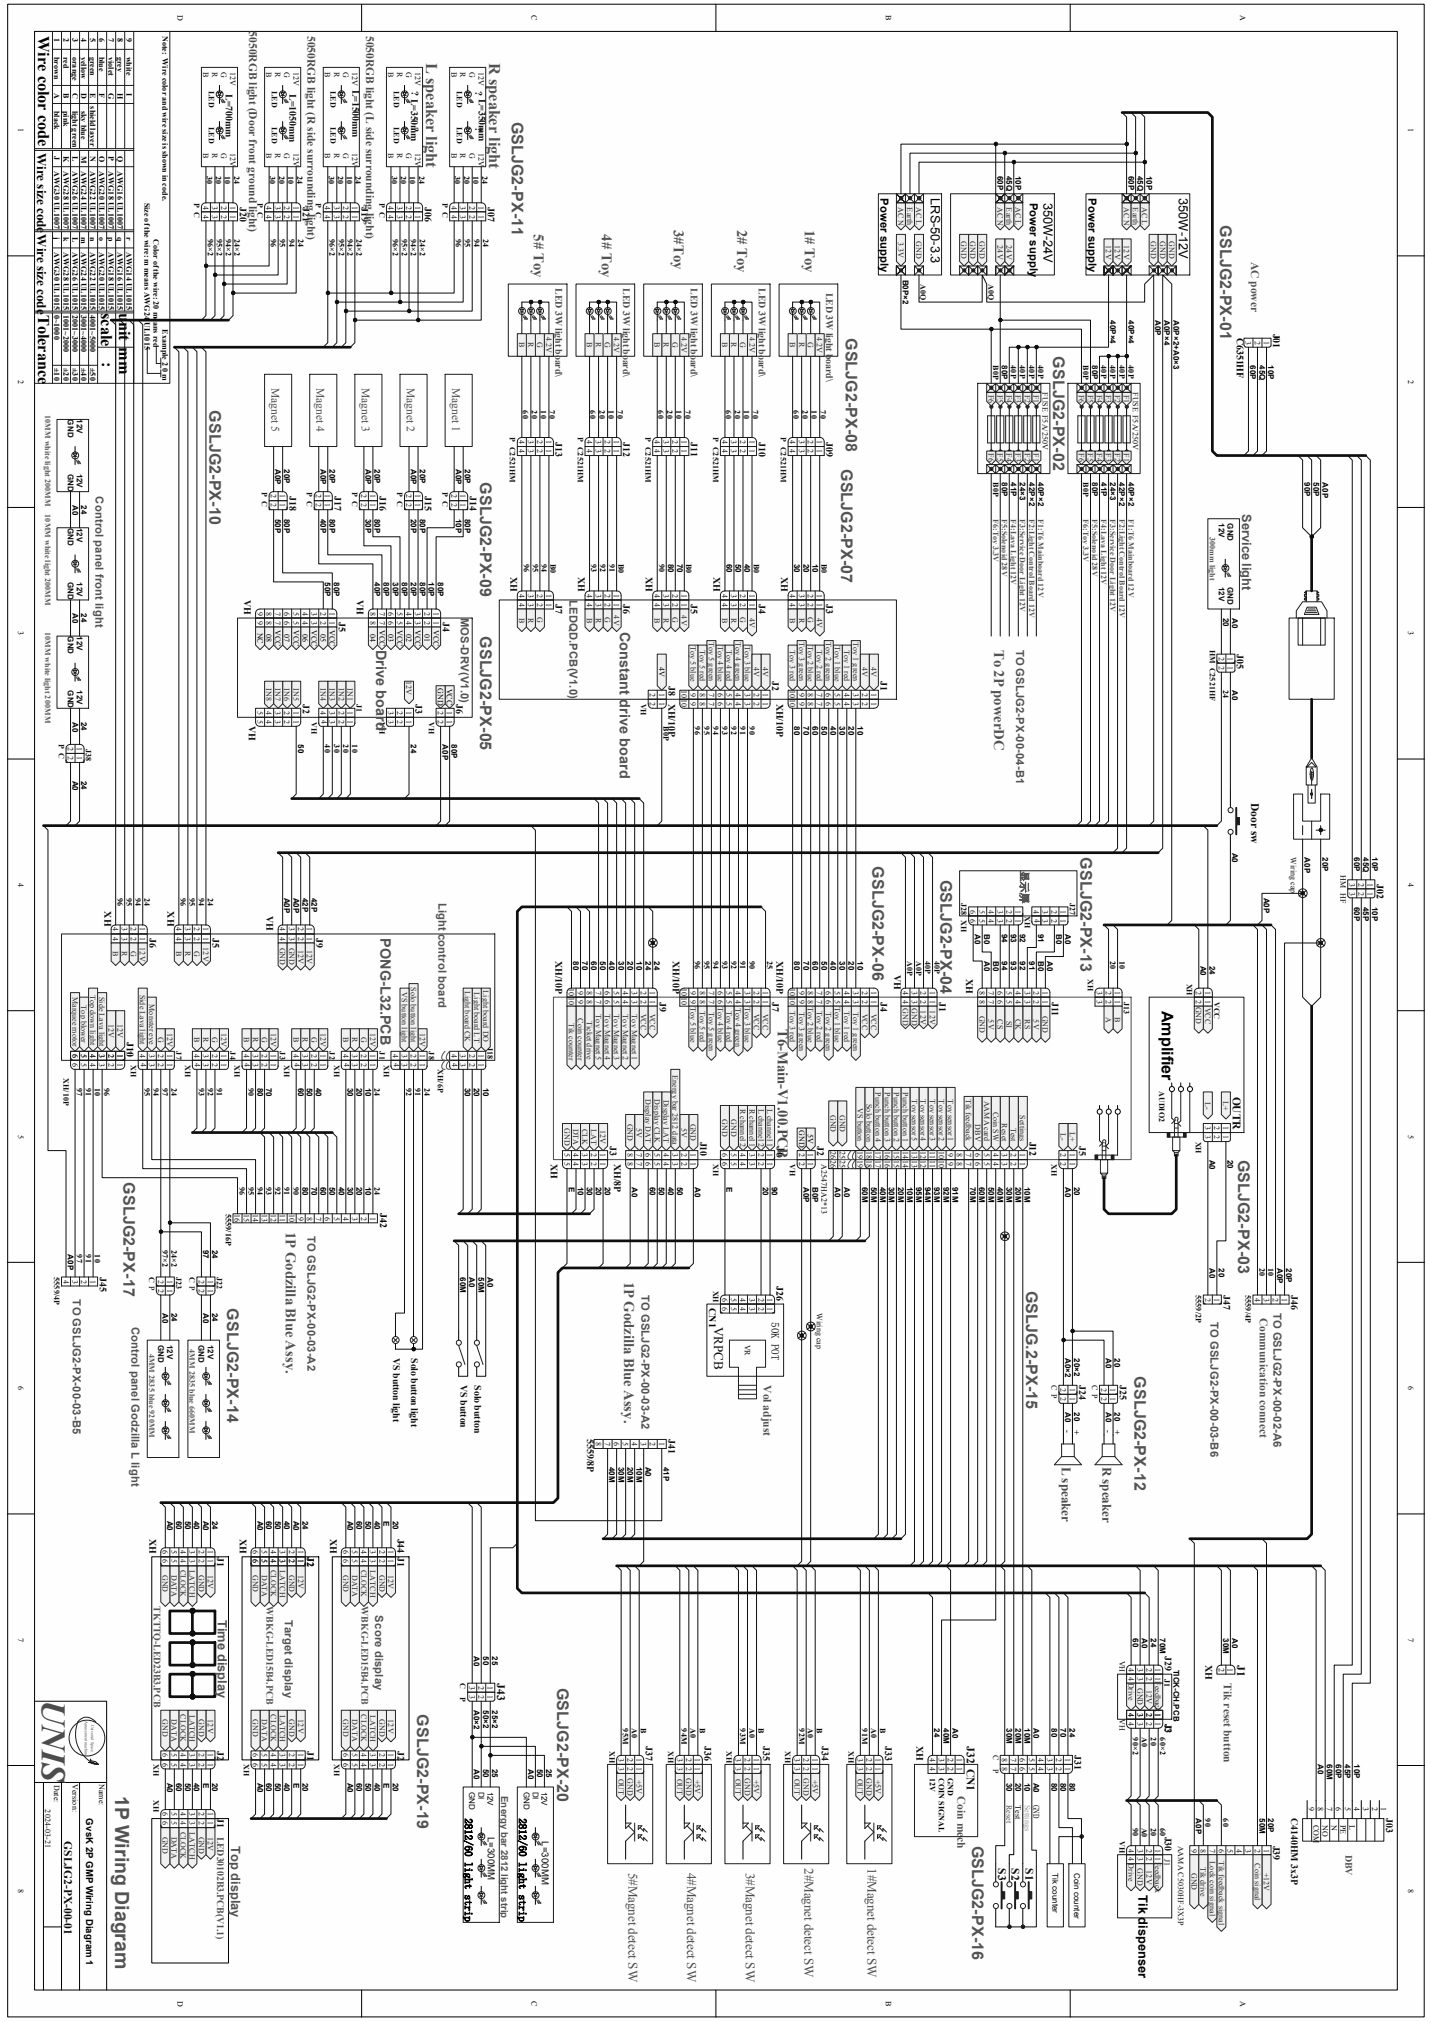

Wire color code Wire size code Wire size code 1 Tolerance

| Color | Wire Size | Code | Code | Code | Code |
|-------|-----------|------|------|------|------|
| R | AWG#18 | 18R | 18R | 18R | 18R |
| Y | AWG#18 | 18Y | 18Y | 18Y | 18Y |
| G | AWG#18 | 18G | 18G | 18G | 18G |
| B | AWG#18 | 18B | 18B | 18B | 18B |
| W | AWG#18 | 18W | 18W | 18W | 18W |
| K | AWG#18 | 18K | 18K | 18K | 18K |
| R | AWG#22 | 22R | 22R | 22R | 22R |
| Y | AWG#22 | 22Y | 22Y | 22Y | 22Y |
| G | AWG#22 | 22G | 22G | 22G | 22G |
| B | AWG#22 | 22B | 22B | 22B | 22B |
| W | AWG#22 | 22W | 22W | 22W | 22W |
| K | AWG#22 | 22K | 22K | 22K | 22K |
| R | AWG#24 | 24R | 24R | 24R | 24R |
| Y | AWG#24 | 24Y | 24Y | 24Y | 24Y |
| G | AWG#24 | 24G | 24G | 24G | 24G |
| B | AWG#24 | 24B | 24B | 24B | 24B |
| W | AWG#24 | 24W | 24W | 24W | 24W |
| K | AWG#24 | 24K | 24K | 24K | 24K |









IP Wiring Diagram














 

UNIS

Model: Gsk 2P GMP Wiring Diagram 1

Part No: GSLJG2-PX-001

Date: 2024.03.21

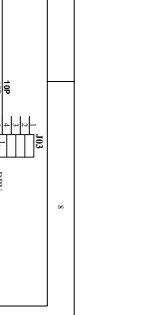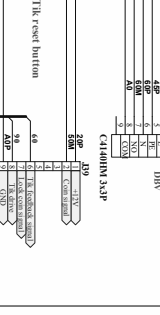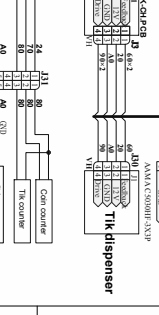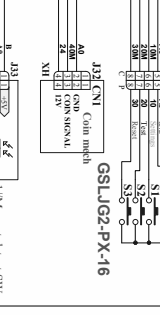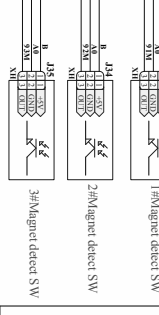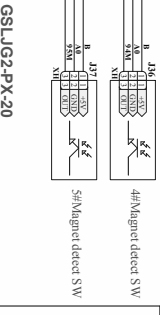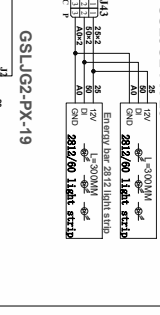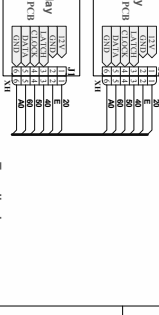

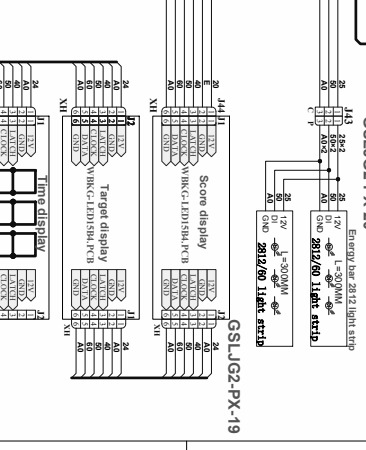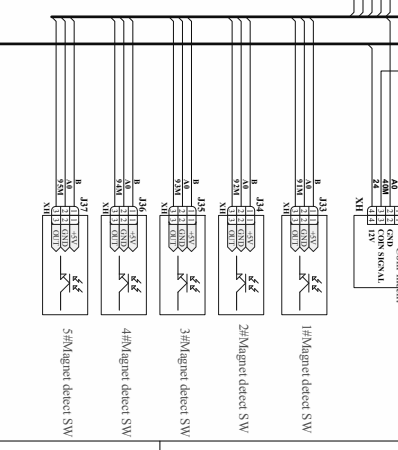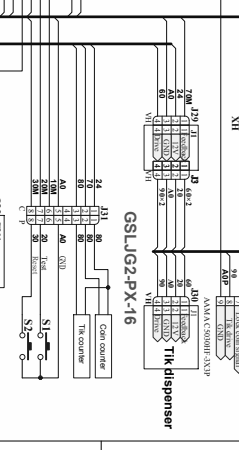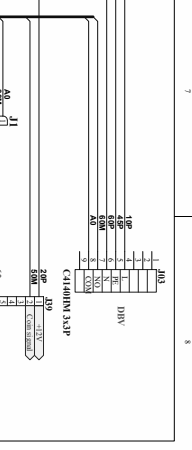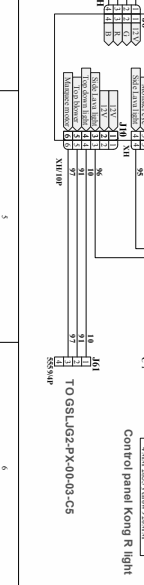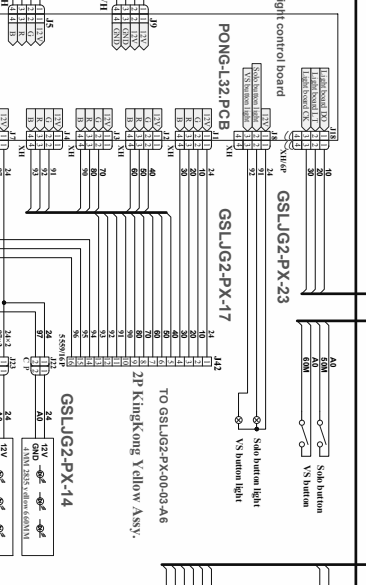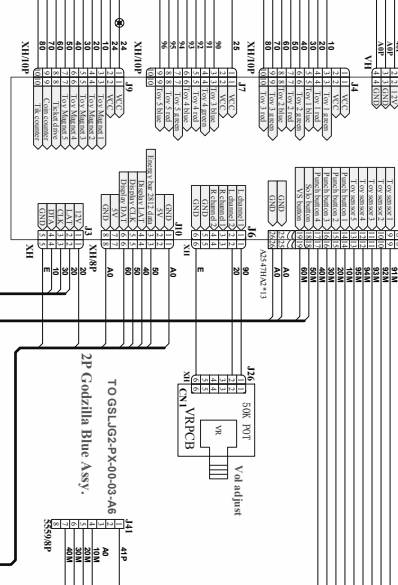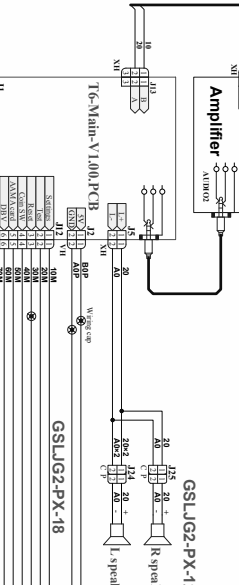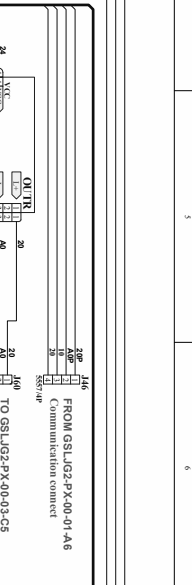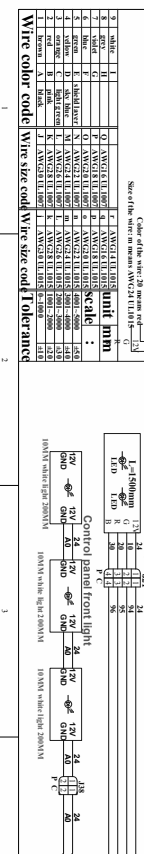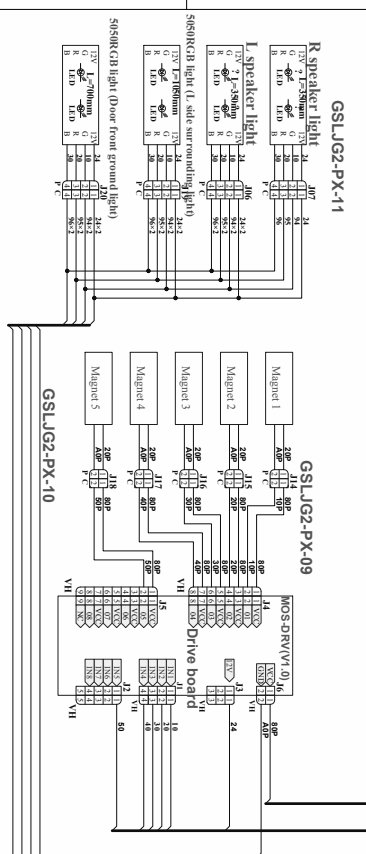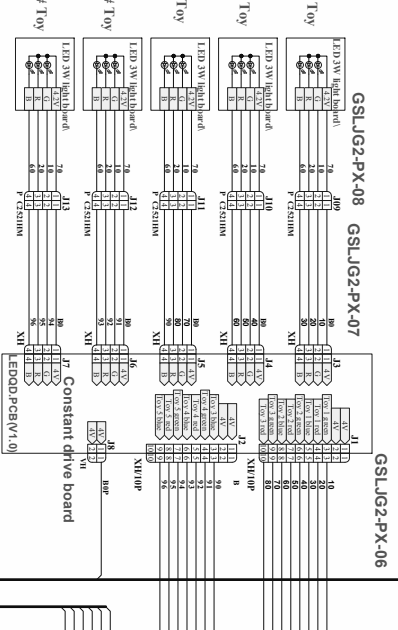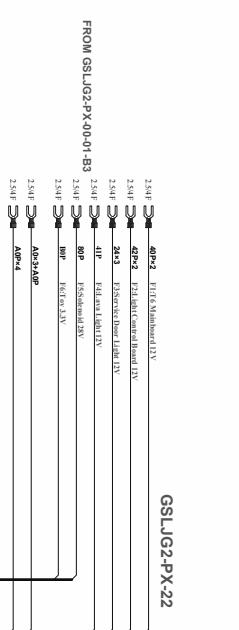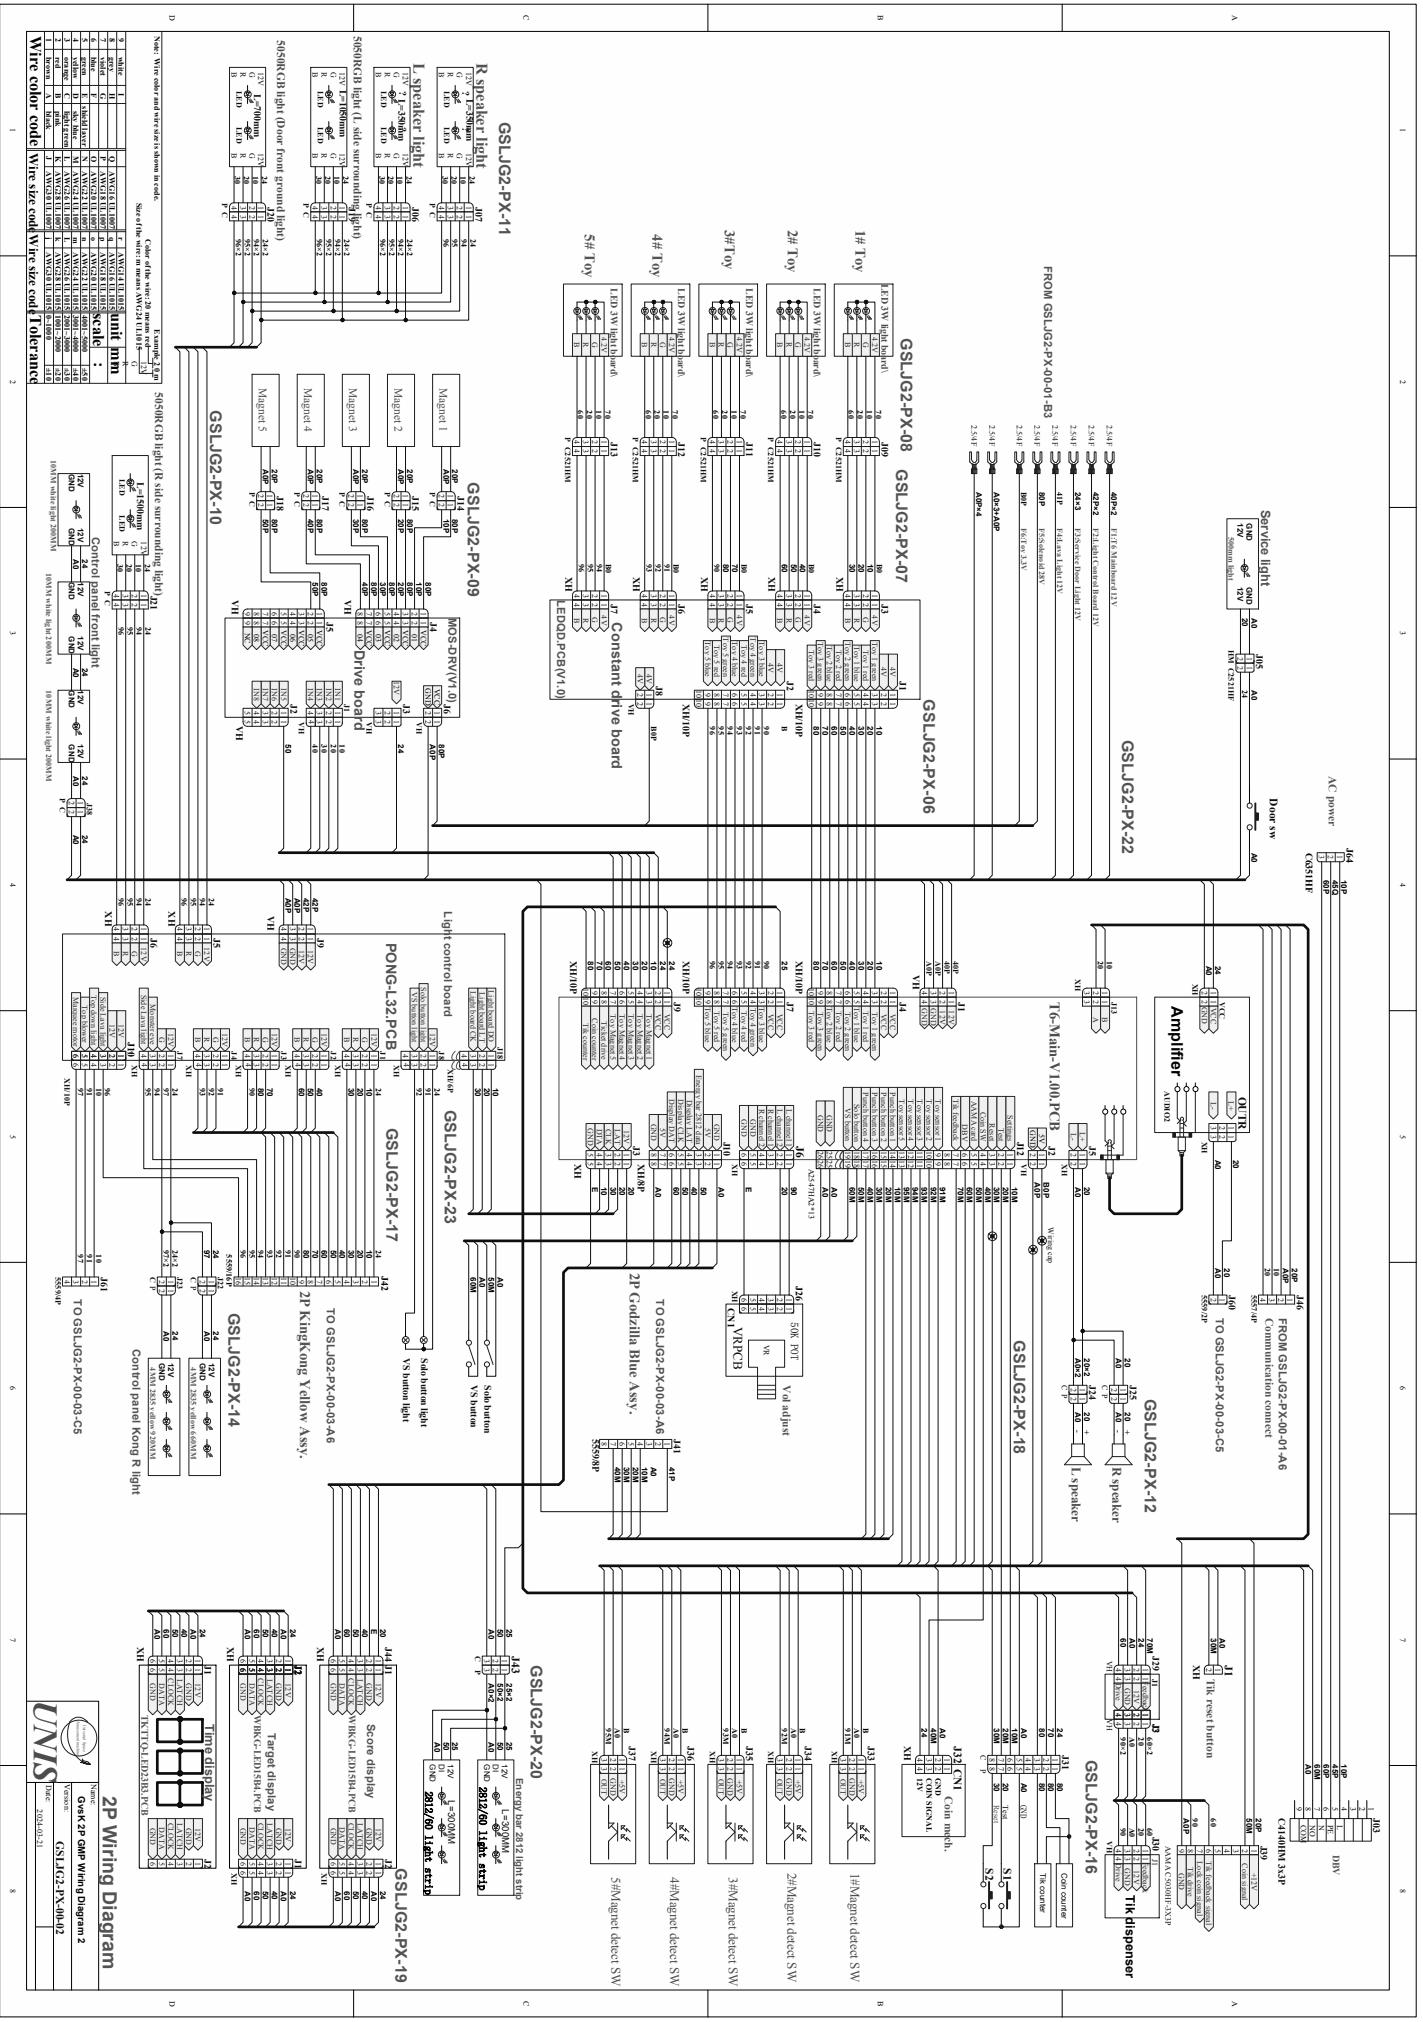

| Wire color | Wire size | Code | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
|--------------------|-----------|-------|---|---|---|---|---|---|---|---|
| Red | 0.35mm | R | | | | | | | | |
| Blue | 0.35mm | B | | | | | | | | |
| Green | 0.35mm | G | | | | | | | | |
| Yellow | 0.35mm | Y | | | | | | | | |
| Black | 0.35mm | BLK | | | | | | | | |
| White | 0.35mm | WHT | | | | | | | | |
| Brown | 0.35mm | BRN | | | | | | | | |
| Purple | 0.35mm | PUR | | | | | | | | |
| Pink | 0.35mm | PNK | | | | | | | | |
| Grey | 0.35mm | GRY | | | | | | | | |
| Orange | 0.35mm | ORG | | | | | | | | |
| Light Blue | 0.35mm | LBL | | | | | | | | |
| Light Green | 0.35mm | LGR | | | | | | | | |
| Light Yellow | 0.35mm | LYL | | | | | | | | |
| Light Purple | 0.35mm | LPUR | | | | | | | | |
| Light Pink | 0.35mm | LPNK | | | | | | | | |
| Light Grey | 0.35mm | LGRY | | | | | | | | |
| Light Orange | 0.35mm | LORG | | | | | | | | |
| Light Light Blue | 0.35mm | LLBL | | | | | | | | |
| Light Light Green | 0.35mm | LLGR | | | | | | | | |
| Light Light Yellow | 0.35mm | LLYL | | | | | | | | |
| Light Light Purple | 0.35mm | LLPUR | | | | | | | | |
| Light Light Pink | 0.35mm | LLPNK | | | | | | | | |
| Light Light Grey | 0.35mm | LLGRY | | | | | | | | |
| Light Light Orange | 0.35mm | LLORG | | | | | | | | |



