



Jack Mechanism Error Inspection Instruction For Ultra Moto

Step 1 Press Test button to enter the Main menu. Select [System Settings]→[Electric Jack Settings].


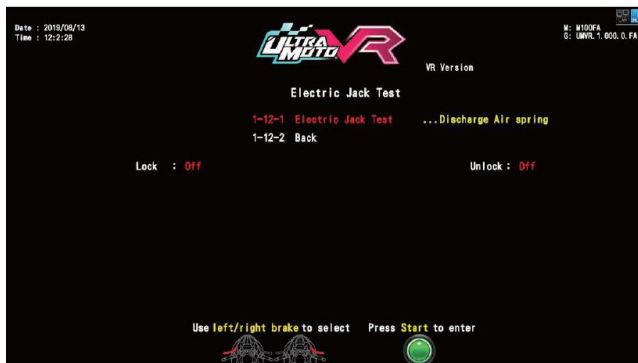


Step 2 Press the [Start] button to start the test. If the Jack mechanism don't move, it means Jack mechanism motor or motor PCB board wrong. Replace motor or motor PCB board.

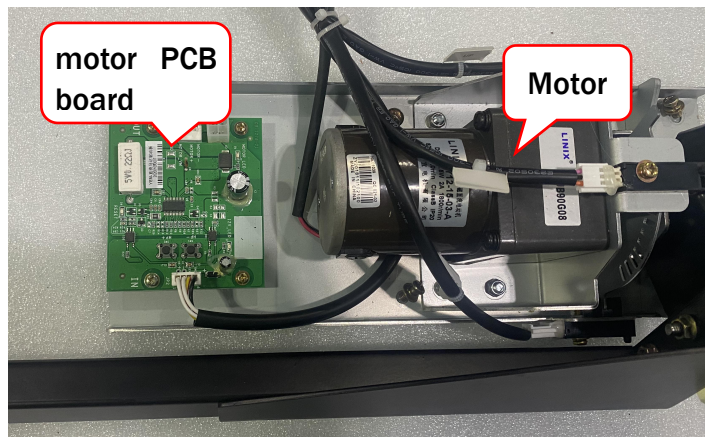


Step 3 If the Jack mechanism moves, but there's still ELECTRIC JACK ERROR. It means the Sensor or the blocking plate wrong.

Step 4 Open the Skirt and Jack mechanism will show. Turn Horizontal rod plate down by hand. If the Monitor "Lock" shows ON and "Unlock" shows OFF, it means sensor wrong.

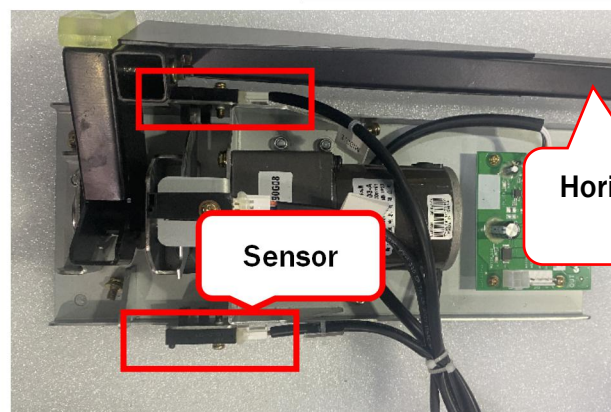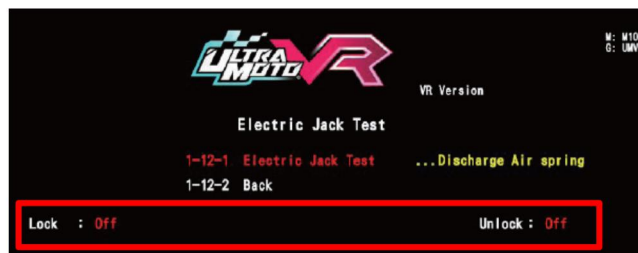

Jack Mechanism Error Inspection Instruction For Ultra Moto

Step 5 Press the [Start] button to start the [Electric Jack Settings] test again. When checking “Lock Jack mechanism position”, the “Lock” and “Unlock” show OFF. It means blocking plate wrong.

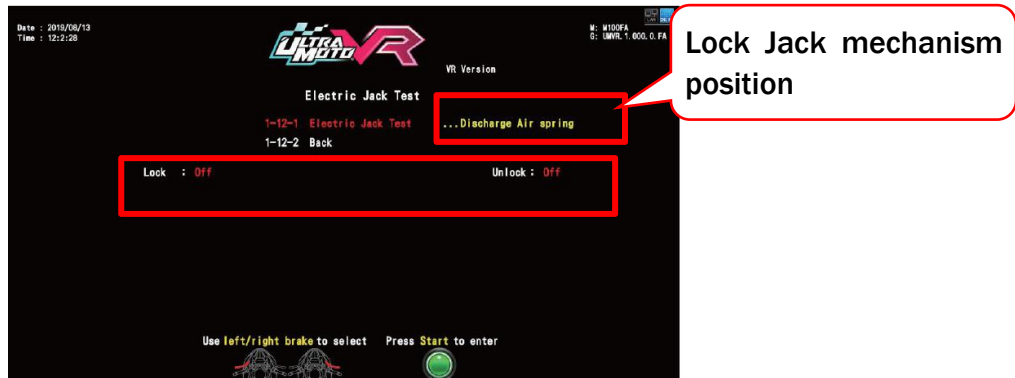

Step 6 Turn the blocking plate to the correct position. Then press the [Start] button to start the [Electric Jack Settings] test.

