

# SPEEDY FEET



Be Sure  
to Read this  
Manual  
Before Use

# Operation Manual



[www.universal-space.com](http://www.universal-space.com)

**WE ARE HERE TO ASSIST**  
**For parts and service**



**Have Questions? Contact us!**

**UNIS SERVICE CENTER**

Tel: 972-241-4263

Email: [service@unispartsandservice.com](mailto:service@unispartsandservice.com)

# CONTENT

|  |    |
|--|----|
| IMPORTANT SAFETY INSTRUCTIONS.....     | 3  |
| 1. SPECIFICATIONS.....                 | 5  |
| 2. PACKAGE CONTENTS.....               | 6  |
| 3. PART NAME.....                      | 7  |
| 4. SET UP & INSTALLATION.....          | 8  |
| 5. HOW TO PLAY.....                    | 12 |
| 6. GAME OPTION.....                    | 14 |
| 7. TROUBLE SHOOTINGS AND RECOVERY..... | 16 |
| 8. MAINTENANCE & INSPECTION.....       | 20 |
| 9. OVERALL CONSTRUCTION.....           | 21 |
| WIRING DIAGRAM.....                    | 35 |

Non-technical personnel who do not have technical knowledge and Expertise should refrain from performing such work that this manual require or perform tasks which are not explained in this manual. Failing to comply can cause severe accidents such as electric shock or other serious injuries. All repairs must be performed to original manufacturer specifications.

**WARNING: To reduce the risk of fire, electric shock or personal injury, unplug or disconnect the machine from the power supply before servicing.**

Thank you for purchasing **Speedy feet**. We hope you enjoy the product.

This manual contains valuable information about how to operate and maintain your game machine properly and safely. It is intended for the owner and/or personnel in charge of product operation. Carefully read and understand the instructions.

If you need any help during installation and setup please utilize this manual and troubleshooting guide. If the product fails to function properly, *non-technical personnel should under no circumstance attempt to service the machine*. Contact your distributor or manufacturer for help.

Before use, please read **IMPORTANT SAFETY INSTRUCTIONS**.

## IMPORTANT SAFETY INSTRUCTIONS

**To ensure the safe usage of this product, carefully read and understand these instructions before operating your game.**

**Save these instructions for future reference.**

Use this product only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury. Unplug the game from the outlet when not in use, when moving from one location to another, and before cleaning/servicing.

Explanations which require special attention are indicated by signs of warning. Depending on the potential hazardous degree, the terms: **NOTE**, **NOTICE**, and **WARNING** are used.

**NOTE:** A NOTE indicates useful hints or information about product usage.

**NOTICE:** A NOTICE indicates potential damage to product and how to avoid the problem.

**WARNING:** A WARNING indicates a potential for product damage or serious personal injury.

It is important to understand the meaning of the following HAZARD SIGNS before continuing:

### High Voltage and Shock Hazard:

High voltage can cause electric shock.  
Turn off/unplug power before servicing.



### High Temperature Hazard:

This part may cause scalding.  
Do not touch. Surface may be hot.



### No Touching Hazard:

This part may be hot or can cause electric shock.  
Do not touch.



Use the following safety guidelines to help ensure your own personal safety and to help protect your equipment and surrounding environment from potential damage.

 **This product is an indoor game machine. Do not install outdoors.**

**Avoid installing in the following places to prevent fire, electric shock, injury and/or machine malfunctioning:**

- Places subject to rain/moisture, or places subject to high humidity.
- Places subject to direct sunlight, or places subject to extremely hot or cold temperatures to ensure that it is used within the specified operating range.
- Places where inflammable gas may be present or in the vicinity of highly inflammable/volatile chemicals or items that can easily catch fire
- On unstable or sloped surfaces. The machine may topple or cause unforeseen accidents.
- Vicinity of fire exits, fire extinguishers etc that may block/prevent safety measures

**IMPORTANT NOTE:**

**ALL REPAIRS MUST BE DONE TO ORIGINAL MANUFACTURER SPECIFICATIONS. FAILURE TO DO SO VOID ALL WARRANTIES AND OPERATOR ASSUMES ALL RISKS.**

Note: The contents of this manual may be updated without notice.

# 1. SPECIFICATIONS

Rated power supply: AC110V~ 50/60Hz; AC220V~ 50/60Hz

Min. Power consumption: 160W

Max. Power consumption: 220W



Dimension: W 43.31×D69.68×H 85.44 in

Weight: Approximately 352.74 lb

Part No: S130

Model No: C-451



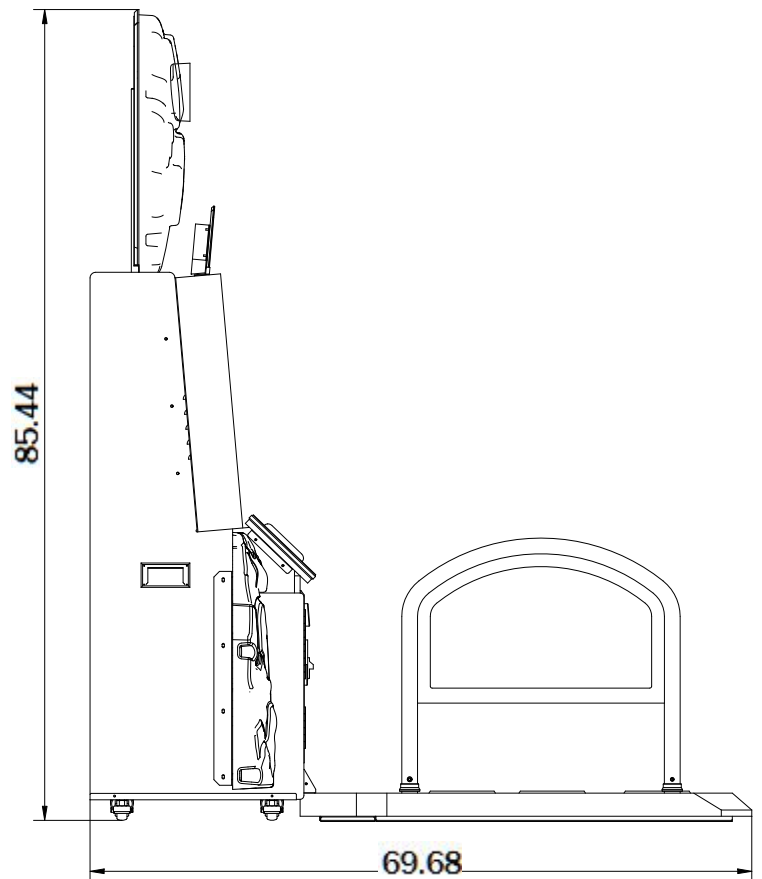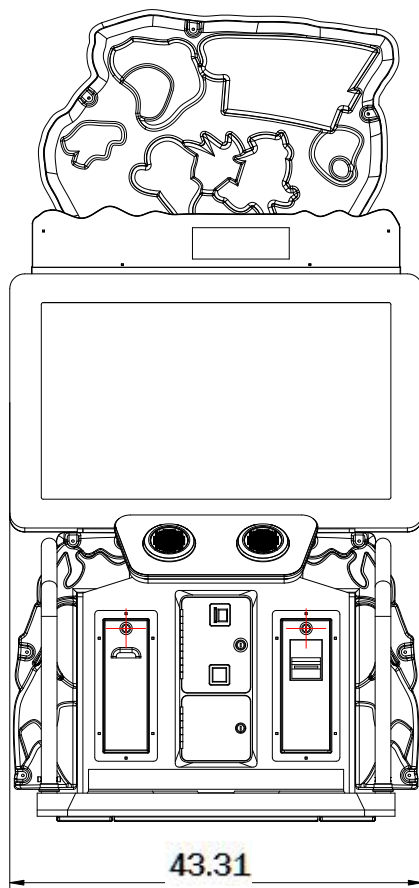



**!** **NOTICE:** After turning off the game, please wait at least **1** minute before restarting again.



## 2. PACKAGE CONTENTS


Open the package and make sure all the items are included:

### 1. Following accessories

| NO. | Part No.     | Code        | Name         | SPEC.                 | Qty | Picture   |
|-----|--------------|-------------|--------------|-----------------------|-----|---|
| 1   | S130-458-000 | 25300172002 | Key          | 171B                  | 2   |    |
| 2   | S130-457-000 | 25300171002 | Key          | 171                   | 2   |    |
| 3   | S130-424-000 | 21901000012 | Fuse         | Φ5×20mm T5A<br>250VAC | 1   |    |
| 4   | S130-732-000 | 41440000089 | Manual       | English               | 1   |    |
| 5   | S130-461-000 | 23301010019 | Power cord   | 3×16AWG 1.8M          | 1   |   |
| 6   | S130-430-000 | 41300000005 | Memory stick | 8G                    | 1   |  |

**NOTE:** Part models are subject to change without notice.

### 3. PART NAME

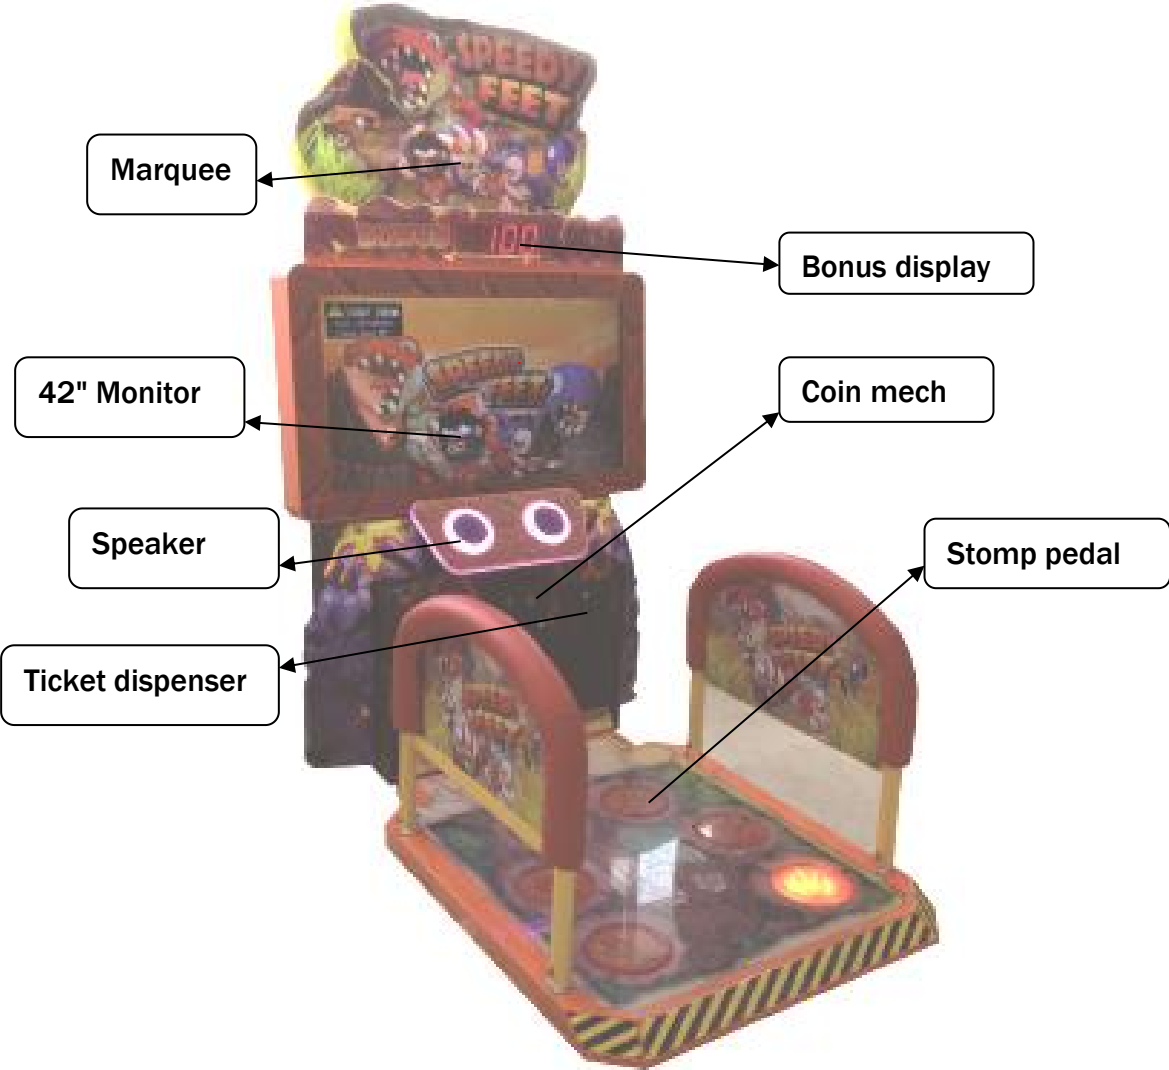



## 4. SET UP & INSTALLATION

### ! NOTICE


We do not recommend using power tools as they may cause damage.

! **This product is an indoor game machine. Do not install outdoors.**

- Refer to IMPORTANT SAFETY INSTRUCTIONS (Pg. 3) for places to avoid
- Place the unit on a dry level surface
- Ventilation openings in the back of the unit must not be obstructed by objects or by wall.

### 4.1 Transporting the Game

If you need to move the game, adjust the levelers back to an “up” position.

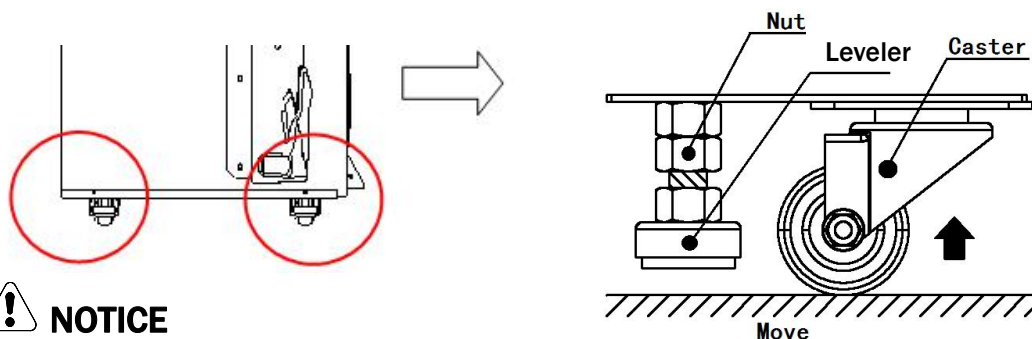


### ! NOTICE

- Be careful not to damage the machine during transport.
- Always unplug the game before moving.
- Keep the machine in upright position during transport.
- For longer distance transport, package the game properly to prevent damages.

### 4.2 Level Adjustment

Install this game on a flat surface. If the game is installed on an unsuitable floor, it could cause game malfunction.

To secure the game, loosen the nut, utilize wrench to adjust the leveler down until it touches the floor, lifting the casters off the ground by 0.2 in. Repeat the same for all levelers.

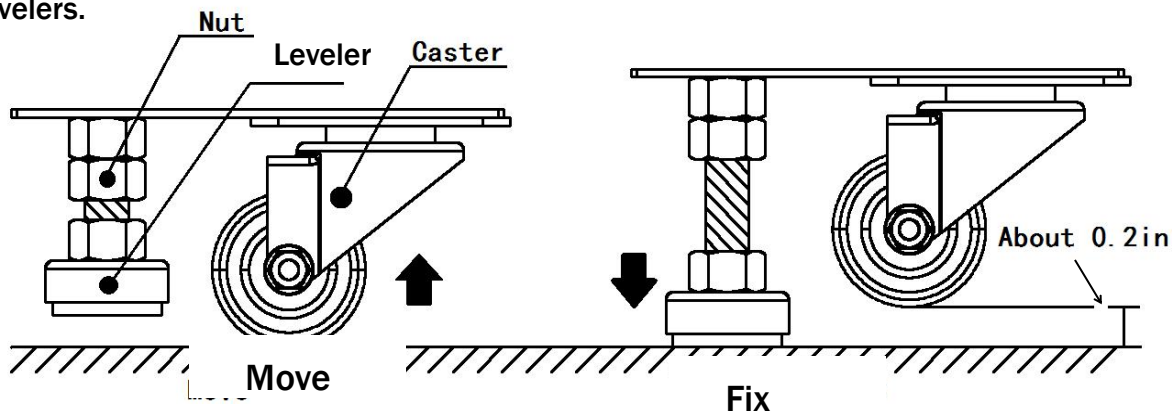


### ! NOTICE

Make sure the machine is level.

### 4.3 Play Zone

This machine requires space for playing and for maintenance as shown below.  
Leave space around the game upon installation:

Service area: 20 in

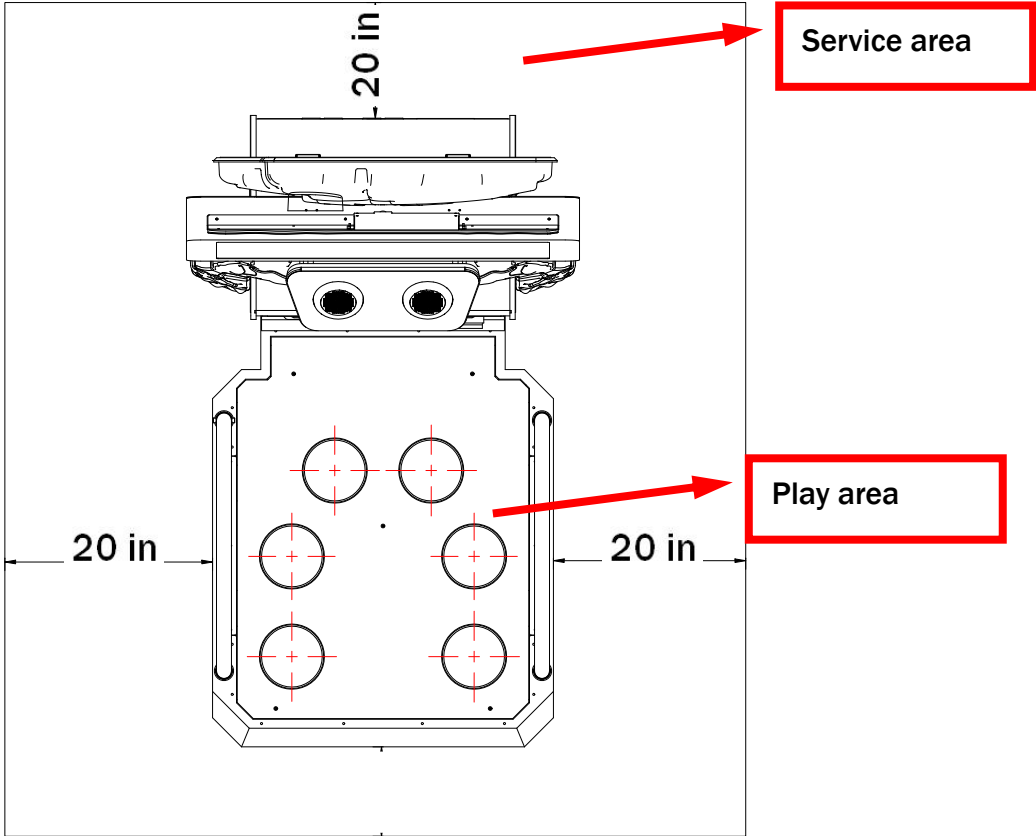

### 4.4 Cabinet Setup



Insert the marquee assembly to the cabinet through the holes on top.



Open the platform connected cover with screw driver.




Connect the cable and fix the connector plate to the cabinet with screws.

## 4.5 Connecting Power


**⚠ WARNING:** Check the voltage rating before you connect the equipment to an electrical outlet to ensure that the required voltage and frequency match the available power source. Please refer the label of the machine.

- Do not plug the equipment power cables into an electrical outlet if the power cable is damaged.
- Avoid overloading on one electrical outlet as it could generate heat and fire resulting from overload.
- Connect the grounding conductor to the earth terminal (GND):

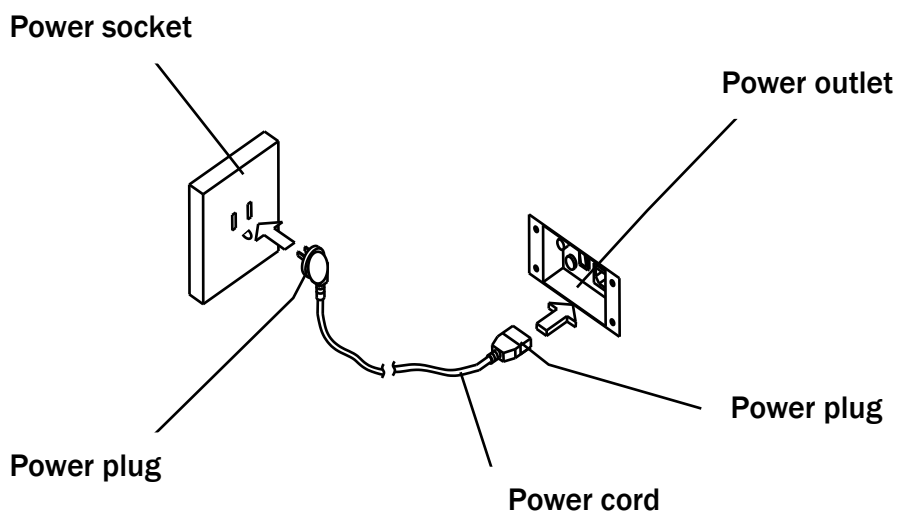


**⚠ WARNING**

Ensure no heavy objects rest on the power cord. Check to make sure the game cabinet does not sit on the power cord as this could damage the cord and become hazardous.



To disconnect the game, grip the plug and pull it from the wall outlet. Never pull by the cord.



To prevent electric shock, do not touch the power plug if your hand is wet.



Ensure the power cord is not located where it can be stepped on or tripped over.



## 5. HOW TO PLAY

1. Insert coin(s).
2. Game starts.



6 pedals around the platform are indicating the corresponding holes in the video.

Stomp on the corresponding pedal when a dinosaur appear to get points.



Player In position.

3. There are two stages and one BONUS stage




4. Different props to create more fun during playing.



## 6. GAME OPTION/IO SETTING

### 6.1 Adjustment button instruction

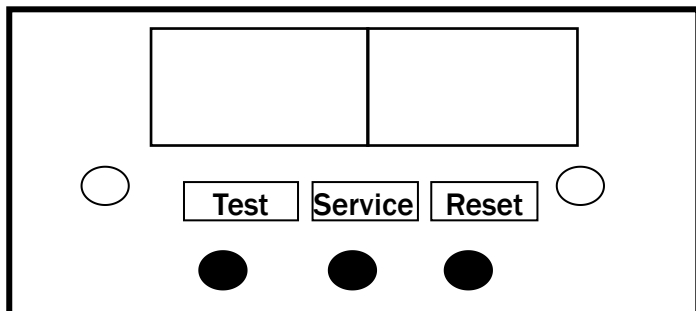

Open the coin door and there is a meter panel. Press Test button to get into the setting menu.

#### 6.1 Main Menu

| No | Item               |
|----|--------------------|
| 1  | Basic Setting      |
| 2  | Customized Setting |
| 3  | Input Test         |
| 4  | Output Test        |
| 5  | Game Reset         |
| 6  | Date/Time Setting  |
| 7  | Language/语言        |
| 8  | Bookkeeping        |
| 9  | Daily Record       |
| 10 | About This Game    |
| 11 | Back to Game       |

#### 6.2 Basic Setting

| No | Item           | remarks                       |
|----|----------------|-------------------------------|
| 1  | Free Play      | ON/OFF                        |
| 2  | Tickets Out    | ON/OFF                        |
| 3  | Demo music     | ON/OFF                        |
| 4  | Memory Save    | ON/OFF                        |
| 5  | Volume         | 1-10                          |
| 6  | Coins Per Game | 1-200                         |
| 7  | Out of Tickets | Attendant call / Memory votes |
| 8  | Back & Save    |                               |
| 9  | Back           |                               |

#### 6.3 Customized Setting

| No | Item                           | remarks                 |
|----|--------------------------------|-------------------------|
| 1  | Fixed Ticket                   | 0-50                    |
| 2  | Divided by 2                   | ON/OFF                  |
| 3  | Stage1_Time                    | 15_20_25_30_45_60_75_90 |
| 4  | Stage2_Time                    | 15_20_25_30_45_60_75_90 |
| 5  | Bonus_Stage_Time               | 15_20_25_30_45_60_75_90 |
| 6  | Stage1-Boss Life (by hit)      | 5_10_15_20_25_30_40_50  |
| 7  | Stage2-Boss Life (by hit)      | 5_10_15_20_25_30_40_50  |
| 8  | Bonus Stage-Boss Life (by hit) | 5_10_15_20_25_30_40_50  |
| 9  | Dino Pts (per hit)             | 1-300                   |
| 10 | Pts to Enter Bonus Stage       | ON/OFF                  |
| 11 | Boss Speed                     | fast _ medium _ slow    |
| 12 | Bomb (Pts Reduce)              | 1-200                   |
| 13 | Human (Pts Reduce)             | 1-200                   |
| 14 | Clock (Time Extend)            | 5-20                    |
| 15 | Golden Egg (Win Tickets)       | 5-50                    |
| 16 | Next Page                      |                         |
| 17 | Dino Bonus                     | 0-1000                  |
| 18 | 1-3000Points                   | 0-100                   |

| No | Item            | remarks |
|----|-----------------|---------|
| 19 | 3001-6000Points | 0-100   |
| 20 | 6001-8000Points | 0-100   |
| 21 | 8001+Points     | 0-100   |
| 22 | Prey Page       | 0-100   |
| 23 | Back & Save     |         |
| 24 | Back            |         |

**6.4 Input Test**

| No | Item    | remarks |
|----|---------|---------|
| 1  | Coin1   | ON/OFF  |
| 2  | Button1 | ON/OFF  |
| 3  | Button2 | ON/OFF  |
| 4  | Button3 | ON/OFF  |
| 5  | Button4 | ON/OFF  |
| 6  | Button5 | ON/OFF  |
| 7  | Button6 | ON/OFF  |
| 8  | Back    |         |

**6.5 Output Test**

| No | Item          |
|----|---------------|
| 1  | TicketDriver1 |
| 2  | ButtonLight1  |
| 3  | ButtonLight2  |
| 4  | ButtonLight3  |
| 5  | ButtonLight4  |
| 6  | ButtonLight5  |
| 7  | ButtonLight6  |
| 8  | Back          |

**6.6 Game Reset**

| No. | Item                     |
|-----|--------------------------|
| 1   | Factory restore          |
| 2   | Reset Game Mode Settings |
| 3   | Clear all records        |
| 4   | Clear unused coin        |
| 5   | Clear Owed Ticket        |
| 6   | Clear Unused Coin        |
| 7   | Back                     |

**6.7 Date/Time Setting**

| No | Item        |
|----|-------------|
| 1  | Year        |
| 2  | Month       |
| 3  | Day         |
| 4  | Hour(24)    |
| 5  | Minute      |
| 6  | Second      |
| 7  | Back & Save |
| 8  | Back        |

**6.8 Bookkeeping**

| Player                 | Coin | Tickets | Payout |
|------------------------|------|---------|--------|
| 1                      | 0    | 0       | 0      |
| Back                   |      |         |        |
| Non Resettable points  |      |         |        |
| Non resettable tickets |      |         |        |

**6.9 Daily Record**

| Date      | Weekday | RunTime | Coins | Tickets | Payout |
|-----------|---------|---------|-------|---------|--------|
| 2013-8-27 | SAT     | 00:10   | 0     | 0       | 0.00   |
| Clear     |         |         |       |         |        |
| Back      |         |         |       |         |        |



## 7. TROUBLE SHOOTINGS

### 7.1 Common Problem


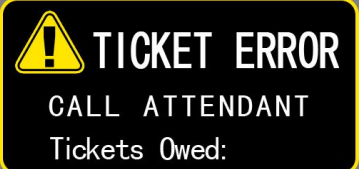
Please confirm whether every connector connected tightly.

| Symptom               | Possible Cause   | Recommended action  |
|-----------------------|--|---|
| Game will not start   | Frame assembly connector is loose.   | Plug the connector tightly.   |
|                       | Frame assembly fault   | Contact with UNIS Service.  |
| Power cutting         | Circuit protector make power SW in cutting state                           | Turn on power SW again. If appeared again and again, machine has anomaly. Please contact with UNIS Service. |
| Game will not coin up | Coin mech. fault or sample coin not installed.                             | Change coin mech. or sample coin.   |
|                       | Coin mech. signal cable loose.   | Check coin mech. signal cable loose.  |
|                       | IO control board no signal.  | Change IO board.  |
| No ticket dispensing  | Out of ticket.   | Add ticket and press reset button   |
|                       | Ticket jamming.  | Remove the jammed tickets and press reset button.   |
|                       | Wrong connection.  | Check the connections.  |
| No sound              | Volume set too low.  | Raise the volume.   |
|                       | Connector loose.   | Plug in connector tightly.  |
|                       | PCB fault.   | Change PCB.   |
|                       | Speaker fault.   | Change speaker.   |
|                       | POT installation error.  | Install POT correctly.  |
|                       | POT fault.   | Change POT.   |
|                       | Audio cable problem.   | Reconnect the audio cable or change it.   |
|                       | PC crash.  | Restart or system recovery.   |
| Display black screen  | Driver problem   | Restart the audio driver.   |
|                       | Check connectors.  | Plug in connector tightly   |
|                       | Display fault.   | Vitalize another source such as a PC to verify if the display is operational.                               |
| Display blue screen   | RAM is loose.  | Pull it out and insert it again or change main board or RAM.  |
|                       | PC power cord is loose   | Check PC power cord whether is loose.   |
|                       | VGA signal cable is loose.   | Check VGA cable   |
|                       | PC video card is loose.  | Reseat video card.  |
|                       | PC into protection   | Open front cover, if power on, light flash all the time. Press power button 30s, then restart.              |
|                       | “0X000000A” code appears.<br>Conflict between computer drive and software. | Uninstall or disable the new drivers or software.   |

| Symptom   | Possible Cause   | Recommended action   |
|---|--|--|
| Display blue screen when playing                            | Software problem.  | Update the driver of the video card or reinstall the system.   |
|   | Hardware problem.  | Check the hardware one by one.   |
| Playing normal, but appear system halted                    | Video card is loose or poor contact                                | Plug video card again.   |
|   | PC crash   | Restart or system recovery   |
| Display abnormal color                                      | Bad connection between the video card and the display video cable. | Reconnect the video card and the display video cable.  |
|   | Video card driver problem.   | Restart the video driver.  |
| Display can not show the whole desktop.                     | Screen resolution problem.   | For WIN 7, right-click in the blank space at the desktop<br>—Click “screen resolution”<br>—Click “change the appearance of the display” to adjust the screen resolution. |
| Bouncing motion of the display                              | Screen resolution problem.   | —Click “screen resolution”<br>—Click “change the appearance of the display” to adjust the screen refresh rate.   |
| No response in BIOS   | Battery is loose.  | Reinstall the battery of the main board and restart the game or change the main board.   |
|   | Main board fault.  |  |
| Fail to save the BIOS setting                               | Battery fault.   | Change the battery of the main board.  |
| PC restart or crash repeatedly                              | Poor heat dissipation  | Add silicon on the cooling fin.  |
|   |  | Check or change the CPU fan if needed.   |
|   | RAM or main board fault.   | Change the RAM or change the main board.   |
|   | Power source problem.  | Change the power source.   |
| Fail to install the driver                                  | Driver fault.  | Download “Driver Genius” or something similar and try again.   |
| CPU fan off and on.   | Main board fault.  | Change the main board.   |
| Slow computer start-up times after reinstalling the system. | Hard disk problem.   | Please let the PC automatically run the software, or change the hard disk.   |


**Note:** After replacing component from pc (except for RAM), and replacing monitor, the game should be recovered again with the memory stick attached to the machine.

If you see following error signs showing on the display, please try the recommended action.

| Display   | Possible Cause  | Recommended action  |
|---|---|---|
|    | The connection part of the IO board and PC are loose. | Check and reconnect the loose ports of the PC or IO board.  |
|   | Cable quality problem                                 | Change the cable after checking the connection between IO board and PC.   |
|   | Cable is loose during transportation.                 | Check and reconnect the loose ports of the PC or IO board.  |
|   | IO board broken.                                      | Reboot the game after checking connection and cable problem, if the problem remains unresolved, please call after sale department for help. |
|  | Out of ticket.  | Refill ticket   |
|   | Loose connection of the ticket dispenser's cables.    | Check and reconnect the loose ports of ticket dispenser.  |
|   | Ticket dispenser broken.                              | Change the ticket dispenser.  |
|   | Tickets jam.  | Clean up the blocked tickets.   |

## 7.2 System Recovery Operation **(NOTE: Do not disconnect power during this process.)**

1. Turn off the game. Remove recovery stick from the machine. (Note: This process may take up to 60 minutes) Insert the recovery stick into the port at the back of the computer.
2. Restart PC to enter the system recovery screen as shown.

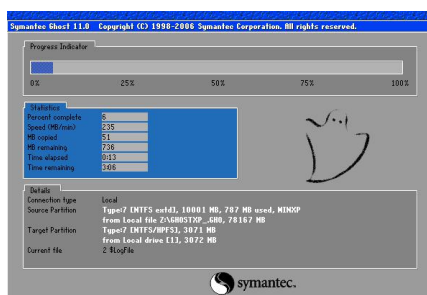

3. The game will automatically start recovery.
4. Once system recovery is partially finished (as shown below), and the ICON appears, remove the recovery stick from the computer. The game will continue the install process.

OK to remove the recovery stick.



5. Assure that the recovery stick has been properly secured for future use.



**WARNING:** The recovery stick should only be used to fix software errors. Using it for other purposes may cause unexpected results and damages.

## 8. MAINTENANCE & INSPECTION

### 8.1 Safety Check

Check the points listed before operating the machine. These checks are necessary for safe machine operation:

1. Test game before operation each day.
2. Conduct monthly routine checks of game components ensure good working condition
3. Check the machine regularly for dust and clean when necessary.

**Note:** Parts and components require preventative maintenance to maintain proper operation.

### 8.2 Handling Precautions

When installing or inspecting the machine, be very careful of the following points and pay attention to ensure that the player can enjoy the game safely.

Non-compliance with the following points or inappropriate handling running counter to the cautionary matters herein stated can cause personal injury or damage to the machine



#### NOTICE

We do not recommend using power tools as they may cause damage.




#### WARNING

- Before servicing the machine, be sure to turn power off. Servicing without turning the power off can cause electric shock or short circuit.
- To avoid electric shock or short circuit, do not plug then unplug the power quickly
- Do not expose power cords and earth wires, these are susceptible to damage.
- Damaged cords and wires can cause electric shock or short circuit and should be replaced immediately.
- When or after installing the product, avoid pulling the power cord to prevent unnecessary wear and tear. Use the power button to disconnect power.
- In case the power cord is damaged, ask for replacement through where the product was purchased from or replace locally. Continued usage of damaged cord can cause fire, electric shock or leakage.
- Perform grounding appropriately. Inappropriate grounding can cause electric shock.
- Use fuses that meet specified rating. Fuses exceeding can cause an electric shock.
- Should a problem occur, turn off the power immediately and stop operating the machine. Unplug the power cord of the service outlet. Operating the machine without correcting the problem may cause a fire or injuries.
- Insert the power plug securely into the outlet. Poor contact may cause overheating, resulting in fire or burns.
- To ensure the warning labels attached on the machine are visible and legible, install the machine in a well-lit location, and keep the labels clean at all times. Make sure the labels are not hidden behind other game machines.

## 9. OVERALL CONSTRUCTION


### 9.1 General Assembly

#### 9-1-1 General assembly drawing 1

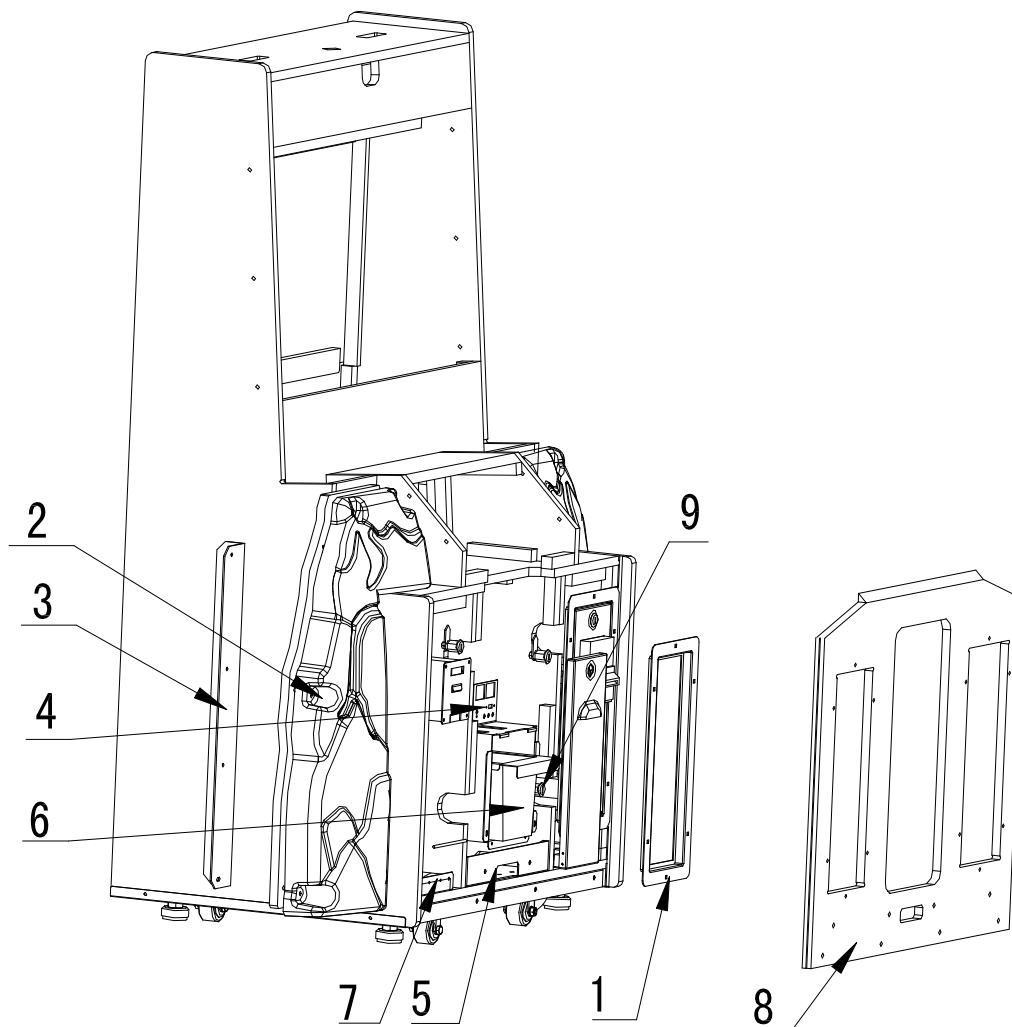


| No. | Part No.     | Code No.    | Name                     | Qty |
|-----|--------------|-------------|--------------------------|-----|
| 1   | S130-157-000 | 26000018000 | Ticket door              | 1   |
| 2   | S130-704-000 | 20541501004 | Left vacuum form         | 1   |
| 3   | S130-135-000 | 20241501020 | Side marquee fixed plate | 2   |
| 4   | S130-160-000 | 26000044000 | Counter bracket          | 1   |
| 5   | S130-110-000 | 20241501005 | Upper fixed plate        | 1   |
| 6   | S130-167-000 | 20241501039 | Coin box                 | 2   |
| 7   | S130-158-001 | 26000061000 | PC power fixed bracket   | 1   |
| 8   | S130-503-000 | 20341501008 | front panel              | 1   |
| 9   | S130-448-000 | 25300172001 | Lock                     | 1   |

## 9-1-2 General assembly drawing 2

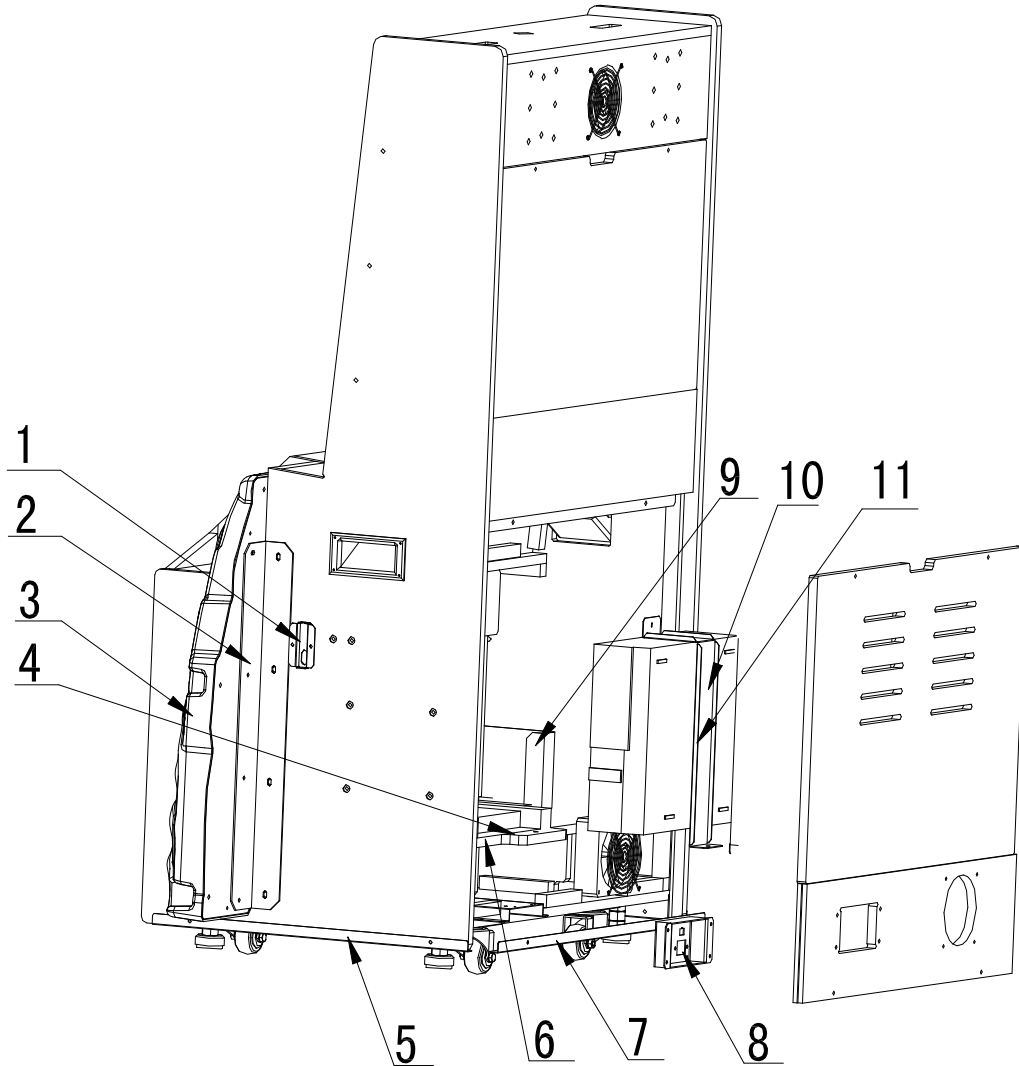

| No. | Part No.     | Code No.     | Name                     | Qty |
|-----|--------------|--------------|--------------------------|-----|
| 1   | S130-163-000 | 26000055000  | Dongle holder            | 1   |
| 2   | S130-135-000 | 20241501020  | Side marquee fixed plate | 2   |
| 3   | S130-703-000 | 20541501003  | Right vacuum form        | 1   |
| 4   | S130-106-000 | 20241501037  | Power supply plate       | 1   |
| 5   | S130-101-000 | 20241501002  | Side protected bar       | 2   |
| 6   | S130-105-000 | 20641501005  | PC anti-vibration foam   | 1   |
| 7   | S130-102-000 | 20241501003  | Back protected bar       | 1   |
| 8   | S130-159-001 | 26000042000B | Wire box                 | 1   |
| 9   | S130-154-000 | 26000006000  | Ticket bin               | 1   |
| 10  | S130-103-000 | 20241501036  | PC bracket               | 1   |
| 11  | S130-104-000 | 20641501001  | PC protected foam        | 1   |


**9-1-3 Monitor Assembly**

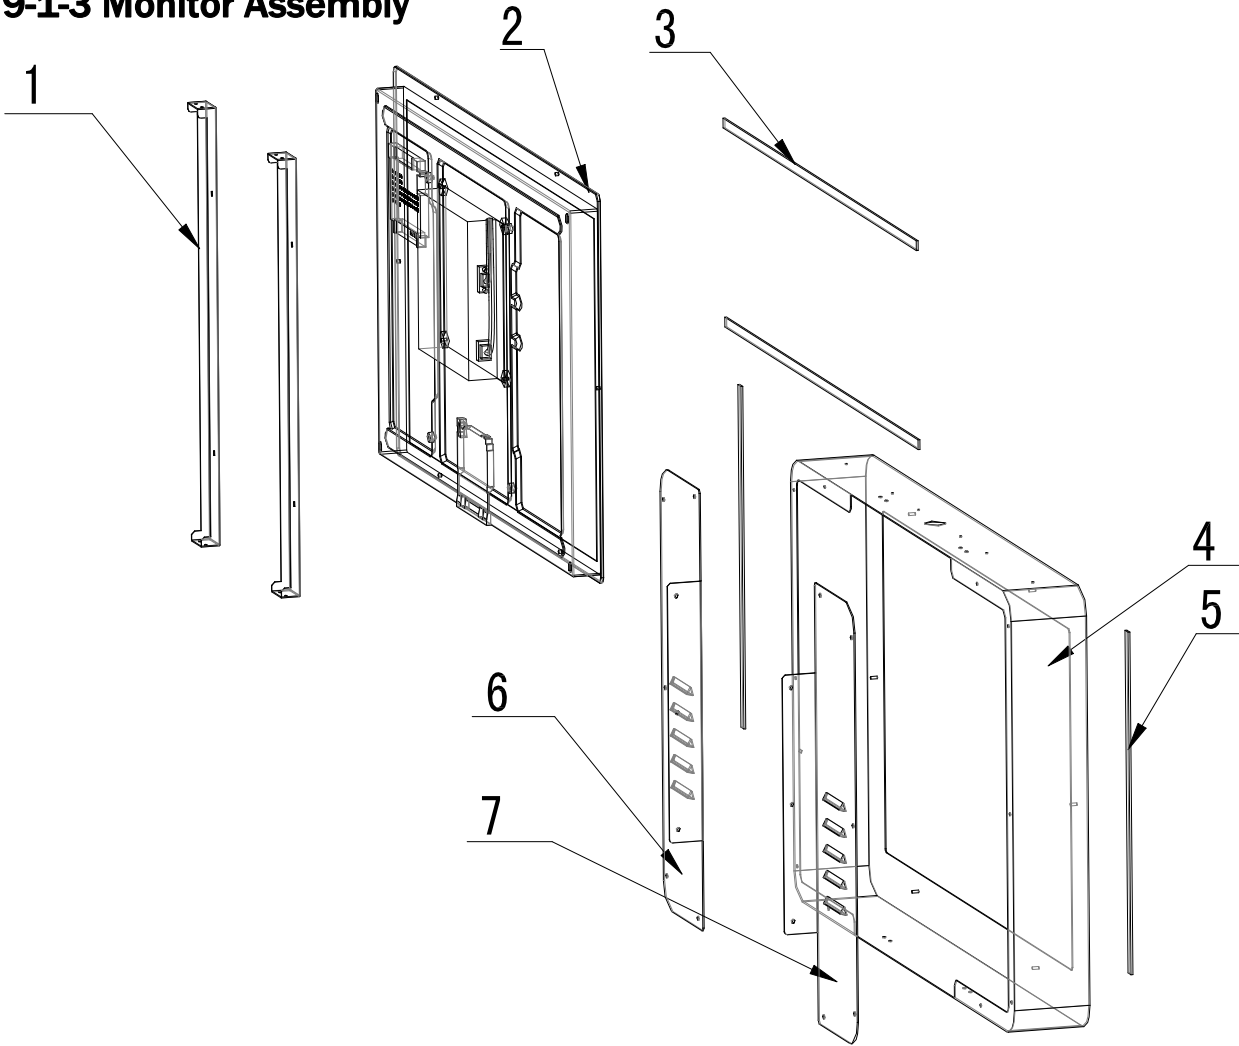

| No. | Part No.     | Code No.     | Name                       | Qty |
|-----|--------------|--------------|----------------------------|-----|
| 1   | S130-115-000 | 20241501007  | Monitor fixed plate        | 2   |
| 2   | S130-112-000 | 20641501015  | Monitor protected plastic  | 1   |
| 3   | S130-113-000 | 20641501003  | Monitor U&D protected foam | 2   |
| 4   | S130-168-000 | 20241501006A | Monitor frame              | 1   |
| 5   | S130-114-000 | 20641501004  | Monitor L&R protected foam | 2   |
| 6   | S130-116-000 | 20241501008  | Monitor R fixed plate      | 1   |
| 7   | S130-117-000 | 20241501009  | Monitor L fixed plate      | 1   |




## 9-1-4 BONUS Sign Assembly

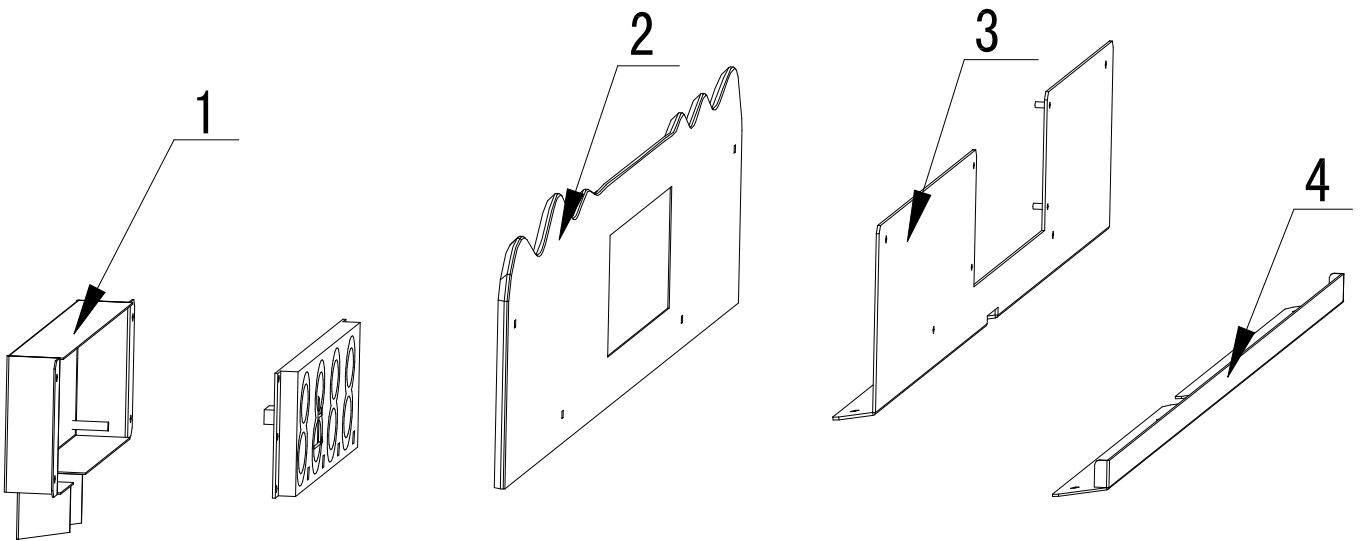


| No. | Part No.     | Code No.    | Name                         | Qty |
|-----|--------------|-------------|------------------------------|-----|
| 1   | S130-126-000 | 20241501014 | Display box                  | 1   |
| 2   | S130-701-000 | 20541501001 | BONUS plastic                | 1   |
| 3   | S130-125-000 | 20241501013 | GONUS sign back fixed plate  | 1   |
| 4   | S130-124-000 | 20241501012 | GONUS sign front fixed plate | 1   |

**9-1-5 Control Panel Assembly**

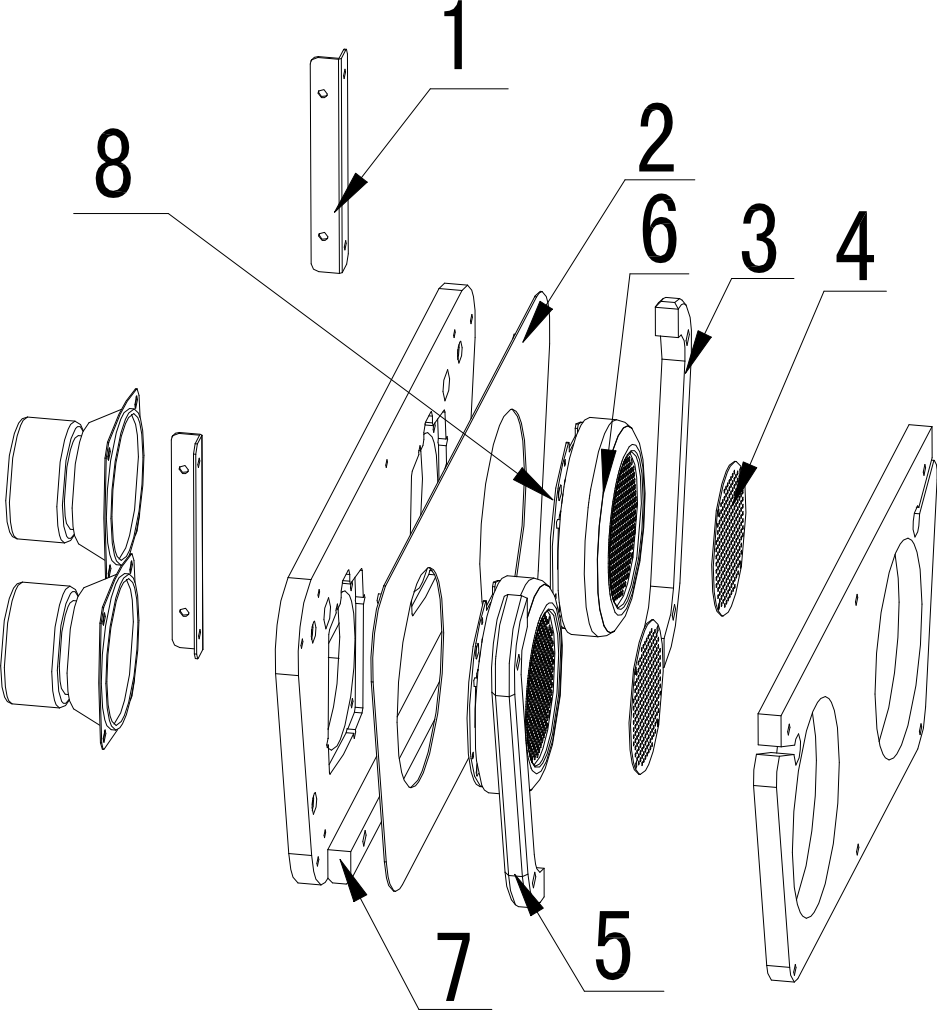


| No. | Part No.     | Code No.    | Name                           | Qty |
|-----|--------------|-------------|--------------------------------|-----|
| 1   | S130-122-000 | 20241501011 | Control panel fixed plate      | 2   |
| 2   | S130-118-000 | 20241501010 | Control panel                  | 1   |
| 3   | S130-121-000 | 20641501008 | Control panel R lighting plate | 1   |
| 4   | S130-123-000 | 20241501034 | Speaker grill                  | 2   |
| 5   | S130-120-000 | 20641501007 | Control panel L lighting plate | 1   |
| 6   | S130-165-000 | 26000057003 | Speaker light cover            | 2   |
| 7   | S130-119-000 | 20641501006 | Control panel lighting plate   | 1   |
| 8   | S130-164-000 | 26000057002 | Speaker light cover bracket    | 2   |

## 9-1-6 Marquee Assembly

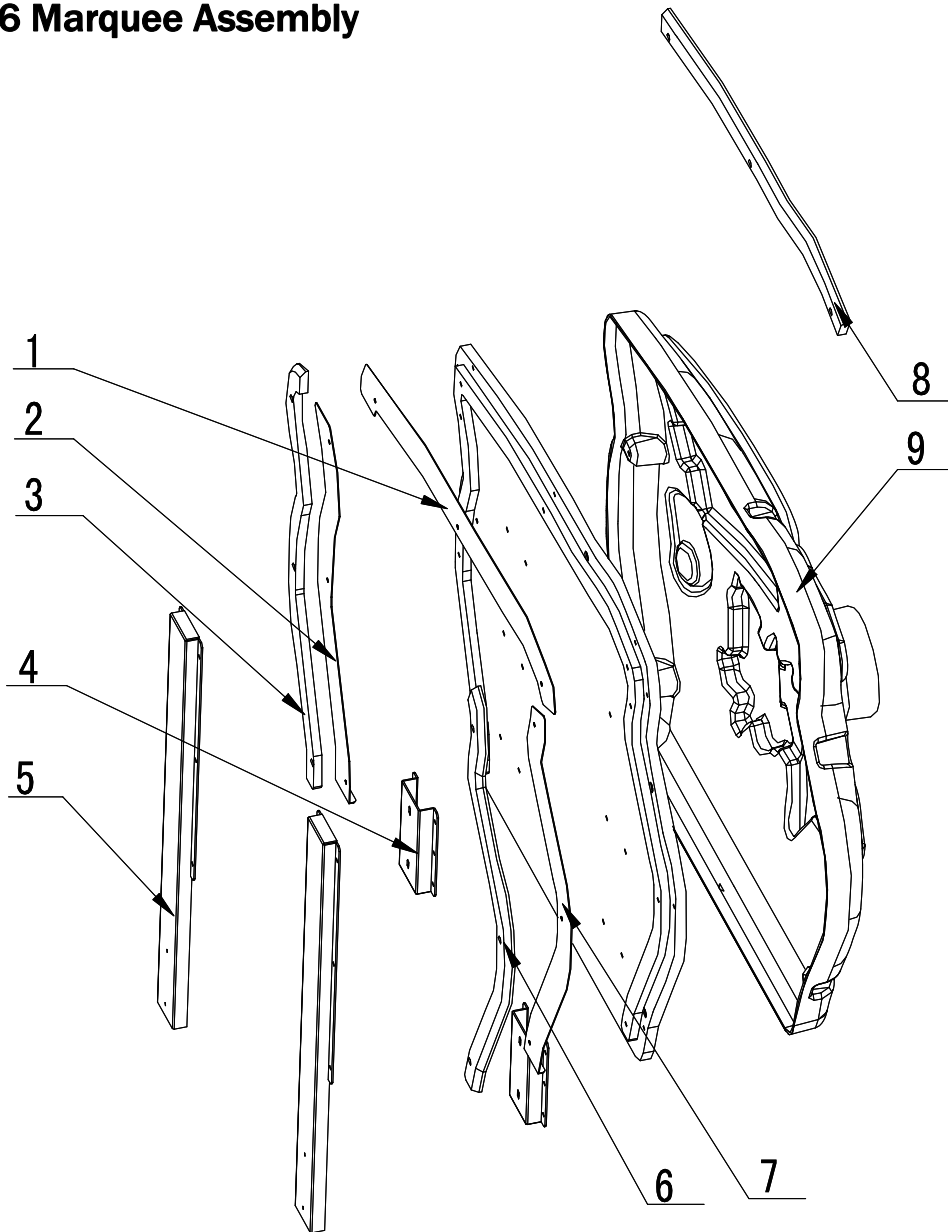


| No. | Part No.     | Code No.    | Name                         | Qty |
|-----|--------------|-------------|------------------------------|-----|
| 1   | S130-132-000 | 20241501017 | Marquee top plate            | 1   |
| 2   | S130-134-000 | 20241501019 | Marquee R plate              | 1   |
| 3   | S130-131-000 | 20641501011 | Marquee R lighting plate     | 1   |
| 4   | S130-128-000 | 20241501016 | Marquee fixed bracket        | 2   |
| 5   | S130-127-000 | 20241501015 | Marquee holding plate        | 2   |
| 6   | S130-130-000 | 20641501010 | Marquee L lighting plate     | 1   |
| 7   | S130-133-000 | 20241501018 | Marquee L plate              | 1   |
| 8   | S130-129-000 | 20641501009 | Marquee upper lighting plate | 1   |
| 9   | S130-702-000 | 20541501002 | Marquee vacuum form          | 1   |

## 9-1-7 Platform Assembly

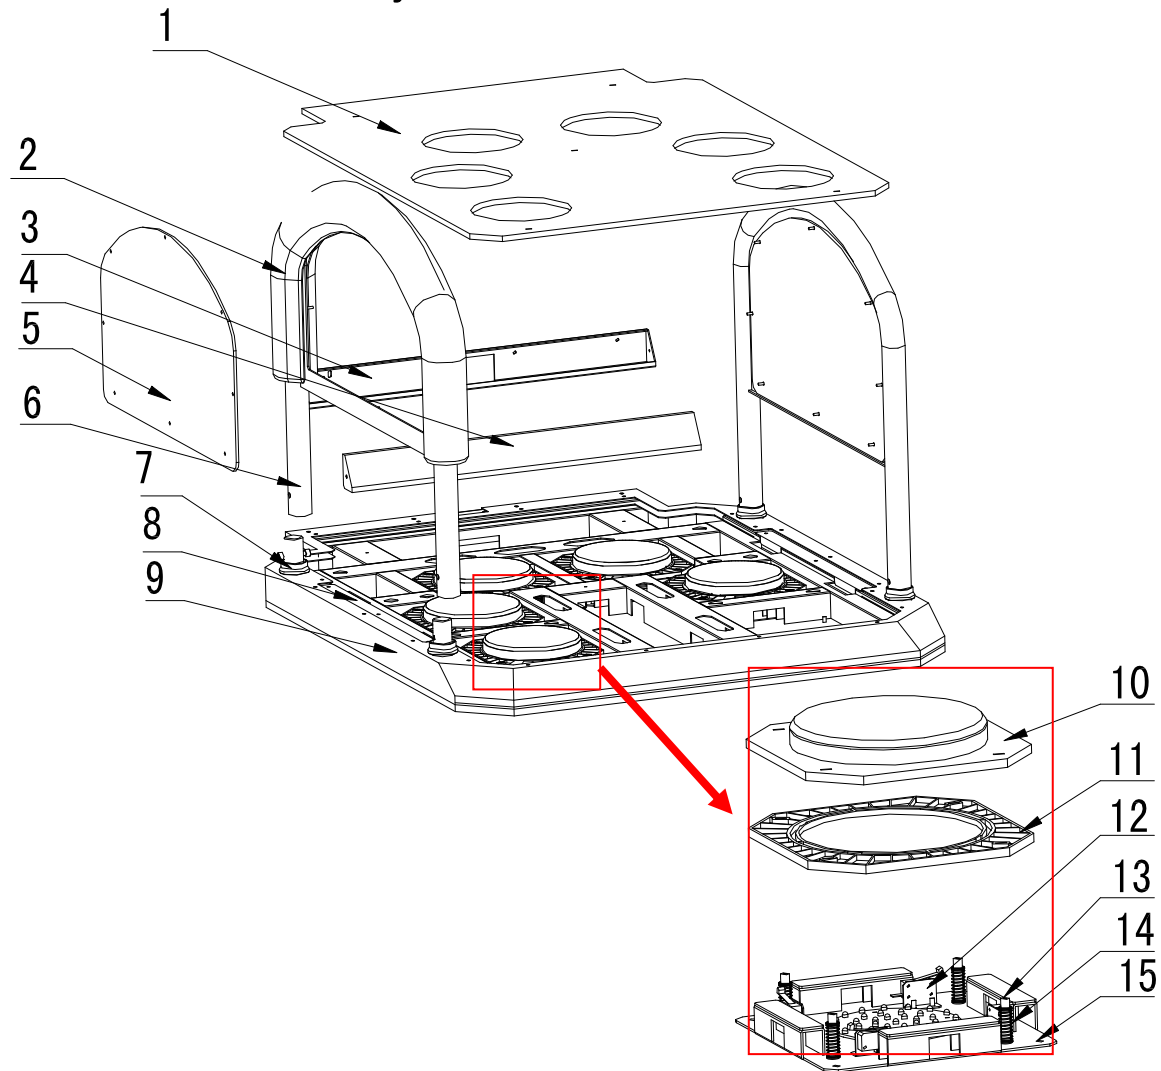


| No. | Part No.     | Code No.    | Name                           | Qty |
|-----|--------------|-------------|--------------------------------|-----|
| 1   | S130-705-000 | 20541501005 | Platform plastic               | 1   |
| 2   | S130-148-000 | 20241501026 | Handrail PU                    | 2   |
| 3   | S130-139-000 | 20241501024 | Platform connected cover plate | 1   |
| 4   | S130-138-000 | 20241501023 | Platform connected plate       | 1   |
| 5   | S130-710-000 | 20541501010 | Handrail decal                 | 4   |
| 6   | S130-149-000 | 20241501027 | Handrail                       | 2   |
| 7   | S130-151-000 | 20641501018 | Handrail cover                 | 4   |
| 8   | S130-137-000 | 20241501022 | Platform side baffle plate     | 2   |
| 9   | S130-136-000 | 20241501021 | Platform base                  | 1   |
| 10  | S130-147-000 | 20641501020 | Pedal plate                    | 6   |
| 11  | S130-146-000 | 20641501019 | Pedal base plate               | 6   |
| 12  | S130-142-000 | 20241501038 | Pedal SW base                  | 24  |
| 13  | S130-143-000 | 20641501012 | Pedal buffer plate             | 24  |
| 14  | S130-141-000 | 20241501001 | Pedal spring                   | 24  |
| 15  | S130-140-000 | 20241501025 | Pedal base                     | 6   |

## 9-1-8 DBV Door Assembly

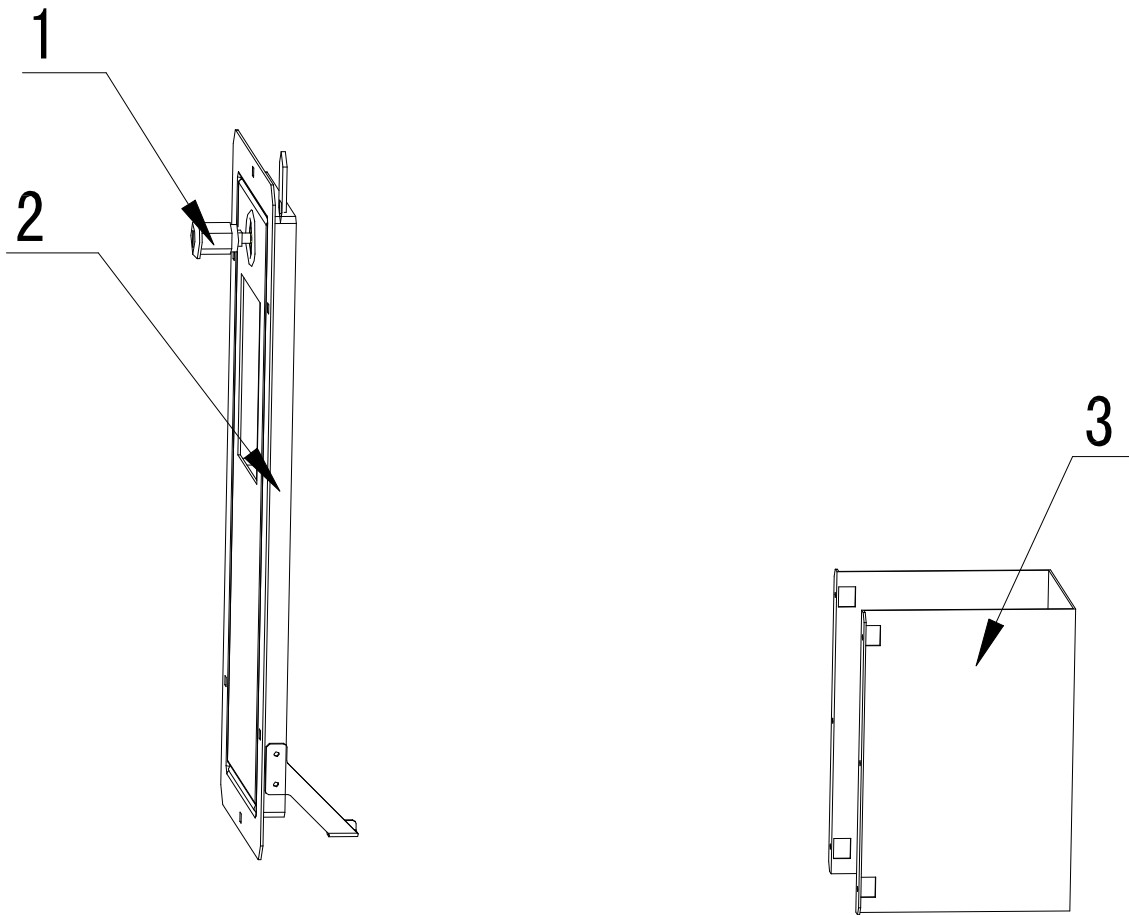





| No. | Part No.     | Code No.    | Name            | Qty |
|-----|--------------|-------------|-----------------|-----|
| 1   | S130-447-000 | 25300171001 | Lock            | 1   |
| 2   | S130-152-000 | 20241501028 | DBV door assy.  | 1   |
| 3   | S130-153-000 | 20241501033 | DBV guard plate | 1   |

### 9-1-9 Caster Assembly

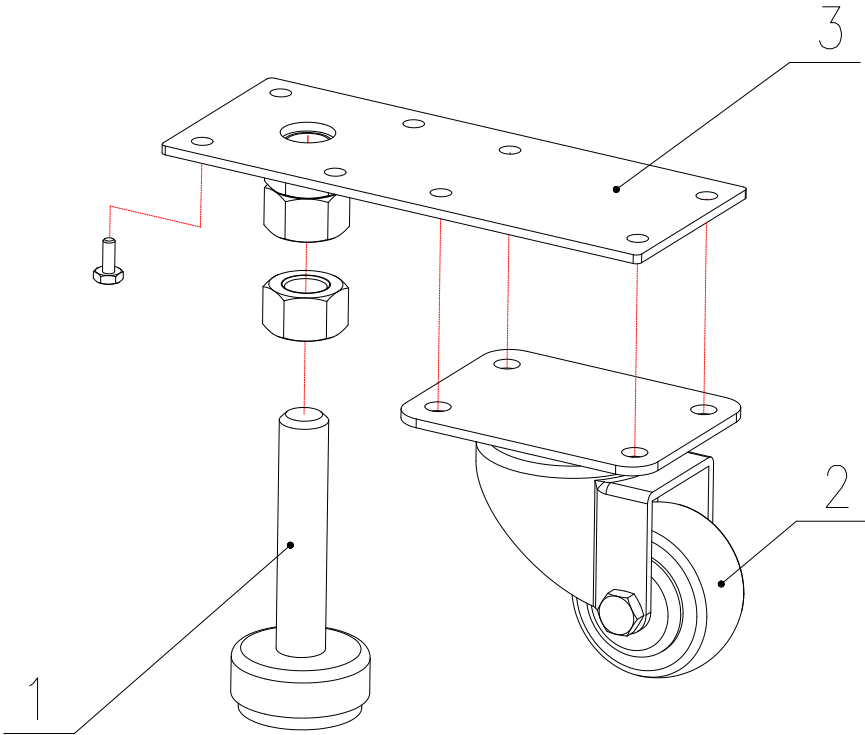



| No. | Part No.     | Code No.    | Name           | Qty |
|-----|--------------|-------------|----------------|-----|
| 1   | S130-155-000 | 26000008000 | Levellor       | 4   |
| 2   | S130-449-001 | 25501000047 | Caster         | 4   |
| 3   | S130-156-000 | 26000010000 | Caster bracket | 4   |

### 9.2 Mechanical Part

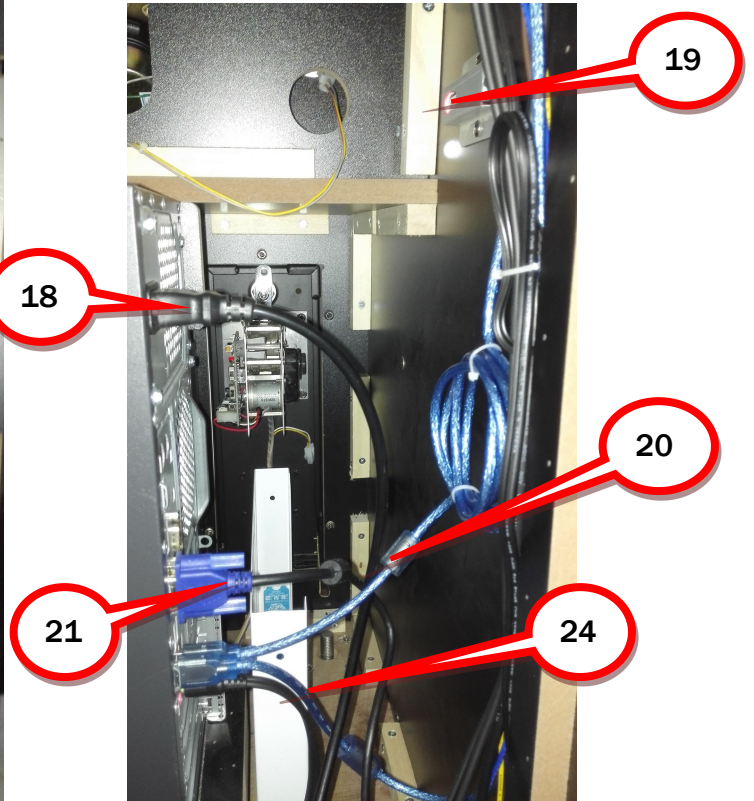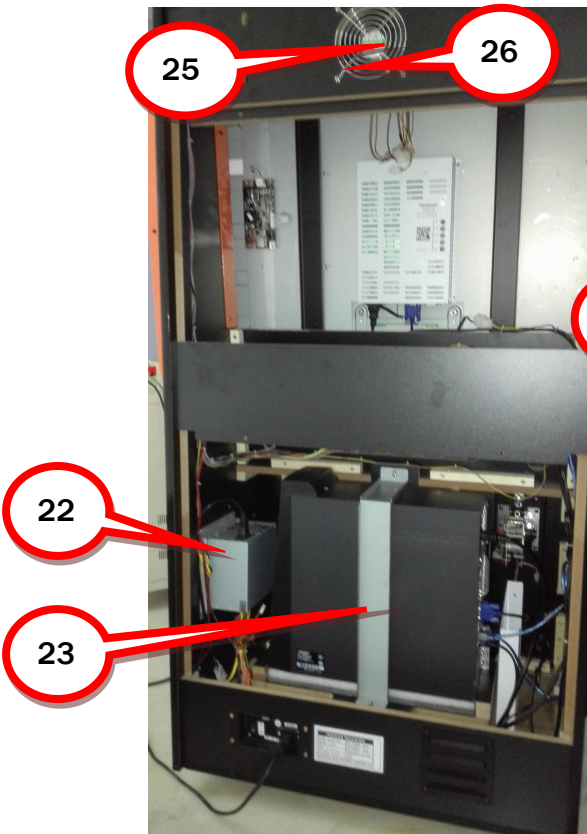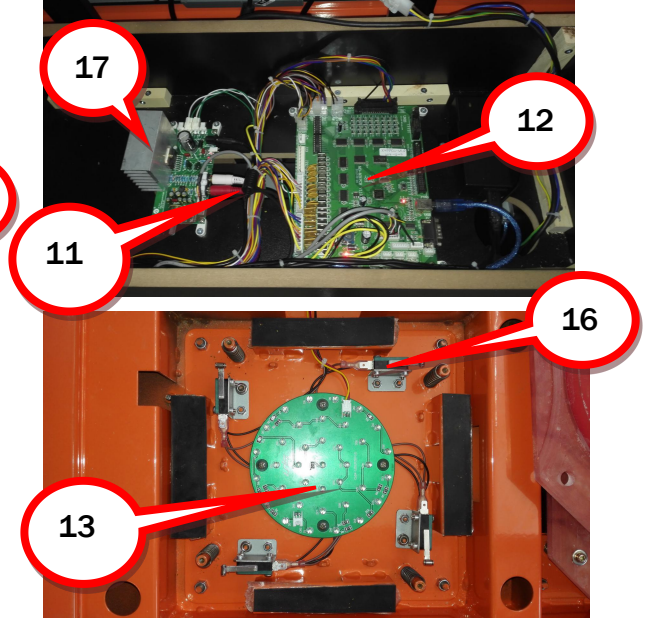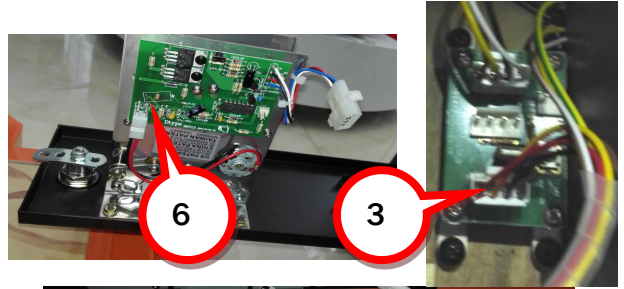

| <b>No.</b> | <b>Part No.</b> | <b>Code No.</b> | <b>Name</b>              | <b>Qty</b> |
|------------|-----------------|-----------------|--------------------------|------------|
| 1          | S130-464-002    | 21201043003     | 43"Display               | 1          |
| 2          | S130-404-001    | 22003080035     | 5630 light               | 1          |
| 3          | S130-409-000    | 21712000001     | Ticket converted board   | 0.75       |
| 4          | S130-432-001    | 22002016044     | B5050 light strip        | 2          |
| 5          | S130-438-000    | 21706000091     | BONUS display            | 1          |
| 6          | S130-410-000    | 23100000005     | Ticket dispenser         | 1          |
| 7          | S130-433-000    | 29731402001     | Speaker light            | 2          |
| 8          | S130-411-000    | 22003000075     | Red light with socket    | 1          |
| 9          | S130-429-000    | 22801000005     | Speaker                  | 2          |
| 10         | S130-465-000    | 22301000001     | Coin mech.               | 2          |
| 11         | S130-412-000    | 23305000003     | Audio cable              | 1          |
| 12         | S130-401-000    | 29791300001     | M3 main board            | 1          |
| 13         | S130-434-000    | 20710805002     | Pedal light              | 6          |
| 14         | S130-405-001    | 22003080026     | 5630 light               | 2          |
| 15         | S130-403-001    | 22003080031     | 5630 light               | 4          |
| 16         | S130-459-000    | 22604000045     | Micro SW                 | 24         |
| 17         | S130-417-000    | 22803000031     | AMP board                | 1          |
| 18         | S130-428-000    | 23301050002     | Power cord               | 1          |
| 19         | S130-413-000    | 21107020036     | Dongle                   | 1          |
| 20         | S130-431-001    | 23304010034     | Cable                    | 1          |
| 21         | S130-462-000    | 23307000021     | DP-DVI cable             | 1          |
| 22         | S130-402-000    | 21602000001     | Power supply             | 1          |
| 23         | S130-463-000    | 21102000048     | PC                       | 1          |
| 24         | S130-435-000    | 23304000021     | Data line                | 1          |
| 25         | S130-406-000    | 22702010025     | DC FAN                   | 1          |
| 26         | S130-418-000    | 22702000010     | Fan net                  | 2          |
| 27         | S130-439-000    | 22002016001     | LED light bar            | 2          |
| 28         | S130-437-001    | 22006012009     | B2835W light strip-white | 0.95       |



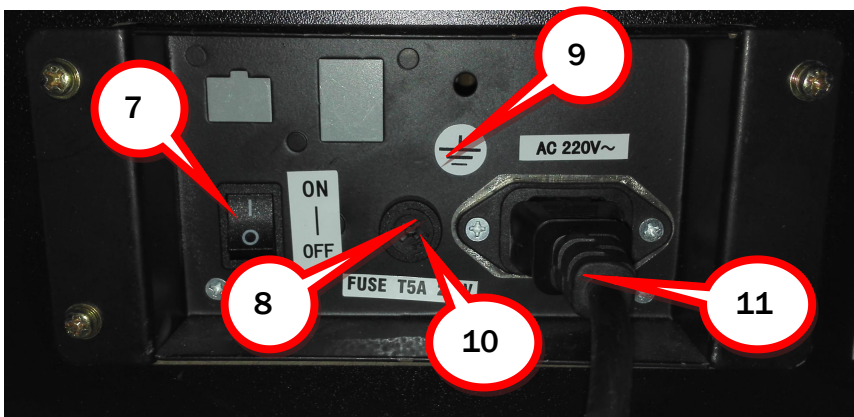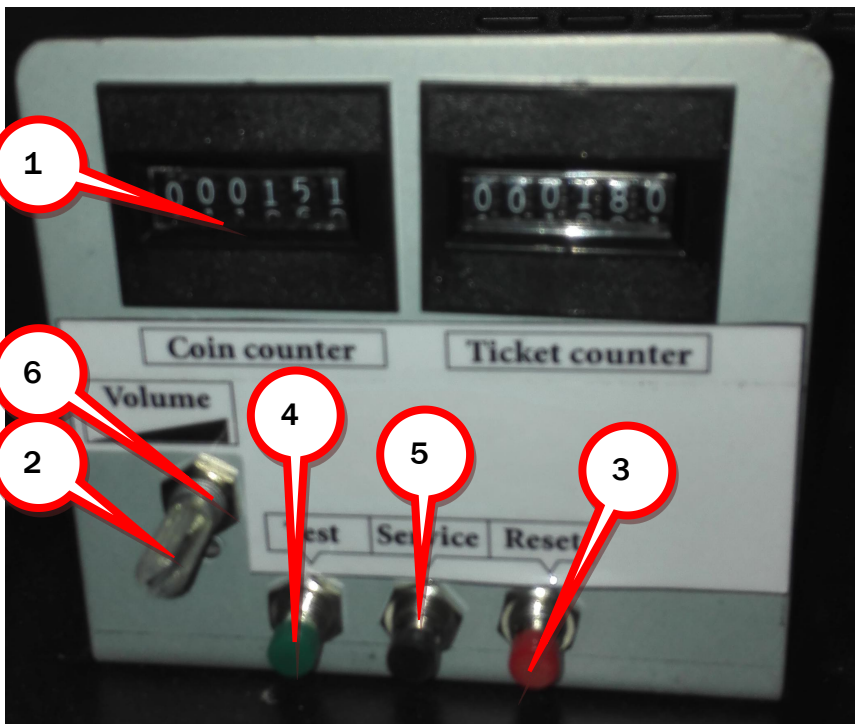


| No. | Part No.     | Code No.    | Name         | Qty |
|-----|--------------|-------------|--------------|-----|
| 1   | S130-422-000 | 23000000006 | Counter      | 2   |
| 2   | S130-427-000 | 22403000001 | POT knob     | 1   |
| 3   | S130-419-000 | 22402010002 | Red button   | 1   |
| 4   | S130-420-000 | 22402030002 | Green button | 1   |
| 5   | S130-421-000 | 22402050001 | Black button | 1   |
| 6   | S130-416-000 | 21709000002 | POT board    | 1   |
| 7   | S130-426-000 | 22601000005 | Rocker SW    | 1   |
| 8   | S130-425-000 | 21902000006 | Fuse socket  | 1   |
| 9   | S130-423-000 | 23201000001 | Filter       | 1   |
| 10  | S130-424-000 | 21901000012 | Fuse         | 1   |
| 11  | S130-460-000 | 23301050001 | Power cord   | 2   |

## 9.3 Decal Part




| No. | Part No.     | Code No.    | Name                           | Qty |
|-----|--------------|-------------|--------------------------------|-----|
| 1   | S130-702-000 | 20541501002 | Marquee vacuum form            | 1   |
| 2   | S130-714-000 | 20541501014 | Right decal                    | 1   |
| 3   | S130-715-000 | 20541501015 | Left decal                     | 1   |
| 4   | S130-721-000 | 25600000034 | Ticket label                   | 1   |
| 5   | S130-705-000 | 20541501005 | Platform plastic               | 1   |
| 6   | S130-707-000 | 20541501007 | Pedal plate                    | 6   |
| 7   | S130-733-000 | 20541501019 | UNIS logo label                | 2   |
| 8   | S130-708-000 | 20541501008 | Platform edge decal            | 1   |
| 9   | S130-709-000 | 20541501009 | Platform connected cover decal | 1   |
| 10  | S130-711-000 | 20541501011 | Control panel decal            | 1   |
| 11  | S130-703-000 | 20541501003 | Right vacuum form              | 1   |
| 12  | S130-704-000 | 20541501004 | Left vacuum form               | 1   |
| 13  | S130-712-000 | 20541501012 | Front door decal               | 1   |
| 14  | S130-713-000 | 20541501013 | Monitor frame decal            | 1   |
| 15  | S130-701-000 | 20541501001 | BONUS plastic                  | 1   |
| 16  | S130-710-000 | 20541501010 | Handrail decal                 | 4   |

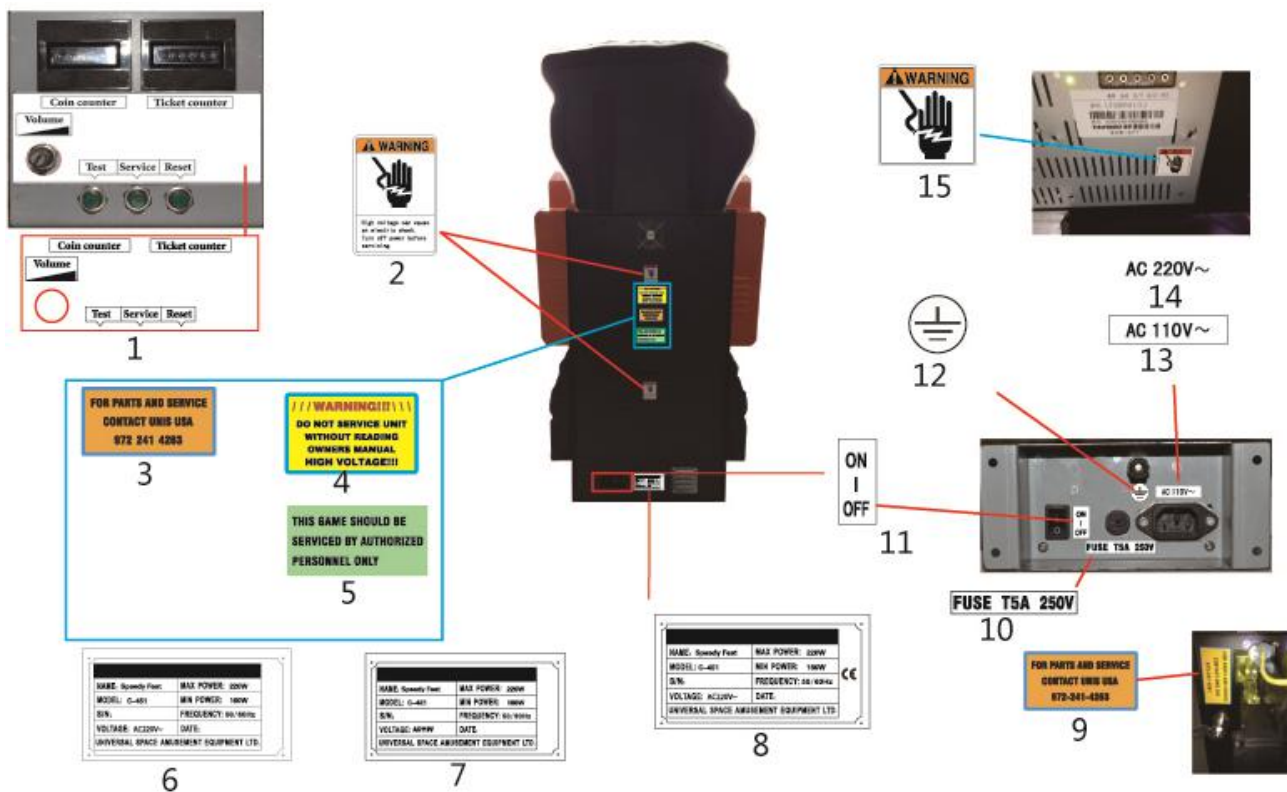

| No. | Part No.     | Code No.    | Name                            | Qty |
|-----|--------------|-------------|---------------------------------|-----|
| 1   | S130-719-000 | 25600000100 | Counter label                   | 1   |
| 2   | S130-723-000 | 25600000037 | Warning label-L                 | 2   |
| 3   | S130-730-000 | 25600000095 | Service label -S                | 1   |
| 4   | S130-725-000 | 25600000067 | Warning label                   | 1   |
| 5   | S130-724-000 | 25600000042 | Service label 1                 | 1   |
| 6   | S130-717-000 | 20541501017 | Uncertified 220V nameplate      | 1   |
| 7   | S130-716-000 | 20541501016 | Uncertified 110V nameplate      | 1   |
| 8   | S130-718-000 | 20541501018 | CE certification 220V nameplate | 1   |
| 9   | S130-731-000 | 25600000096 | Service label-L                 | 1   |
| 10  | S130-728-000 | 25600000074 | Fuse label                      | 1   |
| 11  | S130-720-000 | 25600000017 | Power SW label                  | 1   |
| 12  | S130-729-000 | 25600000091 | GND label                       | 1   |
| 13  | S130-726-000 | 25600000071 | AC 110V label                   | 1   |
| 14  | S130-727-000 | 25600000072 | AC 220V label                   | 1   |
| 15  | S130-722-000 | 25600000036 | Warning label- S                | 1   |

# 10. WIRING DIAGRAM

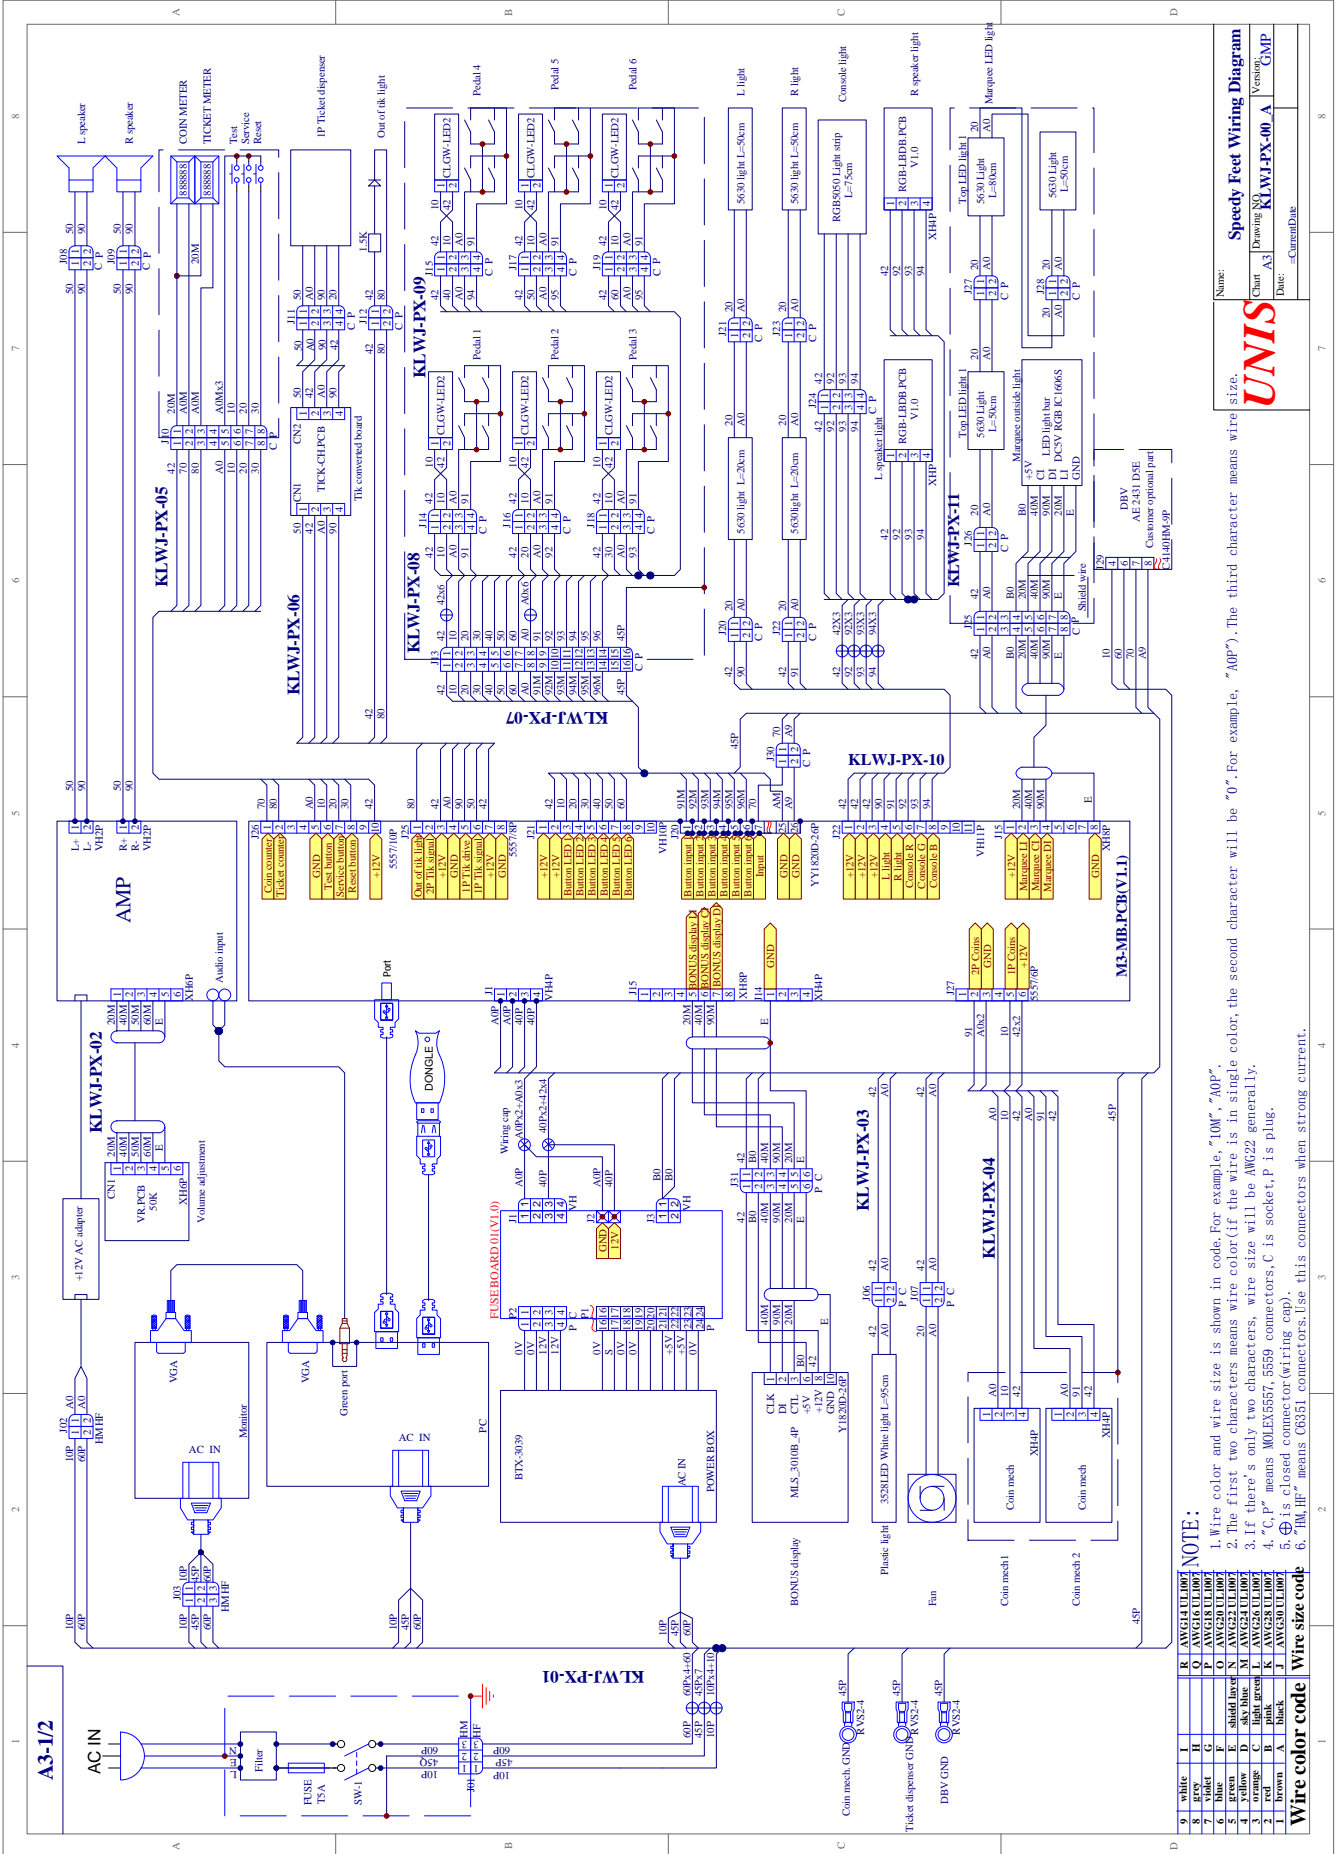

Name: \_\_\_\_\_  
 Chart: \_\_\_\_\_  
 Drawing NO: **KLWJ-PX-00-A**  
 Version: **GMP**  
 Date: \_\_\_\_\_  
 Current Date: \_\_\_\_\_



The third character means wire size.  
 For example, "A0P". The second character will be "0". For example, "A0P".

**NOTE:**  
 1. Wire color and wire size is shown in code. For example, "10W", "7A0P".  
 2. The first two characters means wire color (if the wire is in single color, the second character will be "0"). For example, "A0P".  
 3. If there's only two characters, wire size will be AWG22 generally.  
 4. "C,P" means MOLEX3557, 3559 connectors, C is socket, P is plug.  
 5. ⊕ is closed connector (wiring cap).  
 6. "fm, flm" means CR351 connectors. Use this connectors when strong current.

| Wire color code | Wire size code |
|-----------------|----------------|
| 0               | white          |
| 1               | black          |
| 2               | red            |
| 3               | orange         |
| 4               | yellow         |
| 5               | green          |
| 6               | blue           |
| 7               | violet         |
| 8               | grey           |
| 9               | h              |
| 0               | AWG14UL007     |
| 1               | AWG16UL007     |
| 2               | AWG18UL007     |
| 3               | AWG20UL007     |
| 4               | AWG22UL007     |
| 5               | AWG24UL007     |
| 6               | AWG26UL007     |
| 7               | AWG28UL007     |
| 8               | AWG30UL007     |
| 9               | AWG32UL007     |